



iVIZION™ Series

Next-Generation Banknote Acceptor Unit

Operation and Maintenance Manual

(Revision 7)



REVISION HISTORY		
Rev No.	Date	Reason for Update
A	1-06-11	Initial Version
1	3-1-11	Section 7 Parts List Number Changes incorporated.
2	7-11-11	Additional Section 7 Parts List Number Changes incorporated and LD Version information added.
3	1-25-12	Added Specifications, installation information and Graphics regarding the iVIZION LD Version Unit.
4	10-12-12	Minor changes & corrections made in Sections 2, 6, 7 & A.
5	6-17-14	Added SH Specification Cash Box information in Section 1, 4 and 7.
6	3-23-16	Added USB Cable Length limitation, Updated Parts Lists in Section 7.
7	Jun 8, 2017	Updated the Product Descriptions in Section 1, added RFID frequency and transmitted power in Section 2, updated Parts Lists in Section 7 and added Barcode Coupon Reject Error Code in Appendix A.
	Feb 10, 2020	Updated Parts Lists in Section 7
	Sep. 29, 2020	Re-designed the Cover. Corrected the standards of the country code in Section 1. Updated the contact information for Asia and Oceania In Section 1 and 3. Updated Parts Lists in Section 7
	Oct. 29, 2021	Added the UKCA mark to the International Compliance. Updated the technical contact information in Section 1 and Section 3. Updated Parts Lists in Section 7.








Copyright © 2021 By JAPAN CASH MACHINE CO., LTD.

This product document (hereinafter referred to as "Manual") is fully covered by legal Copyrights owned by the JAPAN CASH MACHINE CO., LTD. (hereinafter referred to as "JCM") under Japanese laws and foreign countries. This Manual contains many copyrighted, patented or properly registered equipment items manufactured by JCM, that are prohibited and illegal to duplicate, replicate, or copy in whole, or in part, without the express authorization by JCM with the following exceptions:

1. When an authorized JCM agency or distributor duplicates the Manual for sales promotion and/or service maintenance of the product, or technical service personnel education as required; and
2. When an end user duplicates the Manual to maintain operation of the product or operate the product in general.

JCM retains all rights to amend, alter, change or delete any portion of this Manual in whole, or in part, or add items thereto without notice regarding the product or its related products.
JCM is a registered trademark of JAPAN CASH MACHINE CO., LTD. All other product names mentioned herein may be registered trademarks or trademarks of their respective companies. Furthermore, ™, ® and © are not always mentioned in each case throughout this publication.

International Compliance

- RoHS Directive  or  or  or 
- UL & c-UL Marks  File No. E142330
- CE Mark 
- UKCA Mark 
- CB Scheme JP-21489-UL (IEC 62368-1), JP-20093-M1-UL (IEC 60590-1)
- FCC Directive

Contains Transmitter Module
FCC ID: VZQNRWA3

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

FCC CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Electrical Current Symbol

Direct Current:  indicates Direct Current values on product labels.

The JCM Website for patents is: <http://www.jcm-hq.co.jp/english/patents/>

THIS PAGE INTENTIONALLY LEFT BLANK

iVIZION™ Series

Next-Generation Banknote Acceptor Unit

Table of Contents

	Page
1 GENERAL INFORMATION	1-1
iVIZION Units	1-1
Product Descriptions	1-2
Model Descriptions	1-2
Type Descriptions	1-2
Software Descriptions	1-2
Precautions	1-2
User Cautions	1-2
Installation Cautions	1-2
Mounting, Dismounting & Transportation	1-3
Placing Foreign Objects into the Unit	1-3
Preventive Maintenance	1-3
Banknote Fitness Requirements	1-3
Reference Paper Use Precautions	1-4
Primary Features	1-4
Component Names	1-5
Specifications	1-6
iVIZION SS/SH Specification	1-6
Technical Specifications	1-6
Environmental Specifications	1-7
Electrical Specifications	1-7
Structural Specifications	1-7
RFID Specifications	1-7
iVIZION LD Specification	1-8
Technical Specifications	1-8
Environmental Specifications	1-8
Electrical Specifications	1-9
Structural Specifications	1-9
Unit Dimensions	1-10
iVIZION SS Unit Outside Dimensions	1-10
iVIZION SS Unit Installation/Maintenance Space Requirements	1-12
iVIZION SH Entire Unit Outside Dimensions	1-13
iVIZION SH Unit Installation/Maintenance Space Requirements	1-14
iVIZION Cash Box Outside Dimensions	1-15
Standard Cash Box Outside Dimensions	1-15
Large Cash Box Outside Dimensions	1-15
HC Cash Box Outside Dimensions	1-16
Technical Contact Information	1-17
Americas	1-17
JCM American	1-17
Europe, Middle East, Africa & Russia	1-17

Table of Contents

	Page
JCM Europe GmbH	1-17
UK & Ireland	1-17
JCM Europe (UK Office)	1-17
Asia and Oceania	1-17
JCM American (Australia Office)	1-17
JAPAN CASH MACHINE CO., LTD.(HQ)	1-17
2 INSTALLATION	2-1
Installation Procedure	2-1
Lock Installation	2-2
Unlock Procedure	2-2
DIP Switch Configurations	2-3
Primary LED Indications	2-3
Connector Pin Assignments	2-4
Connector Pin Assignments (Continued 1)	2-5
Connector Pin Assignments (Continued 2)	2-6
Connector Pin Assignments (Continued 3)	2-7
Connector Pin Assignments (Continued 4)	2-8
Connector Pin Assignments (Continued 5)	2-9
Preventive Maintenance	2-10
Retrieving Banknotes	2-10
Clearing a Banknote Jam	2-10
Cleaning Procedure	2-10
Sensor Cleaning Procedure	2-10
iVIZION Optional LD Version Unit Installation	2-11
iVIZION Sensor Locations	2-12
Standard Interface Circuit Schematics	2-13
Interface Circuit Schematics (Continued 1)	2-14
Interface Circuit Schematics (Continued 2)	2-15
Interface Circuit Schematics (Continued 3)	2-16
Operational Flowcharts	2-17
Operational Flowchart (Continued 1)	2-18
Operational Flowchart (Continued 2)	2-19
3 COMMUNICATIONS	3-1
Americas	3-1
JCM American	3-1
Europe, Middle East, Africa & Russia	3-1
JCM Europe GmbH	3-1
UK & Ireland	3-1
JCM Europe (UK Office)	3-1
Asia and Oceania	3-1
JCM American (Australia Office)	3-1
JAPAN CASH MACHINE CO., LTD.(HQ)	3-1
4 DISASSEMBLY/REASSEMBLY	4-1

Table of Contents

	Page
Tool Requirements	4-1
Pusher Unit Timing Belt Removal	4-1
iVIZION Standard and Large Cash Box	4-1
iVIZION HC Cash Box	4-3
Home Position Sensor Board/Home Position Sensor, FFC & Interface Connector Board Removals	4-5
RFID Module & Harness Removals	4-6
Validation CPU & Controller CPU Board Removals	4-6
USB FPC, Power FPC & Interface FPC Cable Removals	4-7
Validation Unit Harness Removal	4-8
Interrupter Board Removal	4-8
Motor Unit Timing Belt Removal	4-8
Stacker Motor & Transport Motor Removals	4-9
Bezel Hold Clips A & B Removal	4-9
Sensor Transfer Board/CIS FFC/Transmissive Light FFC & Upper UV FPC Sensor Removals	4-9
Validation Sensor Board Assembly Removal	4-10
Validation Sensor FPC Cable Removal	4-10
CIS/Transmissive Light & Upper UV Sensor Removals	4-11
CIS/CIS FPC/Lower UV Sensor & Lower UV FFC Removal	4-12
Validation Unit Timing Belt Removal	4-14
Reassembly Cautions	4-14
5 WIRING DIAGRAMS	5-1
iVIZION System Wiring Diagram	5-1
6 CALIBRATION AND TESTING	6-1
Tool Requirements	6-1
Installation Procedures	6-1
Application Software Installation	6-1
Driver Installation Procedure	6-2
JCM Tool Suite Standard Edition Mode	6-3
Download Procedures	6-3
Download the Upgrade Program	6-3
Downloading the Program First Time	6-4
Calibration	6-6
When to Calibrate	6-6
Calibration Order	6-6
Calibration Tool Requirements	6-6
Reference Paper Placement	6-6
Placing the KS-072/KS-089 Reference Paper	6-6
Calibration Procedure	6-7
Calibration Only	6-7
Calibration Plus Serial Number Writing	6-10
Performance Tests	6-11
Performance Test Items using a PC	6-11

Table of Contents

	Page
PC Performance Test Preparation	6-11
Performance Test Procedures	6-12
Any Motor Test	6-12
LED Indicator Test	6-13
Sensor ON/OFF Test	6-13
Banknote Acceptance Test	6-14
ICB Function Setting (Barcode Coupon)	6-14
DIP Switch ON/OFF Test	6-15
iVIZION Utility Tools	6-16
ICB/Image Setting Tool Requirements	6-16
ICB/Image Setting Change Preparation	6-16
CIS Image Tool	6-16
ICB Function Setting	6-16
Setting ICB Enable/Disable Functions	6-17
Disabling the ICB Function	6-17
ICB Current Status Screen Button	6-18
Setting the Machine Code Number (M/C #)	6-18
Setting Inhibit ICB System	6-18
ICB Function Operational Condition	6-19
7 EXPLODED VIEWS & PARTS LISTS	7-1
iVIZION Entire Unit View	7-1
iVIZION Entire Unit Parts List	7-2
iVIZION Acceptor Unit Exploded View	7-3
iVIZION Acceptor Unit 1 Exploded View	7-3
iVIZION Acceptor Unit 1 Parts List	7-4
iVIZION Acceptor Unit 2 Exploded View	7-5
iVIZION Acceptor Unit 2 Parts List	7-6
iVIZION Acceptor Unit 3 Exploded View	7-7
iVIZION Acceptor Unit 3 Parts List	7-8
iVIZION Transport Unit Exploded View	7-9
iVIZION Transport Unit 1 Exploded View	7-9
iVIZION Transport Unit 1 Parts List	7-10
iVIZION Transport Unit 2 Exploded View	7-11
iVIZION Transport Unit 2 Parts List	7-12
iVIZION Transport Unit 3 Exploded View	7-13
iVIZION Transport Unit 3 Parts List	7-14
iVIZION Transport Unit 4 Exploded View	7-15
iVIZION Transport Unit 4 Parts List	7-16
iVIZION Transport Unit 5 Exploded View	7-17
iVIZION Transport Unit 5 Parts List	7-18
iVIZION Transport Unit 6 Exploded View	7-19
iVIZION Transport Unit 6 Parts List	7-20
iVIZION SS Version Frame Unit Exploded View	7-21
iVIZION SS Version Frame Unit Parts List	7-22

Table of Contents

	Page
iVIZION Cash Box Unit Exploded View	7-23
iVIZION Cash Box Unit 1 Exploded View	7-23
iVIZION Cash Box Unit 1 Parts List	7-24
iVIZION Cash Box Unit 2 Exploded View	7-25
iVIZION Cash Box Unit 2 Parts List	7-26
iVIZION Cash Box Unit 3 Exploded View	7-27
iVIZION Cash Box Unit 3 Parts List	7-28
iVIZION Frame Exploded View	7-29
iVIZION LD Frame Exploded View	7-29
iVIZION LD Frame Parts List	7-30
iVIZION HC Frame Exploded View	7-31
iVIZION HC Frame Parts List	7-32
iVIZION HC Cash Box Exploded View	7-33
iVIZION HC Box Assembly Exploded View	7-33
iVIZION HC Box Assembly Parts List	7-33
iVIZION HC Box Unit Exploded View	7-34
iVIZION HC Box Unit Parts List	7-35
iVIZION HC Upper Part Exploded View	7-36
iVIZION HC Upper Part Parts List	7-36
iVIZION HC Receive Plate Assembly Exploded View	7-37
iVIZION HC Receive Plate Assembly Parts List	7-37
iVIZION HC Receive Spring Base Assembly Exploded View	7-38
iVIZION HC Receive Spring Base Assembly Parts List	7-39
iVIZION HC Front Plate Assembly Exploded View	7-40
iVIZION HC Front Plate Assembly Parts List	7-40
iVIZION HC Pusher Unit Exploded View	7-41
iVIZION HC Pusher Unit Parts List	7-42
iVIZION HC Pusher Assembly 1 Exploded View	7-43
iVIZION HC Pusher Assembly 1 Parts List	7-44
iVIZION HC Pusher Assembly 2 Exploded View	7-45
iVIZION HC Pusher Assembly 2 Parts List	7-46
iVIZION Optional Components Exploded View	7-47
Bezel/Harness Exploded Views	7-47
iVIZION Optional Components - Bezel/Harness Parts List	7-47
Wave Rubber Exploded Views	7-48
iVIZION Optional Components - Wave Rubber Parts List	7-48
Sorting Pusher Unit Exploded Views	7-49
iVIZION Optional Components - Sorting Pusher Unit Parts List	7-49
8 INDEX	8-1
A TROUBLESHOOTING	A-1
Introduction	A-1
Troubleshooting Overview	A-1
Malfunction LED Error Codes	A-1

Table of Contents

	Page
LED Indication Conditions	A-1
Error, Jam and Reject Code Tables	A-2
LED Error Codes	A-2
Jam Error Codes	A-4
Banknote Reject Error Code	A-5
Barcode Coupon Reject Error Code	A-6
Calibration Error Code	A-7
Maintenance Equipment	A-8
iVIZION Maintenance Equipment	A-8
Reference Paper Handling	A-8
B GLOSSARY	B-1

iVIZION™ Series

Next-Generation Banknote Acceptor Unit

List of Figures

		Page
Figure 1-1	iVIZION Units	1-1
Figure 1-2	Precautionary Symbols	1-2
Figure 1-3	Unacceptable Banknotes	1-3
Figure 1-4	Reference Paper Handling Precautions	1-4
Figure 1-5	iVIZION Component Names	1-5
Figure 1-6	iVIZION SS with Standard Cash Box Outside Dimensions	1-10
Figure 1-7	iVIZION SS Unit with Standard Cash Box/Plastic Bezel Outside Dimensions	1-10
Figure 1-8	iVIZION SS Unit with Standard Cash Box/Metal Bezel Outside Dimensions	1-11
Figure 1-9	iVIZION SS Unit with Large Cash Box Outside Dimensions	1-11
Figure 1-10	iVIZION SS Unit Installation/Maintenance Space Requirements Diagram	1-12
Figure 1-11	iVIZION LD Unit Outside Dimensions	1-12
Figure 1-12	iVIZION SH Unit Outside Dimensions	1-13
Figure 1-13	iVIZION SH Unit Installation and Maintenance Space Requirements Diagram	1-14
Figure 1-14	iVIZION Standard Cash Box Dimensions	1-15
Figure 1-15	iVIZION Large Cash Box Dimensions	1-15
Figure 1-16	iVIZION HC Cash Box Dimensions	1-16
Figure 2-1	Interface Harness Installation Location	2-1
Figure 2-2	M4 Screws Locations (Left/Right Side)	2-1
Figure 2-3	Flat Head Screws Locations (Rear Side)	2-1
Figure 2-4	Lock Size	2-2
Figure 2-5	Unlock Rotation Direction	2-2
Figure 2-6	Key Cap Installation	2-2
Figure 2-7	Retrieving Banknote	2-10
Figure 2-8	Open the Upper Guides	2-10
Figure 2-9	Retrieving Cash Box Banknote Jam	2-10
Figure 2-10	Interface Harness Installation Location	2-11
Figure 2-11	M3 Screws Locations	2-11
Figure 2-12	iVIZION Sensor Cleaning Locations	2-12
Figure 2-13	iVIZION USB Circuit Interface Schematic Diagram	2-13
Figure 2-14	iVIZION Photo-Coupler Circuit Interface Schematic Diagram	2-13
Figure 2-15	iVIZION RS232C Circuit Interface Schematic Diagram	2-14
Figure 2-16	iVIZION ccTalk Circuit Interface Schematic Diagram	2-14
Figure 2-17	iVIZION TTL Circuit Interface Schematic Diagram	2-15
Figure 2-18	iVIZION LED Circuit Interface Schematic Diagram	2-16
Figure 2-19	iVIZION SS/LD Banknote Acceptor Operational Flowchart (Initializing)	2-17
Figure 2-20	iVIZION SS Banknote Acceptor Operational Flowchart (Part 1 - Validating)	2-18
Figure 2-21	iVIZION LD Banknote Acceptor Operational Flowchart (Part 2 - Validating)	2-19
Figure 4-1	Pusher Mechanism Screws Removal	4-1
Figure 4-2	Pusher Mechanism Removal	4-1
Figure 4-3	Pusher Mechanism Cover Removal	4-2
Figure 4-4	Stacker Guide Removal	4-2
Figure 4-5	Stacker Guide Reassembly	4-2
Figure 4-6	Right Frame Outer "R" Removal	4-2
Figure 4-7	Left Frame Outer "L" Removal	4-3
Figure 4-8	Timing Belt Removal	4-3
Figure 4-9	Pusher Mechanism Removal	4-3

List of Figures

	Page
Figure 4-10	HC Box Stacker Base Removal 4-3
Figure 4-11	Pusher Guide Removal 4-4
Figure 4-12	Stacker Guide Removal 4-4
Figure 4-13	Stacker Guide Reassembly 4-4
Figure 4-14	Outer Guide R Removal 1 4-4
Figure 4-15	Outer Guide R Removal 2 4-4
Figure 4-16	Outer Guide L Removal 1 4-5
Figure 4-17	Outer Guide L Removal 2 4-5
Figure 4-18	Timing Belt Removal 4-5
Figure 4-19	TR Bottom Cover Removal 4-5
Figure 4-20	TR Side Cover “A” Removal 4-5
Figure 4-21	Home Position Sensor Board, Home Position Sensor FFC Assembly and Interface Connector Board Removals 4-6
Figure 4-22	RFID Module & Harness Removal 4-6
Figure 4-23	CPU Board Module Removal 4-6
Figure 4-24	Extension Memory Board Removal 4-6
Figure 4-25	Validation CPU Board and Control CPU Board Removal 4-7
Figure 4-26	Motor Module Removal 4-7
Figure 4-27	USB FPC, Power FPC & Interface FPC Cable Removal 4-7
Figure 4-28	Validation Unit Harness Removal 4-8
Figure 4-29	Interrupter Board Removal 4-8
Figure 4-30	Timing Belt Removal 4-8
Figure 4-31	Timing Belt Reassembly Path 4-8
Figure 4-32	Stacker & Transport Motor Removal 4-9
Figure 4-33	Bezel Hold Chips A&B Removal 4-9
Figure 4-34	Upper Cover Removal 4-9
Figure 4-35	Sensor Transfer Board Assembly, CIS FFC, Transmissive Light & Upper UV FPC Cable Removal 4-9
Figure 4-36	iVIZION Head Cover A Removal 4-10
Figure 4-37	Validation Sensor Board Assembly Removal 4-10
Figure 4-38	Validation Sensor FPC Removal 4-10
Figure 4-39	Validation Sensor FPC Reassembly 4-10
Figure 4-40	Upper Validation Part Removal 4-11
Figure 4-41	iVIZION Head BG85B Removal 4-11
Figure 4-42	CIS, Transmissive Light & Upper UV Sensor Removal 4-12
Figure 4-43	iVIZION BG 85A HEAD Removal 4-12
Figure 4-44	Lower Validation Part Removal 4-13
Figure 4-45	CIS, CIS FPC, Lower UV Sensor & Lower UV FFC Removal 4-13
Figure 4-46	Timing Belt Removal 4-14
Figure 4-47	Timing Belt Replacement 4-14
Figure 4-48	Upper/Lower UV Sensors Location 4-14
Figure 5-1	iVIZION System Wiring Diagram 5-1
Figure 6-1	Tools and Connections 6-1
Figure 6-2	USB Cable Type Requirements 6-1
Figure 6-3	Setup.exe File Location 6-1
Figure 6-4	InstallShield Wizard Screen 6-1
Figure 6-5	Destination Folder Screen 6-2
Figure 6-6	Current Settings Confirmation 6-2
Figure 6-7	Installation Completion Screen 6-2

List of Figures

	Page
Figure 6-8	Hardware Update Wizard Screen 1..... 6-2
Figure 6-9	Hardware Update Wizard Screen 2..... 6-2
Figure 6-10	Normal Mode Selection 6-3
Figure 6-11	Test Mode Selection..... 6-3
Figure 6-12	DIP Switches All OFF 6-3
Figure 6-13	JCM Tool Suite Standard Edition Screen..... 6-3
Figure 6-14	JCM Tool Suite Standard Edition Screen Pull-Down Menu 6-3
Figure 6-15	Browse Screen Button Location 6-4
Figure 6-16	iVIZION Software Program Selection 6-4
Figure 6-17	Download Progress Screen 1..... 6-4
Figure 6-18	Download Completed Screen 1..... 6-4
Figure 6-19	DIP Switches 6, 7, & 8 ON 6-4
Figure 6-20	JCM Tool Suite Standard Edition Screen 2..... 6-5
Figure 6-21	JCM Tool Suite Standard Edition Screen Pull-Down Menu 2 6-5
Figure 6-22	Browse Screen Button Location 6-5
Figure 6-23	iVIZION Software Program Selection 6-5
Figure 6-24	Download Progress Screen 2..... 6-5
Figure 6-25	Download Completed Screen 2..... 6-5
Figure 6-26	Remote Calibration Tools Required 6-6
Figure 6-27	KS-072/KS-089 Reference Paper 6-6
Figure 6-28	Reference Paper Setting 1 6-7
Figure 6-29	Reference Paper Setting 2 6-7
Figure 6-30	DIP Switch #8 ON 6-7
Figure 6-31	JCM Tool Suite Standard Edition Screen 3..... 6-7
Figure 6-32	iVIZION Calibration Ver.X.XX Screen 6-7
Figure 6-33	Feed-Out Calibration Proceeding Screen 6-8
Figure 6-34	Calibration Information Screen 1..... 6-8
Figure 6-35	Calibration Information Screen 2..... 6-8
Figure 6-36	Pusher Plate Release Location 6-8
Figure 6-37	Cardboard Setting Location..... 6-8
Figure 6-38	Exit Calibration Proceeding Screen..... 6-8
Figure 6-39	Calibration Information Screen 3..... 6-9
Figure 6-40	UV Calibration Proceeding Screen..... 6-9
Figure 6-41	Calibration Information Screen 4..... 6-9
Figure 6-42	Calibration Information Screen 5..... 6-9
Figure 6-43	CIS Calibration Proceeding Screen..... 6-9
Figure 6-44	Calibration Information Screen 6..... 6-9
Figure 6-45	Calibration Value Writing Screen 6-9
Figure 6-46	Calibration Complete Screen 6-10
Figure 6-47	iVIZION Calibration Service Suite Edition Screen..... 6-10
Figure 6-48	Setting Manufacture No. Screen 6-10
Figure 6-49	Calibration Value Writing Screen 6-10
Figure 6-50	Adjustment Info Screen 6-10
Figure 6-51	DIP Switch #8 Set ON 6-11
Figure 6-52	JCM Tool Suite Standard Edition Screen..... 6-11
Figure 6-53	iVIZION Test Item VerX.XX Screen 6-11
Figure 6-54	Start, Stop & Exit Screen Button 6-12
Figure 6-55	Transport Motor Normal Forward Test Screen..... 6-12
Figure 6-56	LED Indicator Test Screen 6-13

List of Figures

	Page
Figure 6-57	Sensor ON/OFF Test Screen 6-13
Figure 6-58	Denomination Indication Location 6-14
Figure 6-59	ICB Function Test Screen 6-14
Figure 6-60	DIP Switch ON/OFF Test Screen 1 6-15
Figure 6-61	DIP Switch ON/OFF Test Screen 2 6-15
Figure 6-62	JCM Tool Suite Standard Edition 6-16
Figure 6-63	iVIZION Utility Tool Version X.XX for Suite Edition Screen 1 6-16
Figure 6-64	Empty CIS IMAGE Screen 6-16
Figure 6-65	Last Acceptance CIS IMAGE Screen 6-16
Figure 6-66	iVIZION Utility Tool Version X.XX for Suite Edition Screen 2 6-17
Figure 6-67	ICB Function Screen 6-17
Figure 6-68	Enable Setting Completion 6-17
Figure 6-69	Disable Setting Completion 6-18
Figure 6-70	ICB Current Status Screen 6-18
Figure 6-71	Machine Number Setting 6-18
Figure 6-72	Machine Number Setting Completion 6-18
Figure 6-73	Machine Number Indication 6-18
Figure 6-74	Inhibit Screen Button Location 6-19
Figure 6-75	Inhibit Setting Completion 6-19
Figure 6-76	ICB System Status Indication 6-19
Figure 7-1	iVIZION Entire Unit View 7-1
Figure 7-2	iVIZION Acceptor Unit 1 Exploded View 7-3
Figure 7-3	iVIZION Acceptor Unit 2 Exploded View 7-5
Figure 7-4	iVIZION Acceptor Unit 3 Exploded View 7-7
Figure 7-5	iVIZION Transport Unit 1 Exploded View 7-9
Figure 7-6	iVIZION Transport Unit 2 Exploded View 7-11
Figure 7-7	iVIZION Transport Unit 3 Exploded View 7-13
Figure 7-8	iVIZION Transport Unit 4 Exploded View 7-15
Figure 7-9	iVIZION Transport Unit 5 Exploded View 7-17
Figure 7-10	iVIZION Transport Unit 6 Exploded View 7-19
Figure 7-11	iVIZION SS Version Frame Unit Exploded View 7-21
Figure 7-12	iVIZION Cash Box Unit 1 Exploded View 7-23
Figure 7-13	iVIZION Cash Box Unit 2 Exploded View 7-25
Figure 7-14	iVIZION Cash Box Unit 3 Exploded View 7-27
Figure 7-15	iVIZION LD Version Frame Exploded View 7-29
Figure 7-16	iVIZION HC Frame Exploded View 7-31
Figure 7-17	iVIZION HC Box Assembly Exploded View 7-33
Figure 7-18	iVIZION HC Box Unit Exploded View 7-34
Figure 7-19	iVIZION HC Upper Part Exploded View 7-36
Figure 7-20	iVIZION HC Receive Plate Assembly Exploded View 7-37
Figure 7-21	iVIZION HC Receive Spring Base Assembly Exploded View 7-38
Figure 7-22	iVIZION HC Front Plate Assembly Exploded View 7-40
Figure 7-23	iVIZION HC Pusher Unit Assembly Exploded View 7-41
Figure 7-24	iVIZION HC Pusher Assembly 1 Exploded View 7-43
Figure 7-25	iVIZION HC Pusher Assembly 2 Exploded View 7-45
Figure 7-26	iVIZION Optional Components - Bezel/Harness Exploded Views 7-47
Figure 7-27	iVIZION Optional Components - Wave Rubber Exploded Views 7-48
Figure 7-28	iVIZION Optional Components - Sorting Pusher Unit Exploded Views 7-49
Figure A-1	Additional Maintenance Equipment Requirements A-8

iVIZION™ Series

Next-Generation Banknote Acceptor Unit

List of Tables

		Page
Table 1-1	iVIZION Model Number Specifications	1-2
Table 1-2	iVIZION Type Number Specifications	1-2
Table 1-3	iVIZION Software Number Specifications	1-2
Table 1-4	iVIZION Technical Specifications	1-6
Table 1-5	iVIZION Environmental Specifications	1-7
Table 1-6	iVIZION Electrical Specifications	1-7
Table 1-7	iVIZION Structural Specifications	1-7
Table 1-8	RFID Specifications	1-7
Table 1-9	iVIZION LD Technical Specifications	1-8
Table 1-10	iVIZION LD Environmental Specifications	1-8
Table 1-11	iVIZION LD Electrical Specifications	1-9
Table 1-12	iVIZION LD Structural Specifications	1-9
Table 2-1	Denomination INHIBIT DIP Switch Settings	2-3
Table 2-2	JCM Private Line DIP Switch Setting	2-3
Table 2-3	Software DIP Switch Settings	2-3
Table 2-4	Serial Communication DIP Switch Settings	2-3
Table 2-5	LED Error Pattern Indications	2-3
Table 2-6	iVIZION SS/LD USB Connection Pin Assignments	2-4
Table 2-7	iVIZION SS/LD Photo-Coupler Connector Pin Assignments	2-5
Table 2-8	iVIZION SS/LD RS232C Connector Pin Assignments	2-6
Table 2-9	iVIZION SS/LD ccTalk Connector Pin Assignments	2-7
Table 2-10	iVIZION SS/LD TTL Connector Pin Assignments	2-8
Table 2-11	iVIZION SS/LD Bezel JPL (CN7) Connection Pin Assignments	2-9
Table 2-12	iVIZION Sensor Cleaning Location Types	2-12
Table 6-1	iVIZION Sensor Calibration Order	6-6
Table 6-2	PC Performance Test Items	6-11
Table 6-3	LED Indications for each condition	6-12
Table 6-4	Sensor Actions and Conditions	6-13
Table 6-5	Denomination Valuation List	6-14
Table 6-6	ICB Setting Function Operational Condition	6-19
Table 7-1	iVIZION Entire Unit Parts List	7-2
Table 7-2	Other Service Parts Available	7-2
Table 7-3	iVIZION Acceptor Unit 1 Parts List	7-4
Table 7-4	iVIZION Acceptor Unit 2 Parts List	7-6
Table 7-5	iVIZION Acceptor Unit 3 Parts List	7-8
Table 7-6	iVIZION Transport Unit 1 Parts List	7-10
Table 7-7	iVIZION Transport Unit 2 Parts List	7-12
Table 7-8	iVIZION Transport Unit 3 Parts List	7-14
Table 7-9	iVIZION Transport Unit 4 Parts List	7-16
Table 7-10	iVIZION Transport Unit 5 Parts List	7-18
Table 7-11	iVIZION Transport Unit 6 Parts List	7-20
Table 7-12	iVIZION SS Version Frame Unit Parts List	7-22
Table 7-13	iVIZION Cash Box Unit 1 Parts List	7-24
Table 7-14	iVIZION Cash Box Unit 2 Parts List	7-26
Table 7-15	iVIZION Cash Box Unit 3 Parts List	7-28

List of Tables

	Page
Table 7-16	iVIZION LD Frame Parts List 7-30
Table 7-17	iVIZION HC Frame Parts List 7-32
Table 7-18	iVIZION HC Box Assembly Parts List 7-33
Table 7-19	iVIZION HC Box Unit Parts List 7-35
Table 7-20	iVIZION Upper Part Parts List 7-36
Table 7-21	iVIZION HC Receive Plate Assembly Parts List 7-37
Table 7-22	iVIZION HC Receive Spring Base Assembly Parts List 7-39
Table 7-23	iVIZION HC Front Plate Assembly Parts List 7-40
Table 7-24	iVIZION HC Pusher Unit Parts List 7-42
Table 7-25	iVIZION HC Pusher Assembly 1 Parts List 7-44
Table 7-26	iVIZION HC Pusher Assembly 2 Parts List 7-46
Table 7-27	iVIZION Optional Components - Bezel/Harness Parts List 7-47
Table 7-28	iVIZION Optional Components - Wave Rubber Parts List 7-48
Table 7-29	iVIZION Optional Components - Sorting Pusher Unit Parts List 7-49
Table A-1	LED Code Condition A-1
Table A-2	LED Error Codes A-2
Table A-3	Jam LED Flash Error Codes A-4
Table A-4	Banknote LED Reject Codes A-5
Table A-5	Barcode Coupon LED Reject Codes A-6
Table A-6	Calibration Error Codes A-7
Table A-7	Additional Maintenance Equipment Parts List A-8

iVIZION™ Series

Next-Generation Banknote Acceptor Unit



Section 1

1 GENERAL INFORMATION

This section provides a general overview of the iVIZION™ Series Next-Generation Banknote Acceptor Unit (iVIZION), pictured in Figure 1-1. This section is designed to help the user navigate through this guide with ease. It includes the following information:

- iVIZION Units
- Product Descriptions
- Precautions
- Primary Features
- Component Names
- Specifications
- Unit Dimensions
- Technical Contact Information

In order to make operating this device and navigating within this manual easier, the following illustrations are used:

- **Safety Instructions** need to be observed in order to protect the operators and the equipment; these are identified with **Bold** text and the following pictographs: 
- **Special Notes** affect the use of the Banknote Acceptor; these are identified with *italic* text and the following pictograph: 
- **Steps** require the operator to perform specific actions; these are identified with sequential numbers (1, 2, 3, etc.).

iVIZION Units



Figure 1-1 iVIZION Units

7. Do not use the MRX Unit where it may be exposed to airborne evaporated or sporadic chemicals and/or oil.

Mounting, Dismounting & Transportation

Methods for mounting, dismounting and transporting the unit:

1. Be sure to turn the Power OFF before mounting or removing the Unit from its permanent location. Plugging or unplugging Connector Plugs from their receptacles while the Power is ON may cause damage to the Unit.
2. When reassembling a disassembled Unit Part, ensure that the each part is properly replaced in its correct original location.
3. Be sure to carry the Unit by both hands when transporting it. Holding the Unit by one hand may cause personal injury if the Unit accidentally becomes disassembled and drops away.
4. Be careful not to use excessive outside pressure on the Unit, or subject it to excessive vibration during transportation.

Placing Foreign Objects into the Unit


Observe the following precautions when placing foreign objects into the Unit:

1. Do not insert anything except Banknotes into the Insertion Slot. Inserting Receipts, Stapled Tickets, Rubber Bands, or Credit Cards into the Unit may damage the Banknote Transport path.
2. Do not inject liquids into the Banknote Insertion Slot. Injecting water, oil or cleaning agents may damage the Sensors within the Banknote Transport path.

Preventive Maintenance


The preventive maintenance requirements are defined as follows:

1. Be sure to turn the Power OFF on the Unit before beginning a maintenance procedure. The equipment can produce abnormal operating signals while in maintenance mode that may cause personal injury.
2. If the Validation Section is dirty due to dust, foreign objects or other such debris adhering to it, Banknote acceptance rates will degrade. Clean the Unit once a month to keep its performance stable.
3. Use a soft, lint-free cloth, cotton swab or a compressed air spray to clean dust and debris from the Banknote path.

 **Caution: DO NOT use any alcohol, solvents, scouring agents or citrus based cleaners that can damage the plastic surfaces of the device when cleaning it.**

4. Do not disassemble the Unit incorrectly or redesign it in any way. Unauthorized use by inadequately trained personnel, or use outside the original manufacturer's intent for operation voids the warranty.

5. When the Unit is exposed to liquid such as water, wipe with a Micro fiber cloth to dry the wet areas immediately. Remaining liquids may affect and degrade the Sensors and the Validation Section's performance.

 **Caution: Make Interface Harness connections to the Host Machine shorter than 9.84 Feet (3 Meters) in length. Cut off all unused portions of the Interface Harness wiring to avoid static electrical effects or short circuit possibilities that could cause damage to the Unit.**

 **WARNING: This Unit is designed for use with a Limited Power Source! Design the Host Cabinet space to meet all local related safety standards.**

Banknote Fitness Requirements

The following Banknote types may not validate correctly, or worse, can cause a jam and/or damage to the unit's Transport Path.

Banknotes exhibiting the following conditions illustrated in Figure 1-3 should be avoided:

- torn
- taped
- excessive folds or wrinkles
- dirty
- curled
- wet and/or oiled
- containing foreign objects

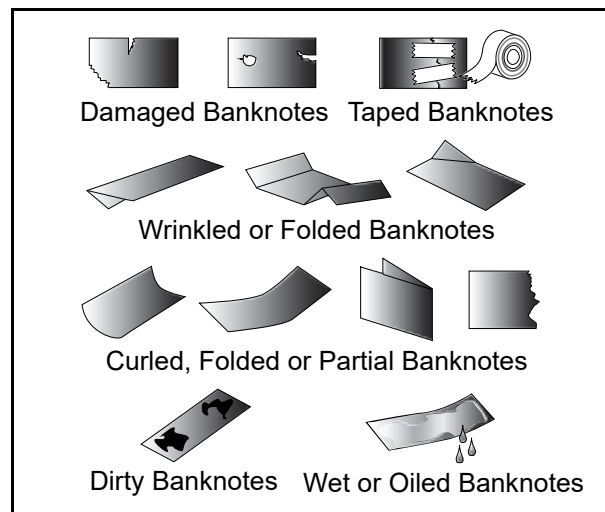


Figure 1-3 Unacceptable Banknotes

Reference Paper Use Precautions

When calibration, using the KS-072/KS-089 Reference Paper, is complete, protect the Reference Paper by handling as follows:

- Ensure that the Reference Paper Carrier is kept in an upright position following use (Figure 1-4 a) or, replace it into its protective Shipping Carton when calibration is complete (Figure 1-4 b).

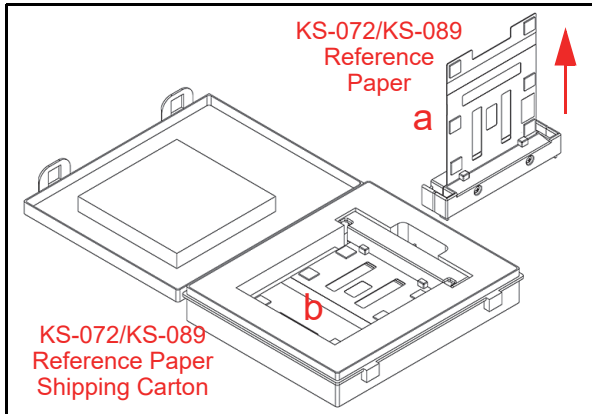


Figure 1-4 Reference Paper Handling Precautions

- Do not lay the Reference Paper Carrier down on any irregular surface, otherwise the Reference Paper may become wrinkled making it useless for future calibration use.

ALWAYS return each Reference Paper into its protective Shipping Carton following each use.

Primary Features

The iVIZION Series of Banknote Acceptor contains the following primary features:

- Easily swappable single Validation Head for inventory and maintenance efficiency.
- CIS technology allowing 100% scanning of document details and fine line imagery.
- RFID Intelligent Cash Box with lockable Frame Unit, and designed for one-hand removal without the need to use a Button or Lever to release the Cash Box.

Component Names

Figure 1-5 illustrates the iVIZION component names and locations.

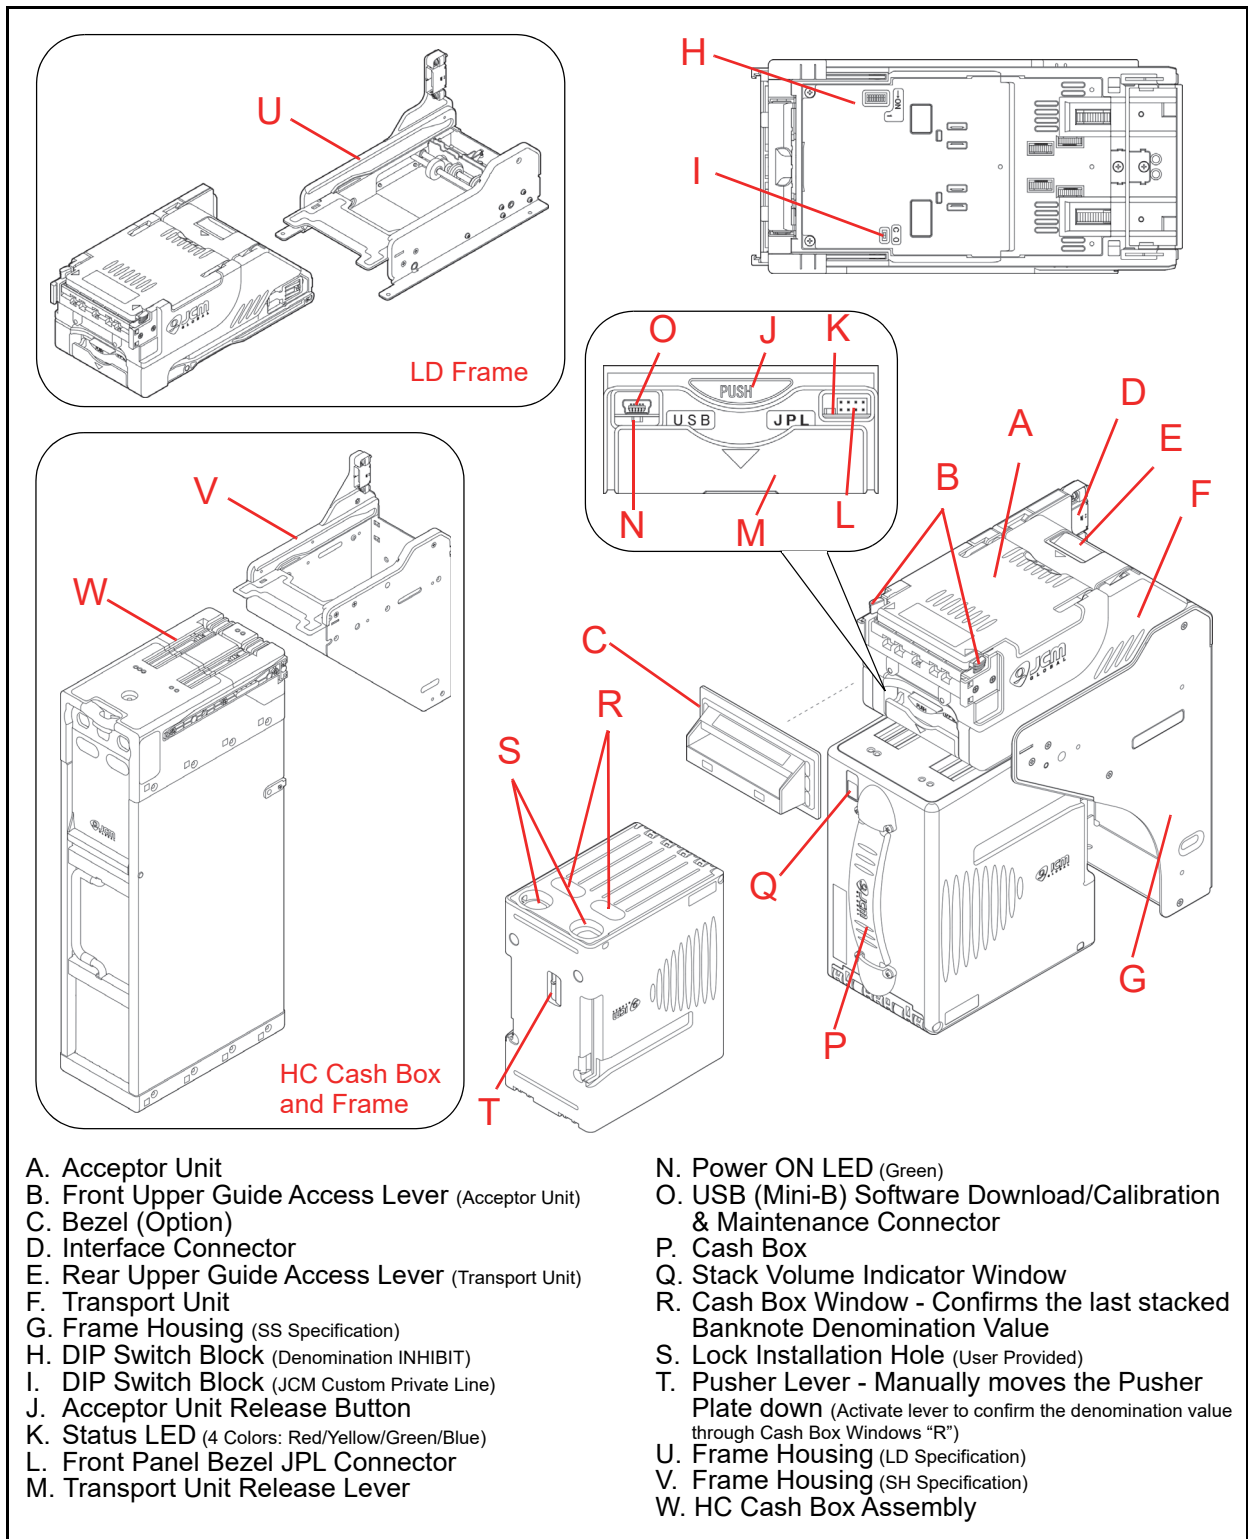


Figure 1-5 iVIZION Component Names

Specifications

iVIZION SS/SH Specification

Technical Specifications

Table 1-4 iVIZION Technical Specifications

Acceptance Rate*:	98% or greater The following banknote types are excluded: <ul style="list-style-type: none"> • Banknotes with excess or poor magnetism or unclear graphics • Double (dual) Notes • Worn, dirty, wet, stained, torn or excessively wrinkled Banknotes • Banknotes having folded corners or edges • Banknotes having the wrong cut dimensions or printing displacement • Returned Banknotes because of incorrect or failed insertion.
Banknote Types Accepted:	<ul style="list-style-type: none"> • Long side: SS: 110-170mm (4.33 - 6.69 in.) SH: 110-177mm (4.33 - 6.96 in.) • Short side: 60-85mm (2.36 - 3.35 in.)
Barcode Coupon†:	Standard Specification <ol style="list-style-type: none"> a) Read Code interleaved: 2 of 5 b) Narrow Bar: 0.5mm-0.6mm (0.019-0.023 in.) c) Wide Bar: Narrow Bar = 3:1 d) Characters: 18 Characters e) Print Position: Middle (by dividing a Coupon equally on the left, right, top and bottom of the Coupon's exact center) f) Print Width: Wider than 10mm (0.39 in.).
Insertion Direction:	Refer to the specific Country's Software Information Sheet.
Processing Speed:	Approximately 2 seconds from Banknote insertion to Vend signal output. Approximately 3 seconds from Banknote insertion to completion of the stacking operation.
Validation Method:	Optical
Diagnostic Indicators:	Power LED, Status LED, Bezel LED (Optional)
Escrow:	1 Note
Cash Box Type‡:	Secure Cash Box Intelligent Cash Box (available with RFID Specification)
Cash Box Capacity**:	SS: Standard 500 Banknotes / Large 900 Banknotes SH: HC Cash Box: 3000 Banknotes
Fraud Detection:	Equipped
Interface††:	USB Interface: USB Specification Rev.2.0 Serial Interface: Photo-Coupler Isolation Serial Interface: RS232C Communication Protocol.

*. Refer to the specific Country's "Software Information Sheet" for each Country's particular Banknote acceptance rate.

†. Refer to the specific Country's "Bar Code Coupon Specification" for more details.

‡. User supplied installed Locks (including the attached Plate, Lock and Key).


**.. The number of Notes stacked depends on the Banknote's condition.

††.The Interface Harness connecting to the Host should be less than 3m (9.84 ft).

Environmental Specifications

Table 1-5 iVIZION Environmental Specifications

Operating Temperature:	+5° C to +50° C (41° F to 122° F)
Storage Temperature:	-20° C to +70° C (-4° F to 158° F)
Relative Operating Humidity:	15% RH to 85% RH (non-condensed)
Relative Storage Humidity:	15% RH to 85% RH (non-condensed)
Installation:	Indoors Only

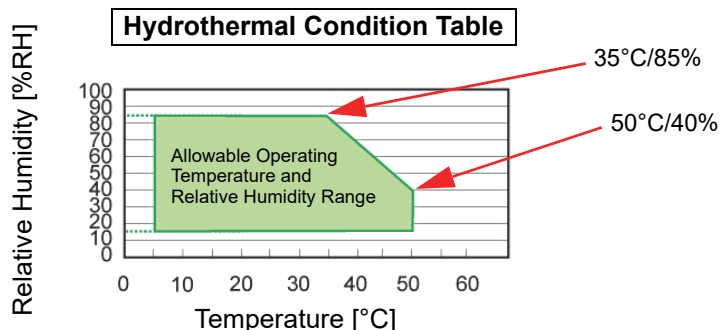

Electrical Specifications

Table 1-6 iVIZION Electrical Specifications

Supply Voltage* :	12V DC (-5%) to 24V DC (+10%) [NOTE: Use a Current Source Limiting Power Supply]
Current Consumption:	Standby: 24V DC = 0.2A, 12V DC = 0.2A Operation: 24V DC = 1.3A, 12V DC = 2.3A Maximum: 24V DC = 3.2A, 12V DC = 3.0A

*. Use a Limited Power Source.

Structural Specifications

Table 1-7 iVIZION Structural Specifications

Weight Empty:	SS: Approximately 4.1kg (9.04 lbs) SH: Approximately 7.6kg (16.75 lbs) (with HC Cash Box)
Mounting:	SS: Horizontal (Maximum gradient limitation within 50 degrees; See Figure 1-10 on page 1-12) SH: Horizontal (Maximum gradient limitation within ±5 degrees; See Figure 1-13 on page 1-14)
Outside Dimensions:	Refer to "Unit Dimensions" on page 1-10

RFID Specifications

Table 1-8 RFID Specifications

Frequency:	13.56MHz ±7kHz
Transmission Power:	200mW

iVIZION LD Specification Technical Specifications

Table 1-9 iVIZION LD Technical Specifications

Acceptance Rate* :	98% or greater The following Banknote types are excluded: a) Banknotes with unclear graphics b) Double (dual) notes c) Worn, dirty, wet, stained, torn or excessively wrinkled Banknotes d) Banknotes having folded corners or edges e) Banknotes having the wrong cut dimensions or a printing displacement f) Returned Banknotes because of incorrect or failed insertion.
Banknote Types Accepted:	Long edge: 110-170 mm (4.33-6.69 in.) Short edge: 60-85 mm (2.36-3.35 in.).
Barcode Coupon†:	Standard Specification a) Read Code interleaved: 2 of 5 b) Narrow Bar: 0.5mm-0.6mm (0.019-0.023 in.) c) Wide Bar: Narrow Bar = 3:1 d) Characters: 18 Characters e) Print Position: Middle (by dividing a Coupon equally on the left, right, top and bottom of the Coupon's exact center) f) Print Width: Wider than 10mm (0.39 in.).
Insertion Direction:	Refer to the specific Country's Software Information Sheet.
Processing Speed:	Approximately 2 seconds from Banknote insertion to Vend signal output.
Validation Method:	Optical
Diagnostic Indicators:	Power LED, Status LED, Bezel LED (Optional)
Escrow:	1 Note
Fraud Detection:	Equipped
Interface‡:	USB Interface: USB Specification Rev.2.0 Serial Interface: Photo-Coupler Isolation Serial Interface: RS232C Communication Protocol.

*. Refer to the specific Country's "Software Information Sheet" for each Country's particular Banknote acceptance rate.


†. Refer to the specific Country's "Bar Code Coupon Specification" for more details.

‡. The Interface Harness connecting to the Host should be less than 3m.

Environmental Specifications

Table 1-10 iVIZION LD Environmental Specifications

Operating Temperature:	5° C to +50° C (41° F to 122° F)
Storage Temperature:	-20° C to +70° C (-4° F to 158° F)
Relative Operating Humidity:	15% to 85% RH (non-condensed)
Relative Storage Humidity:	15% to 85% RH (non-condensed)
Installation:	Indoors Only

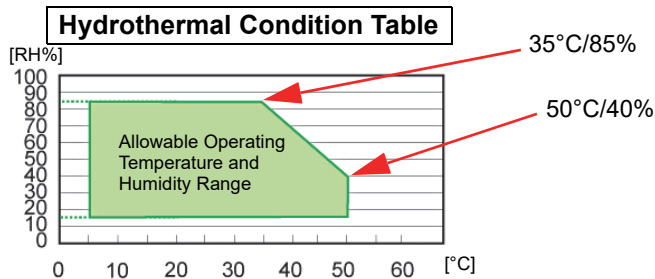

Electrical Specifications

Table 1-11 iVIZION LD Electrical Specifications

Supply Voltage * :	12V DC (-5%) to 24V DC (+10%) [NOTE: Use a Current Source Limiting Power Supply]
Current Consumption:	Standby: 24V DC = 0.2A, 12V DC = 0.2A Operation: 24V DC = 1.3A, 12V DC = 2.3A Maximum: 24V DC = 3.2A, 12V DC = 3.0A

*. Use a Limited Power Source.

Structural Specifications

Table 1-12 iVIZION LD Structural Specifications

Weight Empty:	Approximately 2.3kg (5.07 lbs)
Mounting:	Horizontal (Maximum gradient limitation within 50 degrees; See Figure 1-10 on page 1-12)
Outside Dimensions:	Refer to "Unit Dimensions" on page 1-10

Unit Dimensions

iVIZION SS Unit Outside Dimensions

Figure 1-6 illustrates the iVIZION SS Unit with Standard Cash Box Outside Dimensions.

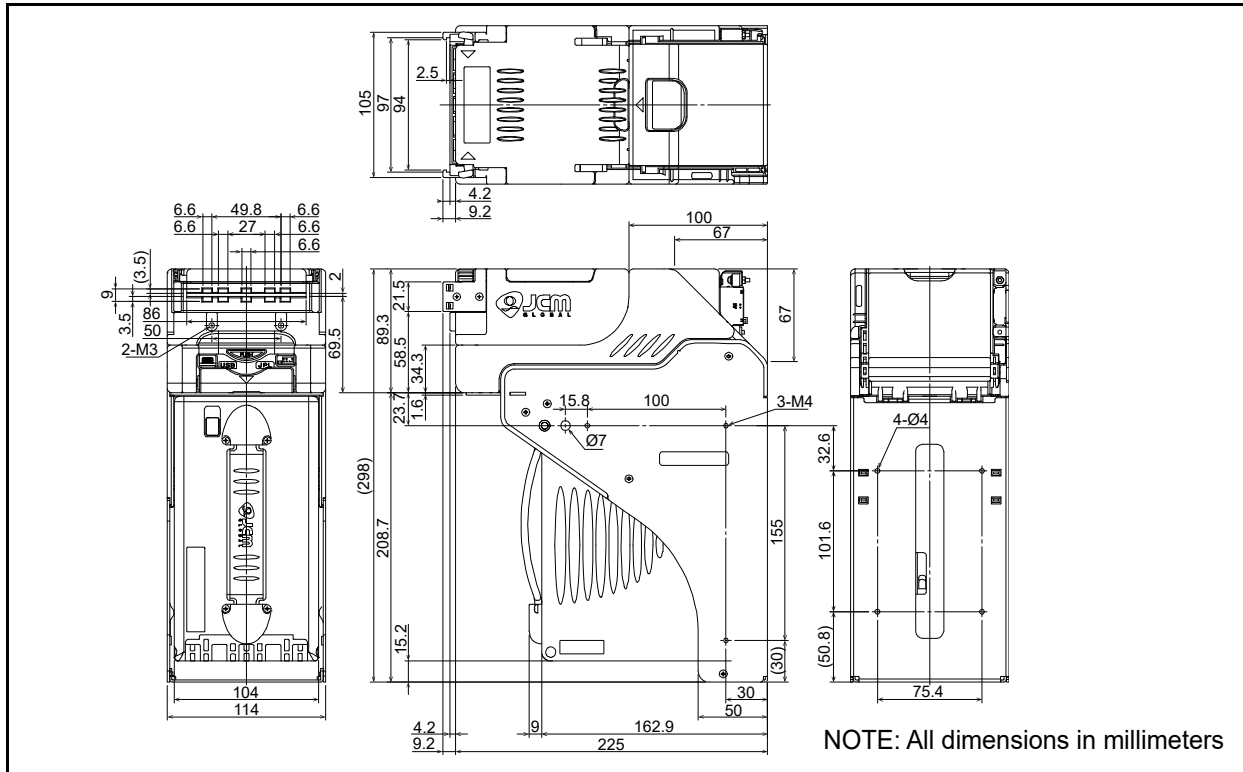


Figure 1-6 iVIZION SS with Standard Cash Box Outside Dimensions

Figure 1-7 illustrates the iVIZION SS Unit with Standard Cash Box/Plastic Bezel Outside Dimensions.

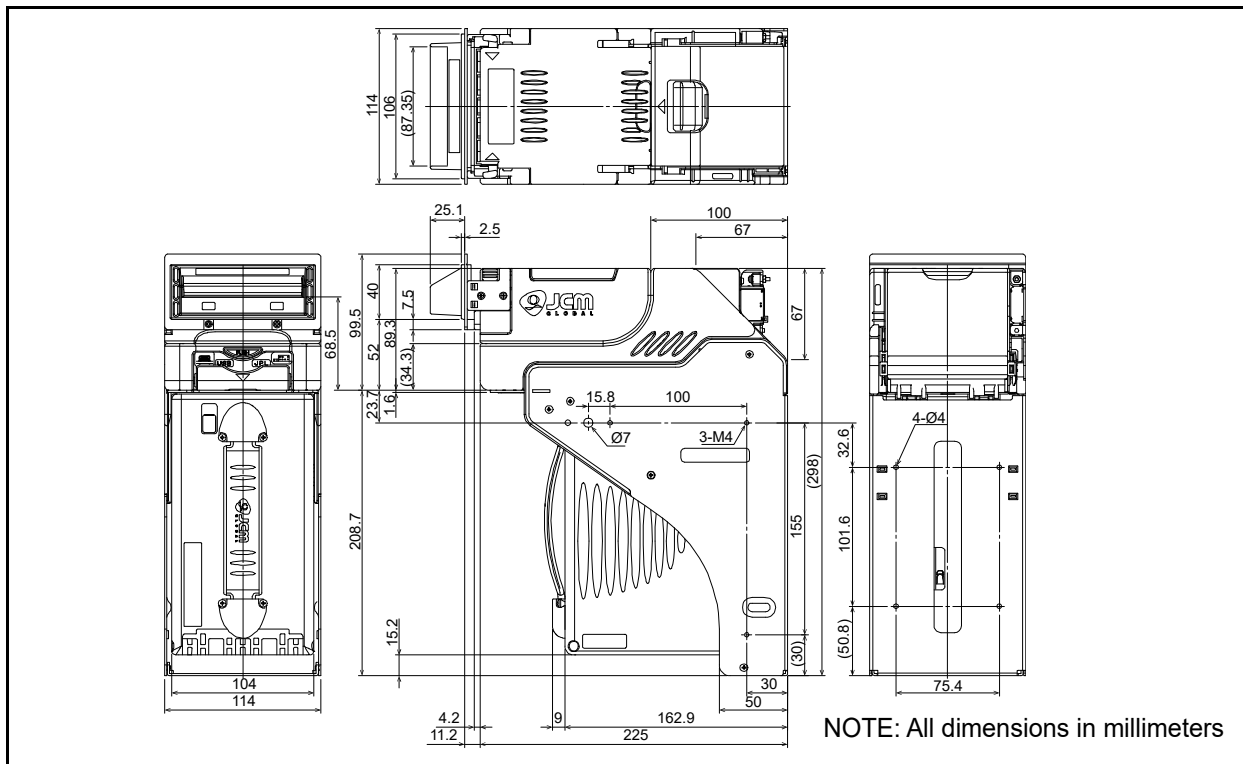


Figure 1-7 iVIZION SS Unit with Standard Cash Box/Plastic Bezel Outside Dimensions

Figure 1-8 illustrates the iVIZION SS Unit with Standard Cash Box/Metal Bezel Outside Dimensions.

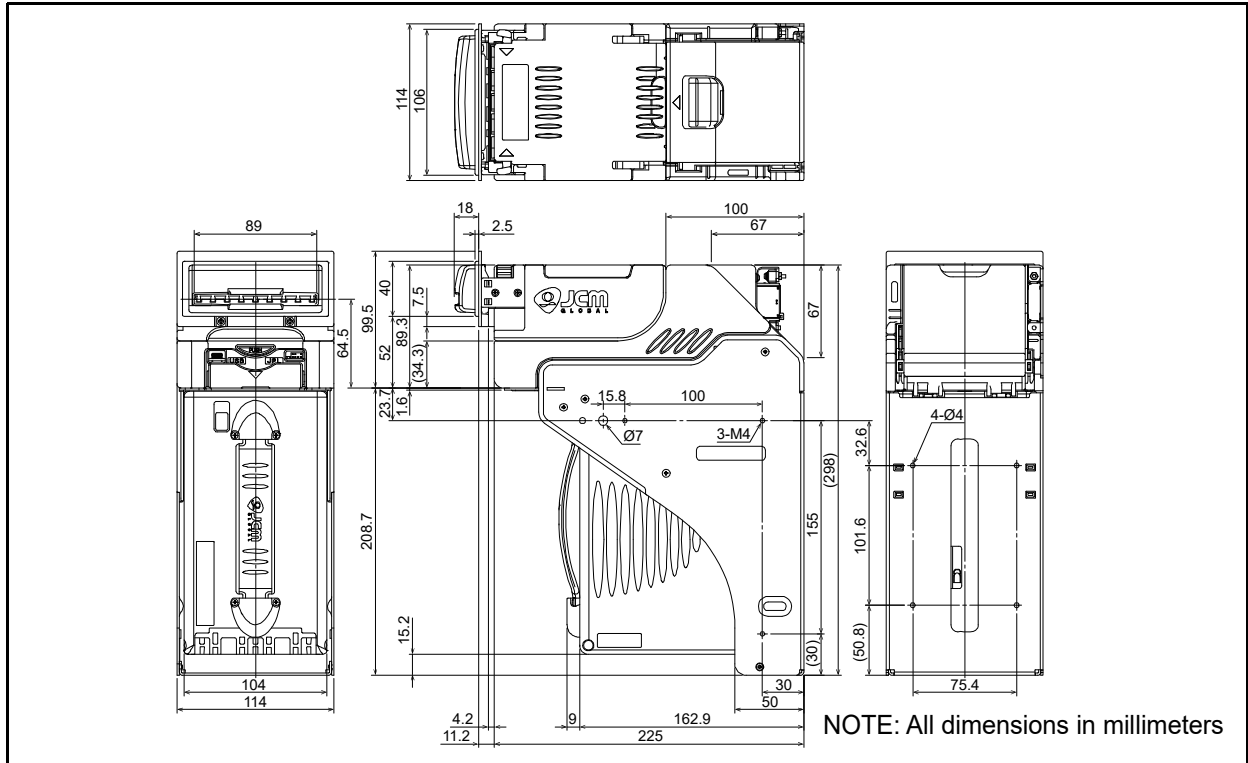


Figure 1-8 iVIZION SS Unit with Standard Cash Box/Metal Bezel Outside Dimensions

Figure 1-9 illustrates the iVIZION SS Unit with Large Cash Box Outside Dimensions.

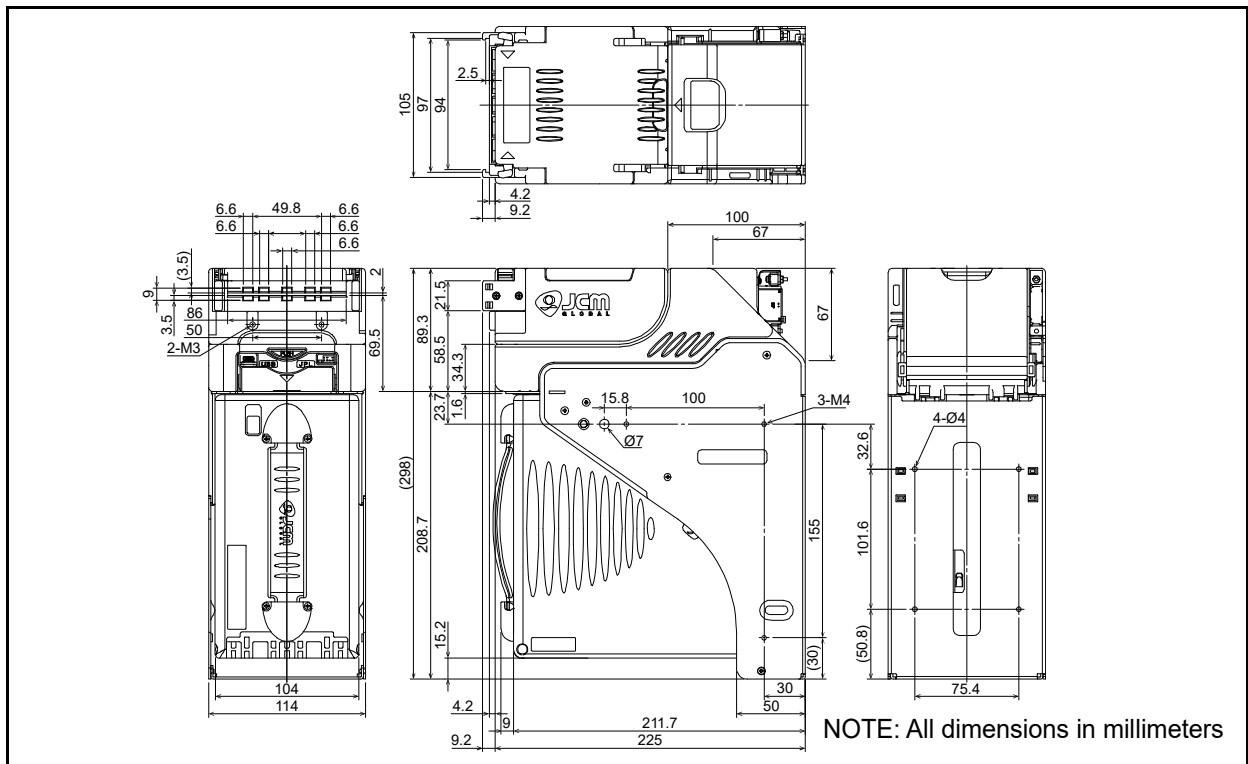


Figure 1-9 iVIZION SS Unit with Large Cash Box Outside Dimensions

iVIZION SS Unit Installation/Maintenance Space Requirements

Figure 1-10 illustrates the iVIZION SS Unit Installation and Maintenance Space Requirements Diagram.

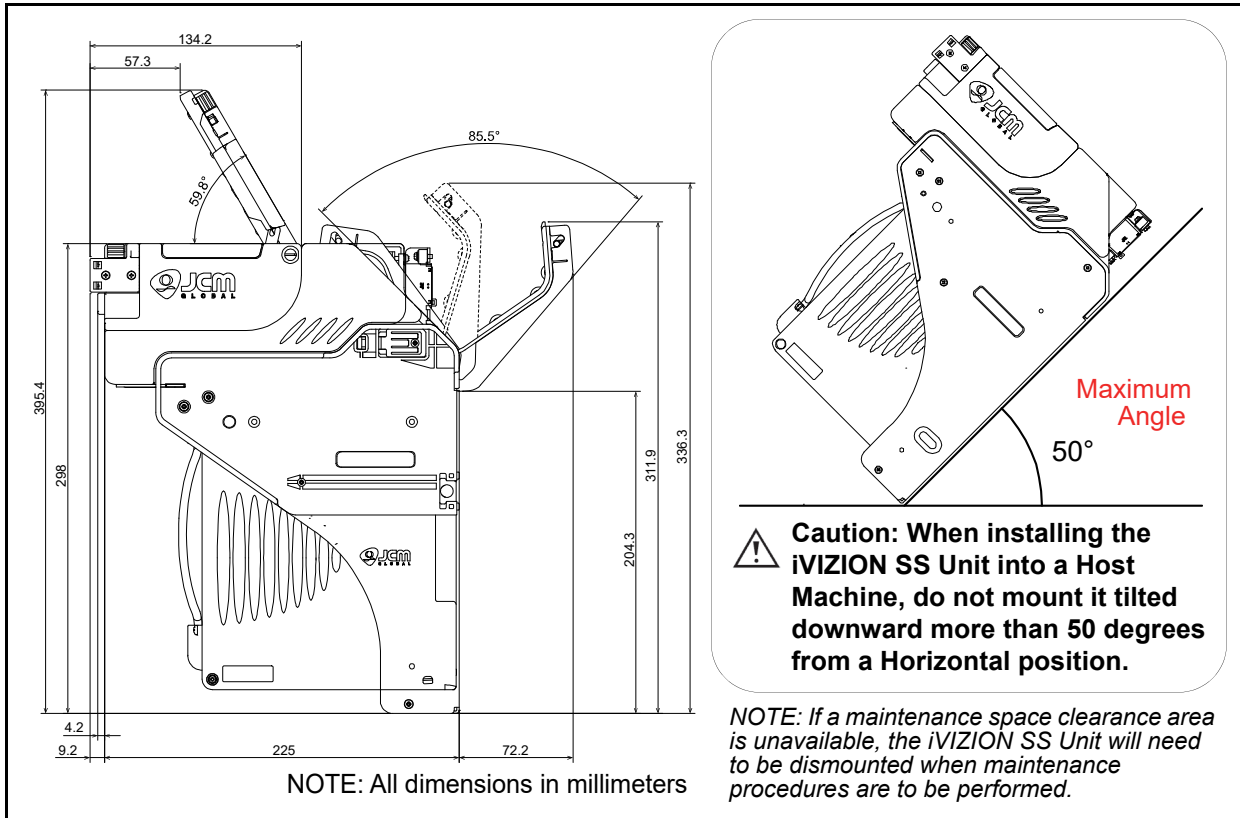


Figure 1-10 iVIZION SS Unit Installation/Maintenance Space Requirements Diagram

Figure 1-11 illustrates the iVIZION LD Unit Outside Dimensions.

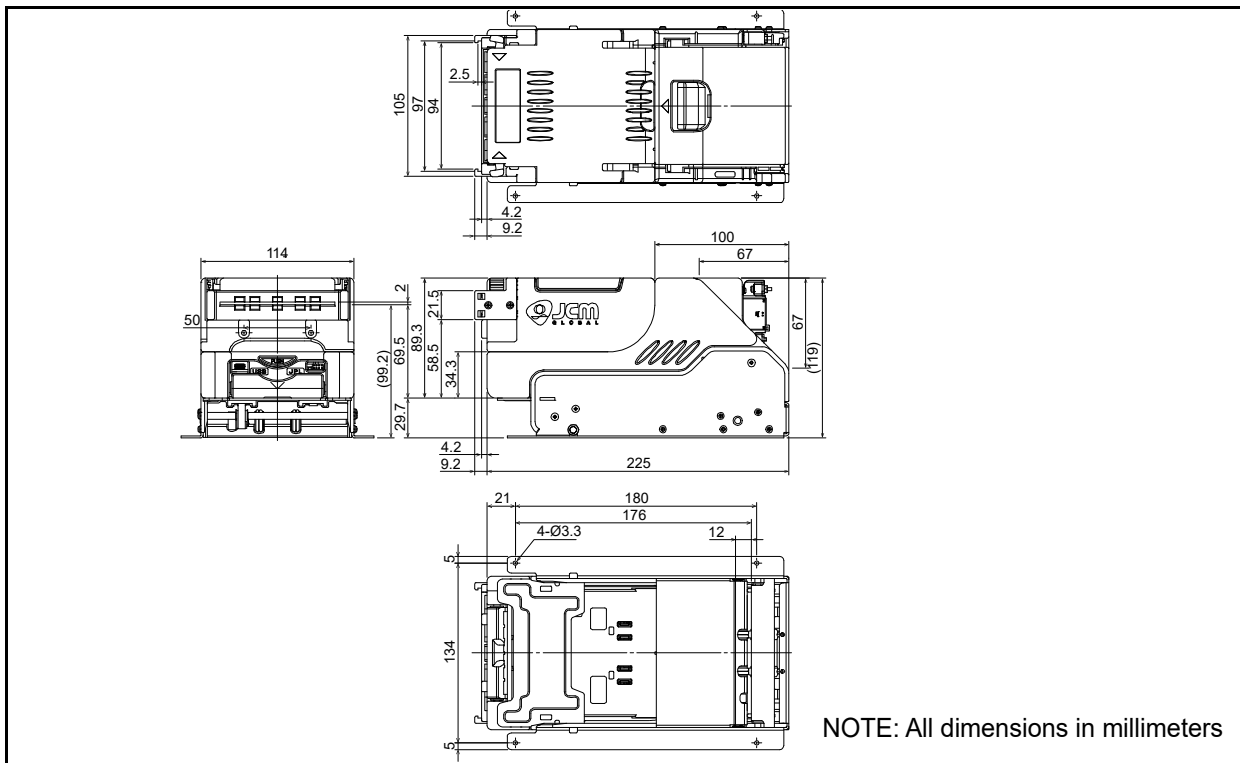


Figure 1-11 iVIZION LD Unit Outside Dimensions

iVIZION SH Entire Unit Outside Dimensions

Figure 1-12 illustrates the iVIZION SH Unit Outside Dimensions.

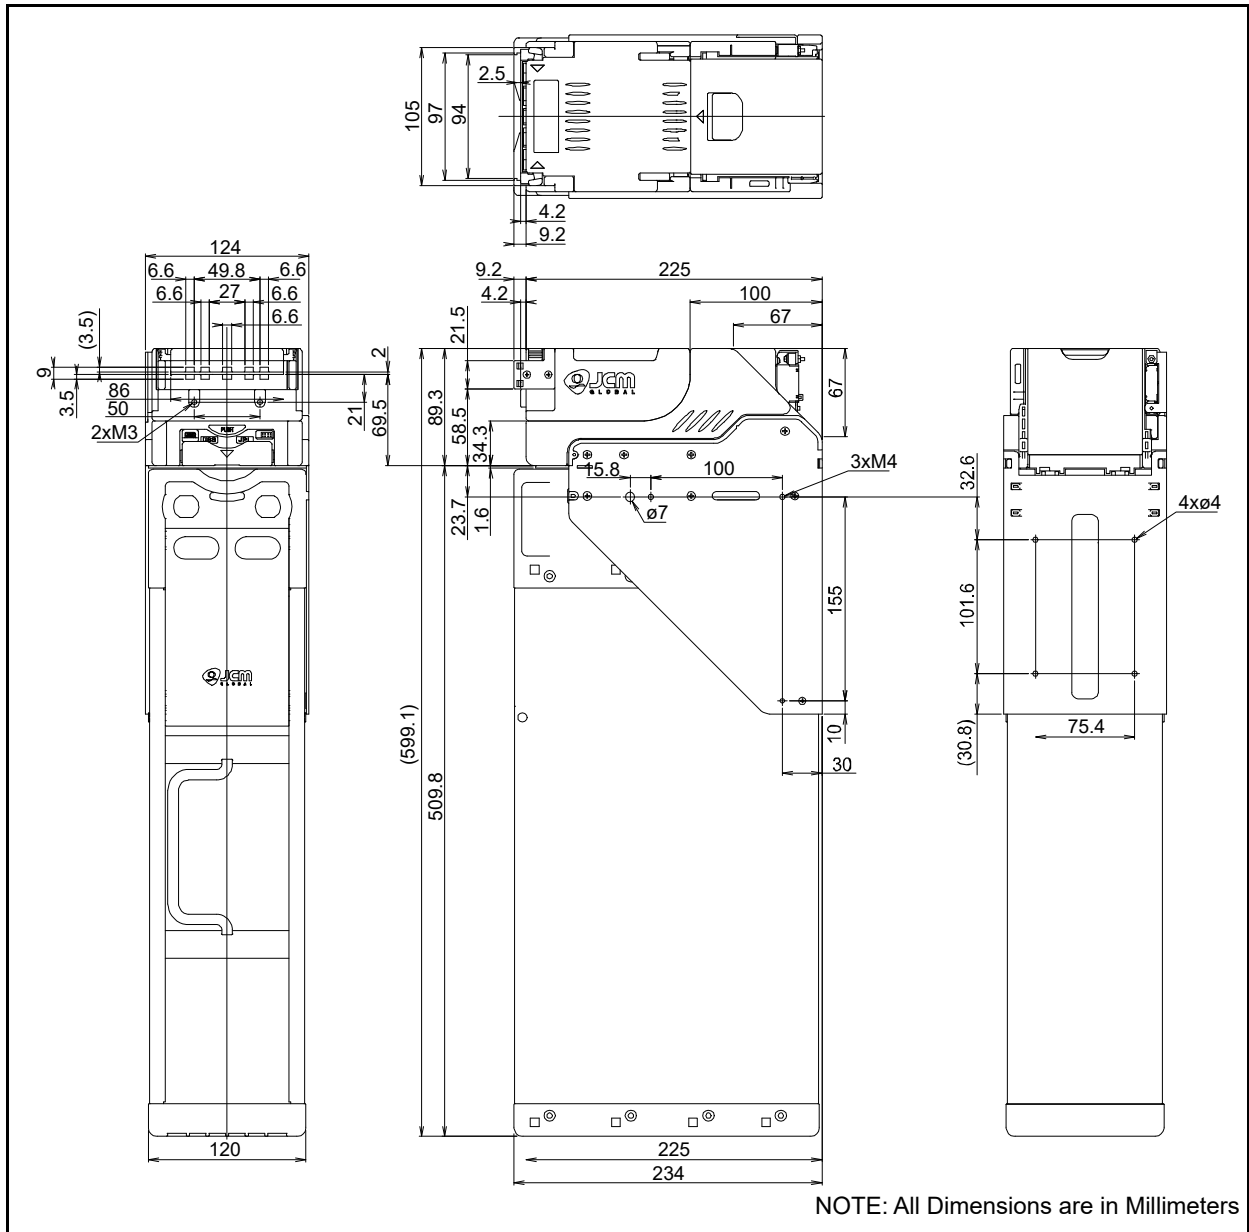


Figure 1-12 iVIZION SH Unit Outside Dimensions

iVIZION SH Unit Installation/Maintenance Space Requirements

Figure 1-13 illustrates the iVIZION SH Unit Installation and Maintenance Space Requirements Diagram.

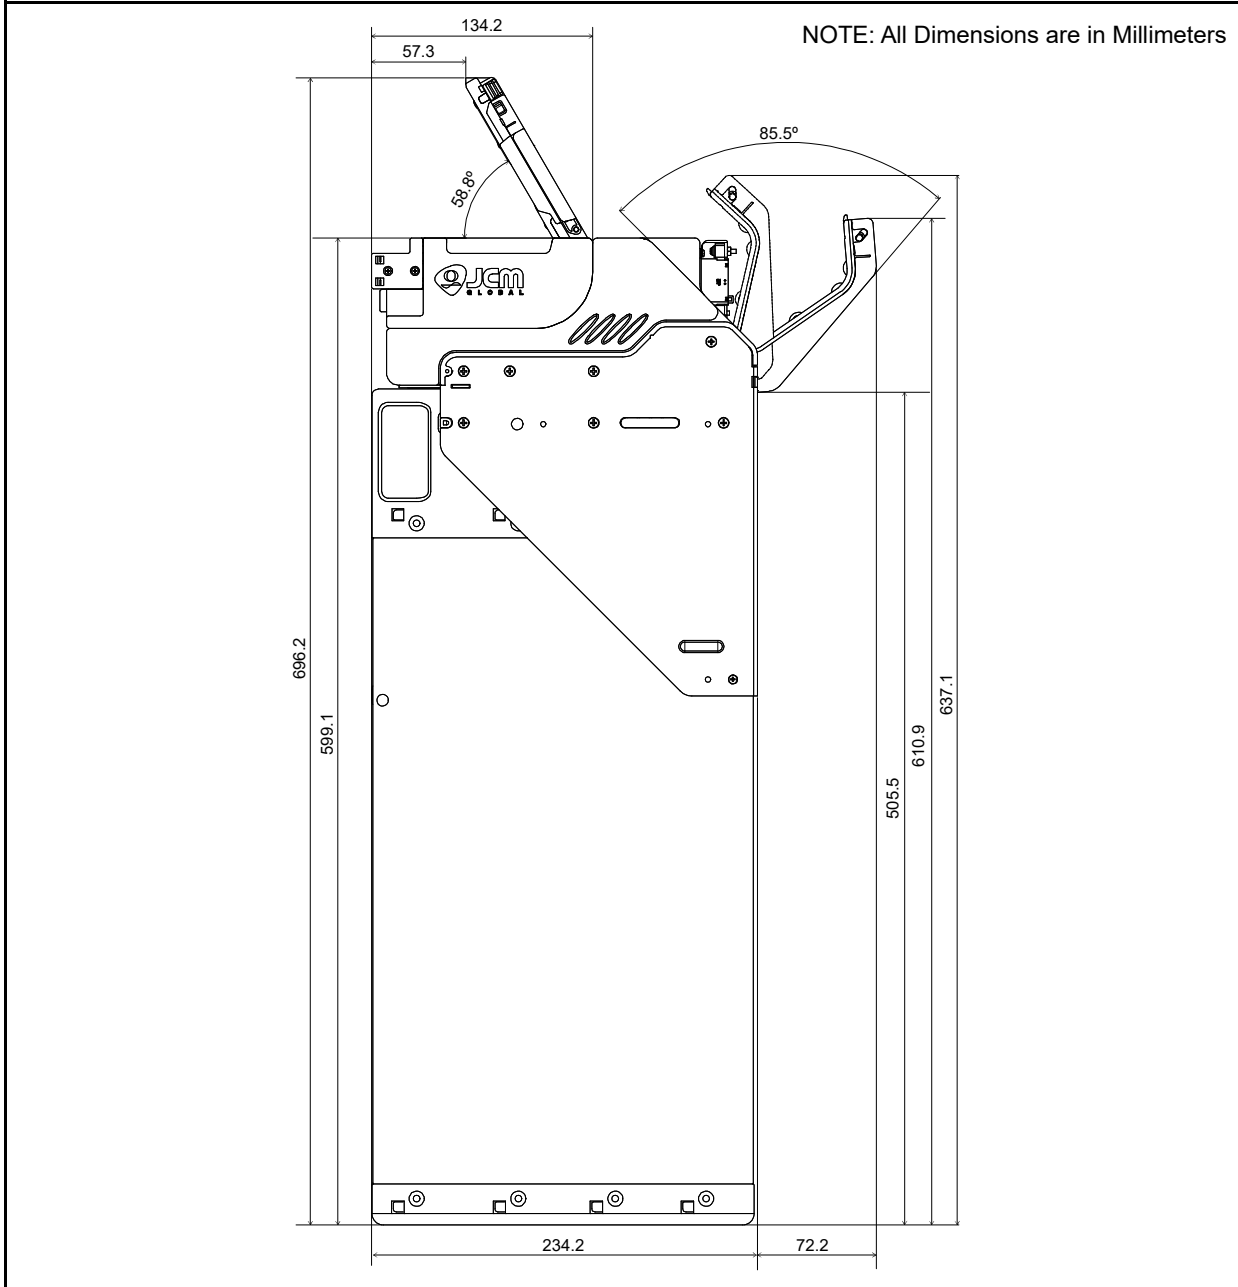


Figure 1-13 iVIZION SH Unit Installation and Maintenance Space Requirements Diagram



NOTE: The iVIZION HC Cash Box is installed as it is hanging on the SH unit. Do not allow the Cash Box to touch a Host Machine. Ensure that there is sufficient space below the Cash Box for its removal.



Caution: When installing the iVIZION SH Unit into a Host Machine, do not mount it tilted downward more than ±5 degrees from a Horizontal position.

iVIZION Cash Box Outside Dimensions

Standard Cash Box Outside Dimensions

Figure 1-14 illustrates the iVIZION Standard Cash Box Outside Dimensions.

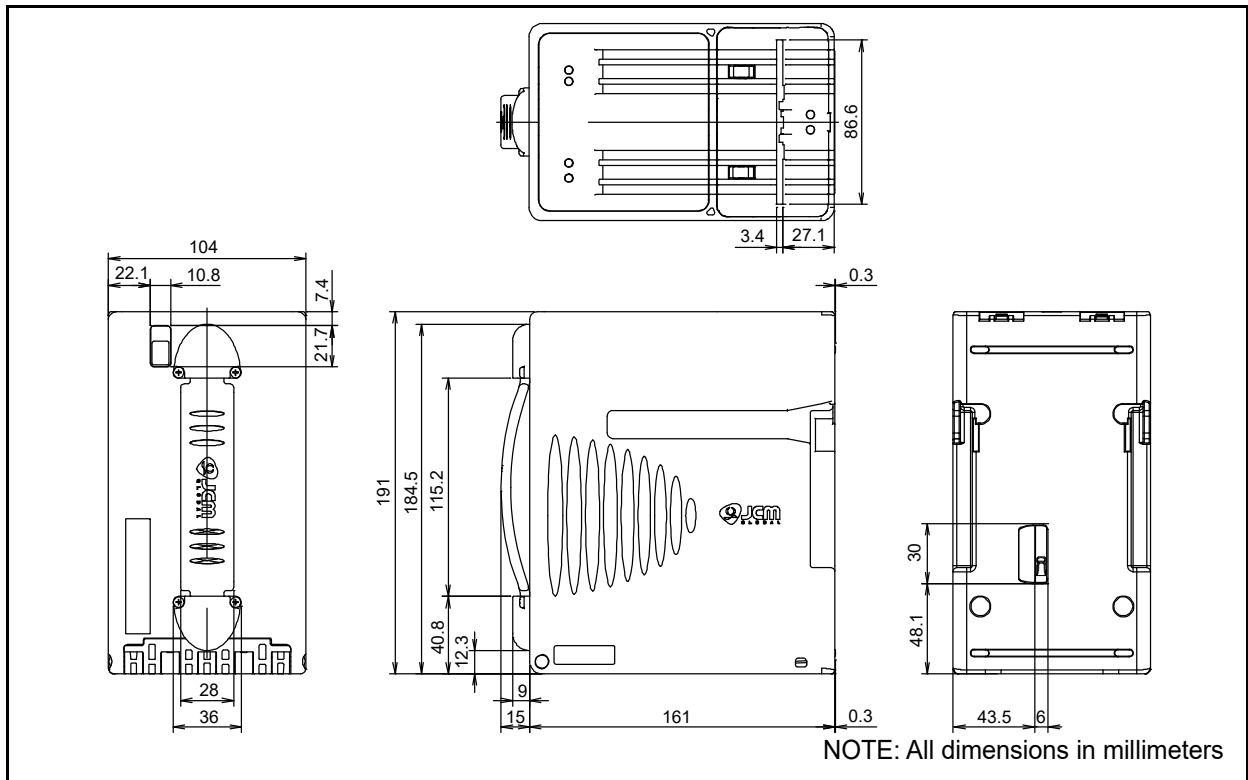


Figure 1-14 iVIZION Standard Cash Box Dimensions

Large Cash Box Outside Dimensions

Figure 1-15 illustrates the iVIZION Large Cash Box Outside Dimensions.

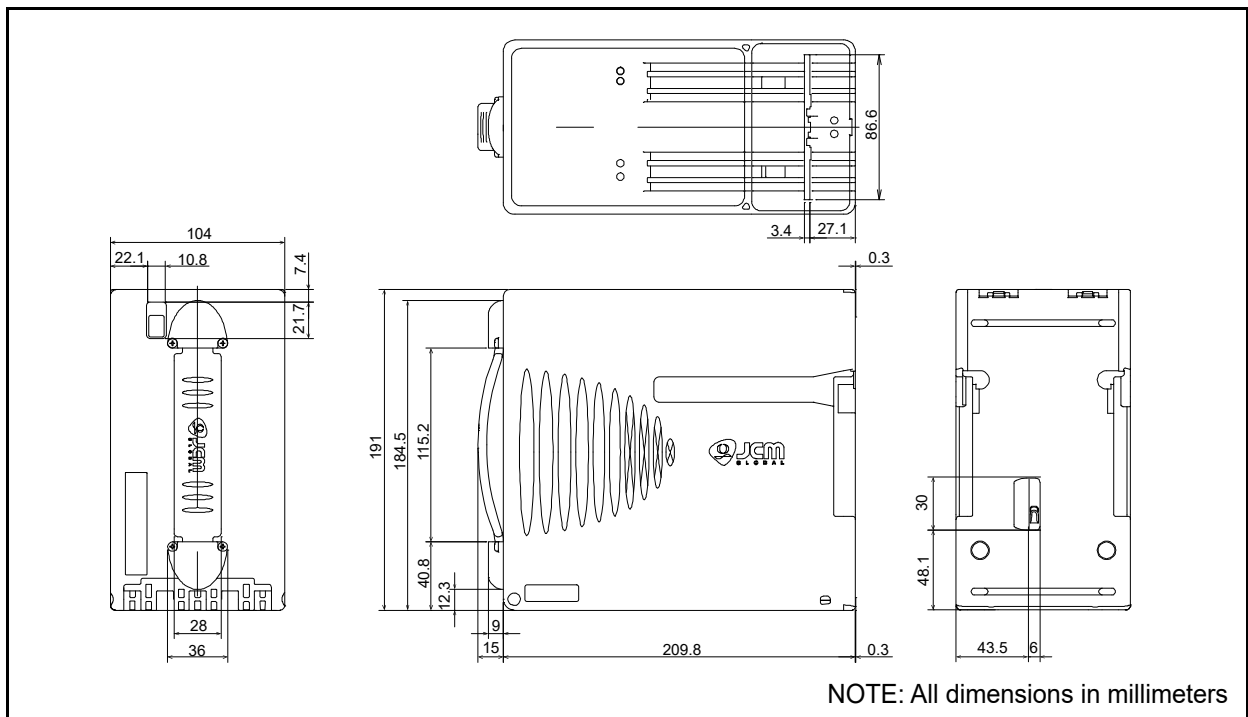


Figure 1-15 iVIZION Large Cash Box Dimensions

HC Cash Box Outside Dimensions

Figure 1-16 illustrates the iVIZION HC Cash Box Outside Dimensions.

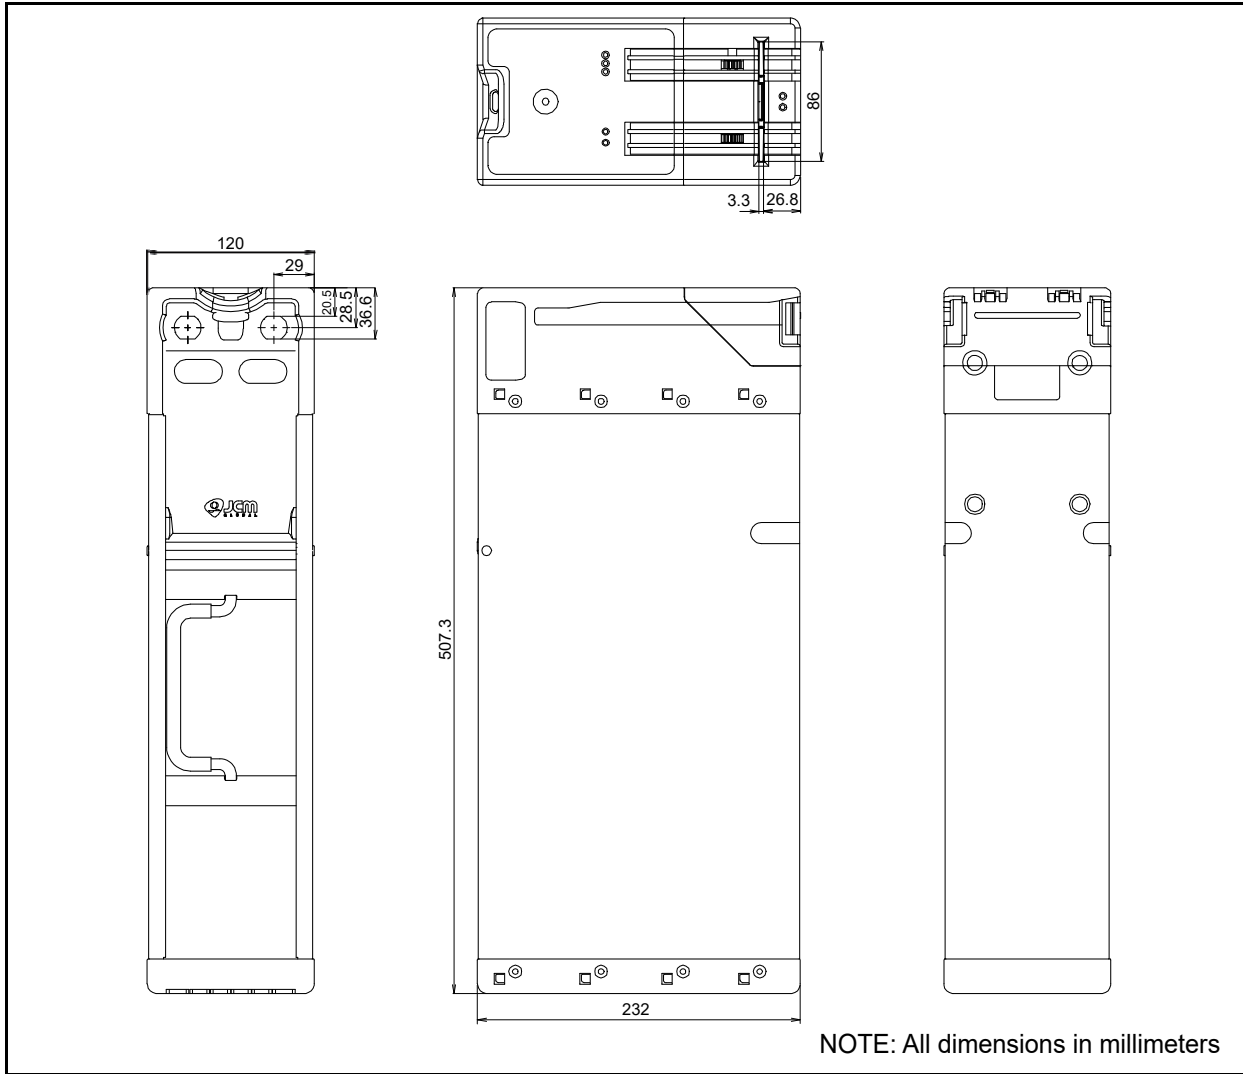


Figure 1-16 iVIZION HC Cash Box Dimensions

Technical Contact Information

To obtain further technical information regarding the iVIZION Unit, please contact the nearest location listed below:

Americas

JCM American

Phone: +1-702-651-0000

Fax: +1-702-644-5512

925 Pilot Road,
Las Vegas, NV 89119

E-mail: support@jcmglobal.com

Europe, Middle East, Africa & Russia

JCM Europe GmbH

Phone: +49-211-530-645-60

Fax: +49-211-530-645-65

Mündelheimer Weg 60
D-40472 Düsseldorf Germany

E-mail: support@jcmglobal.eu

UK & Ireland

JCM Europe (UK Office)

Phone: +44 (0) 190-837-7331

Fax: +44 (0) 190-837-7834

Luminous House, 300 South Row,
Milton Keynes MK9 2FR,
United Kingdom

E-mail: support@jcmglobal.eu

Asia and Oceania

JCM American (Australia Office)

Phone: +61-2-9648-0811

Fax: +61-2-9647-1438

Unit 21, 8 Avenue of the Americas Newington,
NSW 2127 Australia

E-mail: sales-asiapac@jcmglobal.com

JAPAN CASH MACHINE CO., LTD.(HQ)

Phone: +81-6-6703-8400

Fax: +81-6-6707-0348

2-3-15, Nishiwaki, Hirano-ku, Osaka 547-0035
JAPAN

E-mail: Shohin@jcm-hq.co.jp

The JCM Website for all locations is:
<http://www.jcmglobal.com>

THIS PAGE INTENTIONALLY LEFT BLANK

iVIZION™ Series

Next-Generation Banknote Acceptor Unit

Section 2

2 INSTALLATION

This section provides installation and operating instructions for the iVIZION™ Series Next-Generation Banknote Acceptor Unit (iVIZION). The information within this section contains the following features:

- Installation Procedure
- DIP Switch Configurations
- Connector Pin Assignments
- Preventive Maintenance
- Cleaning Procedure
- Standard Interface Circuit Schematics
- Operation Flowcharts

Installation Procedure

Mounting holes are provided in each Frame Unit to attach the iVIZION to a related Machine during installation. Select and perform the following steps to install the iVIZION Unit in the related Machine's particular Frame configuration:

1. Install the Interface Harness to the Frame Grounding Plate (FG PLT) (Figure 2-1 a) using the two (2) Floating Collars (Figure 2-1 b), the single (1) M2.6x12 W Washer Screw (Figure 2-1 c), the single (1) M2.6x10 W Washer Screw (Figure 2-1 d) and the single (1) M2.6 Nylon Nut (Figure 2-1 e) onto the Frame Assembly. See the Figure 2-1 circled inset to visually see the assembly completed as required.

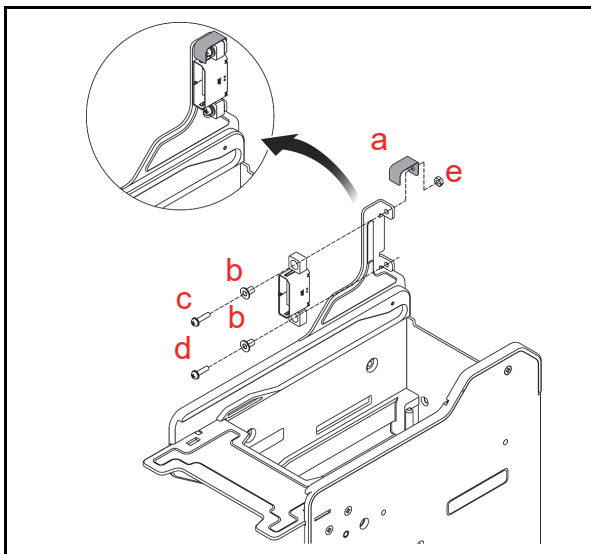


Figure 2-1 Interface Harness Installation Location

2. When a side mounting configuration is preferred, bolt the left and right side of the iVIZION Frame into its intended related Machine's location using six (6) M4 Screws on both sides of the Frame (3 Screws on each side as shown in Figure 2-2).

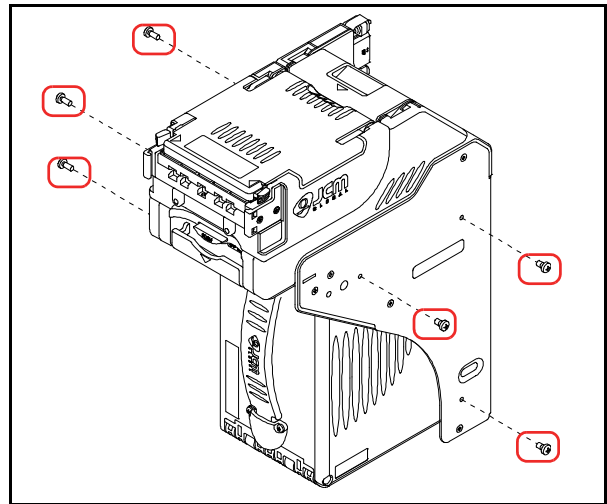


Figure 2-2 M4 Screws Locations (Left/Right Side)

3. When an end mounting configuration is preferred, remove the Cash Box and attach the rear end of the iVIZION Frame into its intended location using four (4) UNC6-32 Flat Head Screws from inside the back end of the Frame as shown in Figure 2-3.

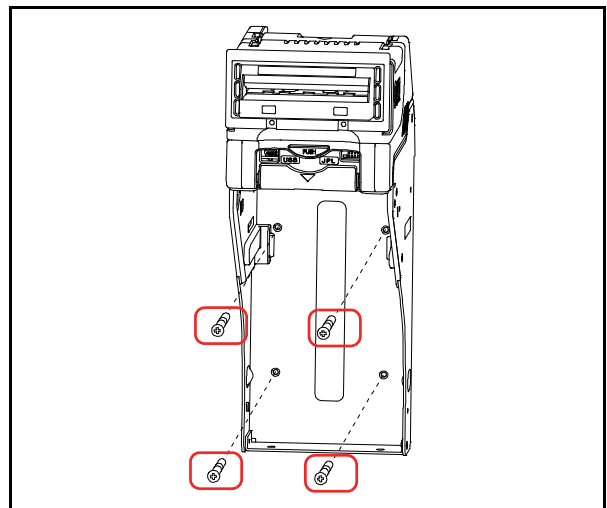


Figure 2-3 Flat Head Screws Locations (Rear Side)

When installing the iVIZION SH Unit into the Host Machine, refer to the Figure 1-12 “iVIZION SH Unit Outside Dimensions” on page 1-13.

NOTE: The length from Frame surface to the edge of the M4 Screws should be within 4mm in order not to puncture the Plastic Surface of the iVIZION Frame when a side mounting configuration is preferred.

NOTE: When installing the iVIZION LD Version Unit into a related Machine, the iVIZION Optional LD Version Unit Installation detailed information on page 2-11.

Lock Installation

One or two security locks can be installed onto a iVIZION Cash Box. When installing a security lock, the following attachment accessories may be required:

- Key Spacers
- Plate Lock Keys
- Key Cap Attachment

Choose a Lock that fits a standard size hole dimension format (Figure 2-4). In addition, when two locks are installed, both locks must be identical.

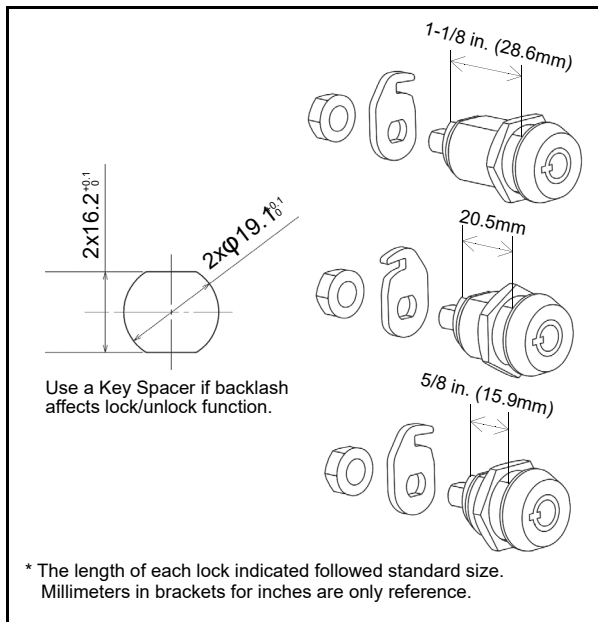


Figure 2-4 Lock Size

Unlock Procedure

Each Lock has a different rotation direction to unlock. Make sure when the lock(s) are installed the rotation is in the correct direction(s) (Figure 2-5).

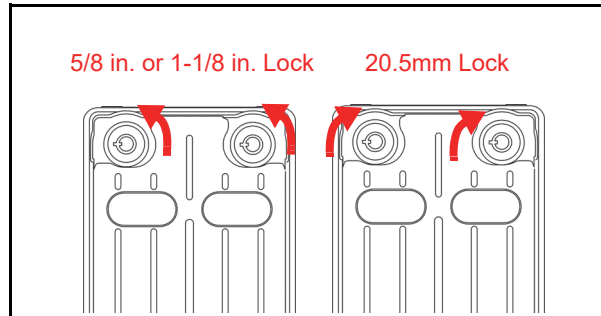


Figure 2-5 Unlock Rotation Direction

NOTE: When using only one lock, install the Key Cap in the unused key hole (Figure 2-6).


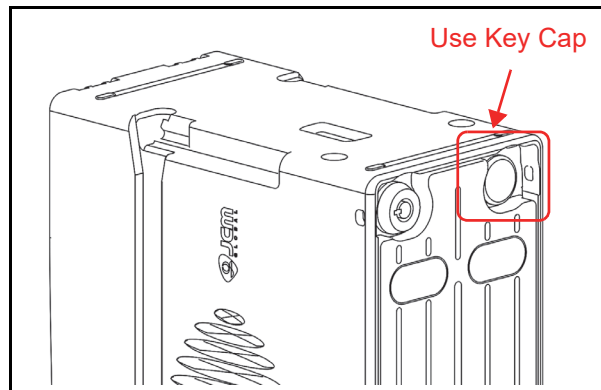


Figure 2-6 Key Cap Installation

DIP Switch Configurations

This portion provides the denomination DIP Switch Block Settings for the iVIZION Unit.


Table 2-1 Denomination INHIBIT DIP Switch Settings



Switch No.	Switch ON	Switch OFF
1	VEND 1 INHIBIT	VEND 1 ACCEPT
2	VEND 2 INHIBIT	VEND 2 ACCEPT
3	VEND 3 INHIBIT	VEND 3 ACCEPT
4	VEND 4 INHIBIT	VEND 4 ACCEPT
5	VEND 5 INHIBIT	VEND 5 ACCEPT
6	VEND 6 INHIBIT	VEND 6 ACCEPT
7	VEND 7 INHIBIT	VEND 7 ACCEPT
8	N/A*	OFF (Fixed)


*. Not Applicable (N/A). Used to enter "Test Mode".

Table 2-2 JCM Private Line DIP Switch Setting



Switch No.	Non-Marked (O)	Marked (C)
1	RS-485 Resistance Terminated	RS-485 Resistance Un-Terminated


Table 2-3 Software DIP Switch Settings



Switch No.	Switch ON	Switch OFF
1	N/A*	OFF (Fixed)
2	N/A*	OFF (Fixed)
3	N/A*	OFF (Fixed)
4	N/A*	OFF (Fixed)

*. Not Applicable (N/A). Never Switched to ON.

Table 2-4 Serial Communication DIP Switch Settings



Switch No.	Non-Marked (R)	Marked (P)
JP2	RS232C	Photo-Coupler Isolation (Standard)
JP3	RS232C	Photo-Coupler Isolation (Standard)

NOTE: When changing the type of iVIZION Serial Communications, Switches JP2 and JP3 located on the Controller CPU Board must be set to identical switch positions.

Primary LED Indications

The iVIZION Unit's two LEDs illuminate different colors when various operating and error conditions occur.

Table 2-5 LED Error Pattern Indications

No.	Condition	LED Indications	
		Power LED*	Status LED
1	OFF	Extinguished (OUT)	Extinguished (OUT)
2	Initializing	Lit Green	Blue Flashes
3	Stand-by	Lit Green	Extinguished (OUT)
4	Reject	Lit Green	Green Flashes
5	Banknote Jam	Lit Green	Yellow Flashes
6	Abnormal Error	Lit Green	Red Flashes
7	Downloading	Lit Green	Lit Red
			Lit Green
8	Performance Test (Stand-by)	Lit Green	Lit Blue

*. The Power LED lights Green when Power is supplied to the Unit.

Connector Pin Assignments

Table 2-6 lists the iVIZION SS/LD Interface Connector Pin Assignments.

Table 2-6 iVIZION SS/LD USB Connection Pin Assignments

Pin No.	Signal Name	I/O* †	Function
1	24V DC (POWER)	POWER	+24V DC Power
2	M-RESET	IN	Banknote Acceptor Master Reset Input Signal Line
3	USB-	IN/OUT	USB Communication Input/Output Signal Line
4	USB+	IN/OUT	USB Communication Input/Output Signal Line
5	USB GND	SG	USB Communication Ground (0V DC)
6	TTL-TXD	OUT	-
7	TTL-RXD	IN	-
8	LED POWER	OUT	LED Drive Line (anode)
9	24V DC (POWER)	POWER	+24V DC Power
10	RS232 GND	SG	-
11	TXD	OUT	-
12	I/F +12V DC	IN	Interface Power Supply (+12VDC)
13	Vbus	IN	USB Communication Vbus Signal Line (+5V DC)
14	JP+	IN/OUT	-
15	TTL-G	SG	-
16	LED-	IN	LED Drive Line (cathode)
17	ccTalk (P)	IN/OUT	-
18	POWER GND	POWER	Power Ground (0V DC)
19	I/F GND	SG	-
20	RXD	IN	-
21	DET-GND	IN	Connect to DET (Pin-22)
22	DET	OUT	Connect to DET GND (Pin-21)
23	JP-	IN/OUT	-
24	SU SELECT	IN	SS/SU Selection‡
25	ccTalk (S)	IN/OUT	-
26	POWER GND	POWER	Power Ground (0V DC)

*. I/O (Input/Output) Terminal as viewed from outside the Banknote Acceptor.

†. SG = Signal Ground.

‡. No Connection = SS Version, Connect to any unused SG (Pin #10, Pin #15 or Pin #19) = SU Version.

Connector Pin Assignments (Continued 1)

Table 2-7 lists the iVIZION SS/LD Photo-Coupler Connector Pin Assignments.

Table 2-7 iVIZION SS/LD Photo-Coupler Connector Pin Assignments

Pin No.	Signal Name	I/O* †	Function
1	24V DC (POWER)	POWER	+24V DC Power
2	M-RESET	IN	Banknote Acceptor Master Reset Input Signal Line
3	USB-	IN/OUT	-
4	USB+	IN/OUT	-
5	USB GND	SG	-
6	TTL-TXD	OUT	-
7	TTL-RXD	IN	-
8	LED POWER	OUT	LED Drive Line (anode)
9	24V DC (POWER)	POWER	+24V DC Power
10	RS232 GND	SG	-
11	TXD	OUT	Serial Communication Output Signal Line
12	I/F +12V DC	IN	Interface Power Supply (+12VDC)
13	Vbus	IN	-
14	JP+	IN/OUT	-
15	TTL-G	SG	-
16	LED-	IN	LED Drive Line (cathode)
17	ccTalk (P)	IN/OUT	-
18	POWER GND	POWER	Power Ground (0V DC)
19	I/F GND	SG	Photo-Coupler Communication GND
20	RXD	IN	Serial Communication Input Signal Line
21	DET-GND	IN	Connect to DET (Pin-22)
22	DET	OUT	Connect to DET GND (Pin-21)
23	JP-	IN/OUT	-
24	SU SELECT	IN	SS/SU Selection‡
25	ccTalk (S)	IN/OUT	-
26	POWER GND	POWER	Power Ground (0V DC)

*. I/O (Input/Output) Terminal as viewed from outside the Banknote Acceptor.

†. SG = Signal Ground.

‡. No Connection = SS Version, Connect to any unused SG (Pin #10 or Pin #15) = SU Version.

Connector Pin Assignments (Continued 2)

Table 2-8 lists the iVIZION SS/LD RS232C Connector Pin Assignments.

Table 2-8 iVIZION SS/LD RS232C Connector Pin Assignments

Pin No.	Signal Name	I/O* †	Function
1	24V DC (POWER)	POWER	+24V DC Power
2	M-RESET	IN	Banknote Acceptor Master Reset Input Signal Line
3	USB-	IN/OUT	-
4	USB+	IN/OUT	-
5	USB GND	SG	-
6	TTL-TXD	OUT	-
7	TTL-RXD	IN	-
8	LED POWER	OUT	LED Drive Line (anode)
9	24V DC (POWER)	POWER	+24V DC Power
10	RS232C GND	SG	RS232C Communication Ground
11	TXD	OUT	Serial Communication Output Signal Line
12	I/F + 12V DC	IN	Interface Power Supply (+12V DC)
13	Vbus	IN	-
14	JP+	IN/OUT	-
15	TTL-G	SG	-
16	LED-	IN	LED Drive Line (cathode)
17	ccTalk (P)	IN/OUT	-
18	POWER GND	POWER	Power Ground (0V DC)
19	I/F GND	SG	-
20	RXD	IN	Serial Communication Input Signal Line
21	DET-GND	IN	Connect to DET (Pin-22)
22	DET	OUT	Connect to DET GND (Pin-21)
23	JP-	IN/OUT	-
24	SU SELECT	IN	SS/SU Selection‡
25	ccTalk (S)	IN/OUT	-
26	POWER GND	POWER	Power Ground (0V DC)

*. I/O (Input/Output) Terminal as viewed from outside the Banknote Acceptor.

†. SG = Signal Ground

‡. No Connection = SS Version, Connect to any unused SG (Pin #15 or Pin #19) = SU Version.

Connector Pin Assignments (Continued 3)

Table 2-9 lists the iVIZION SS/LD ccTalk Connector Pin Assignments.

Table 2-9 iVIZION SS/LD ccTalk Connector Pin Assignments

Pin No.	Signal Name	I/O* †	Function
1	24V DC (POWER)	POWER	+24V DC Power
2	M-RESET	IN	Banknote Acceptor Master Reset Input Signal Line
3	USB-	IN/OUT	-
4	USB+	IN/OUT	-
5	USB GND	SG	-
6	TTL-TXD	OUT	-
7	TTL-RXD	IN	-
8	LED POWER	OUT	LED Drive Line (anode)
9	24V DC (POWER)	POWER	+24V DC Power
10	RS232C GND	SG	-
11	TXD	OUT	-
12	I/F + 12V DC	IN	Interface Power Supply (+12VDC)
13	Vbus	IN	-
14	JP+	IN/OUT	-
15	TTL-G	SG	-
16	LED-	IN	LED Drive Line (cathode)
17	ccTalk (P)	IN/OUT	ccTalk Communication Power Supply Line
18	POWER GND	POWER	Power Ground (0V DC)
19	I/F GND	SG	-
20	RXD	IN	-
21	DET-GND	IN	Connect to DET (Pin-22)
22	DET	OUT	Connect to DET GND (Pin-21)
23	JP-	IN/OUT	-
24	SU SELECT	IN	SS/SU Selection‡
25	ccTalk (S)	IN/OUT	ccTalk Communication Signal Line
26	POWER GND	POWER	Power Ground (0V DC)

*. I/O (Input/Output) Terminal as viewed from outside the Banknote Acceptor.

†. SG = Signal Ground.

‡. No Connection = SS Version, Connect to any unused SG (Pin #10, Pin #15 or Pin #19) = SU Version.

Connector Pin Assignments (Continued 4)

Table 2-10 lists the iVIZION SS/LD TTL Connector Pin Assignments.

Table 2-10 iVIZION SS/LD TTL Connector Pin Assignments

Pin No.	Signal Name	I/O* †	Function
1	24V DC (POWER)	POWER	+24V DC Power
2	M-RESET	IN	Banknote Acceptor Master Reset Input Signal Line
3	USB-	IN/OUT	-
4	USB+	IN/OUT	-
5	USB GND	SG	-
6	TTL-TXD	OUT	TTL Communication Output Signal Line
7	TTL-RXD	IN	TTL Communication Input Signal Line
8	LED POWER	OUT	LED Drive Line (anode)
9	24V DC (POWER)	POWER	+24V DC Power
10	RS232C GND	SG	-
11	TXD	OUT	-
12	I/F + 12V DC	IN	Interface Power Supply (+12VDC)
13	Vbus	IN	-
14	JP+	IN/OUT	-
15	TTL-G	SG	-
16	LED-	IN	LED Drive Line (cathode)
17	ccTalk (P)	IN/OUT	-
18	POWER GND	POWER	Power Ground (0V DC)
19	I/F GND	SG	-
20	RXD	IN	-
21	DET-GND	IN	Connect to DET (Pin-22)
22	DET	OUT	Connect to DET GND (Pin-21)
23	JP-	IN/OUT	-
24	SU SELECT	IN	SS/SU Selection‡
25	ccTalk (S)	IN/OUT	-
26	POWER GND	POWER	Power Ground (0V DC)

* I/O (Input/Output) Terminal as viewed from outside the Banknote Acceptor.

† SG = Signal Ground.


‡ No Connection = SS Version, Connect to any unused SG (Pin #10, Pin #15 or Pin #19) = SU Version.

Connector Pin Assignments (Continued 5)


Table 2-11 lists the iVIZION SS/LD Bezel Connector Pin Assignments.

Table 2-11 iVIZION SS/LD Bezel JPL (CN7) Connection Pin Assignments

Front Side View



CN7



Polarizing Pin Connector

Box Pin Header (Control CPU Board Side): A3B-8PA-2DS (61) (HRS) JCM Custom
Socket Housing (Bezel Side): A3B-8D-2C (HRS)
Contact Type (Bezel Side): A3B-2630SCFC (HRS)
Polarizing Pin: A3-GPIN (HRS)
Recommended Wire: UL1007 AWG#24~30

Pin No.	Signal Name	I/O†	Function
1	JP+	IN/OUT	-
2	-	-	Polarizing Pin Key
3	JP-	IN/OUT	-
4	5V DC	OUT	5V DC Power Supply (Maximum 300mA)
5	VIN	OUT	LED Drive Power Supply 12V DC/24V DC (Maximum 300mA)
6	GND	SG	-
7	LED POWER	OUT	LED Power Supply 5V (Maximum 20mA Current Limitation Resistance)
8	LED 1	IN	LED Drive Line (cathode) Maximum Sink Current: 300mA

*. Caution: The Embossed Numbers located on the Polarizing Pin Connector, and on the CN7 Connector Numbers indicated in Table 2-11 are different. The Polarizing Pin Key should be inserted into Pin Position No.4 of the Polarizing Pin Connector.

†. I/O (Input/Output) Terminal as viewed from outside the Banknote Acceptor.

Preventive Maintenance

Retrieving Banknotes

To retrieve Cash Box deposited Banknotes perform the following steps:

1. Release the Cash Box from the Frame and pull it forward.
2. Unlock the Cash Box with a User supplied Key.
3. Open the Cash Box Door and retrieve deposited Banknotes as illustrated in Figure 2-7.

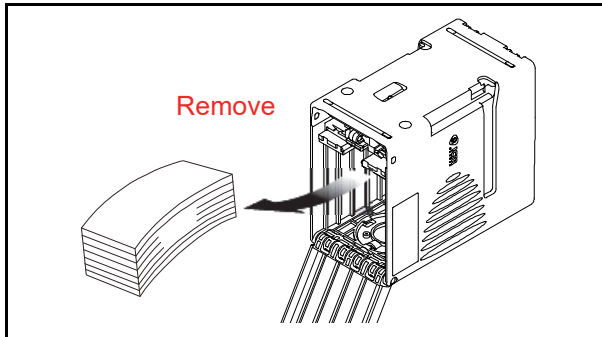


Figure 2-7 Retrieving Banknote

Clearing a Banknote Jam

To retrieve a jammed Banknote jammed inside the Banknote Acceptor Head proceed as follows:

1. Open the Acceptor Unit's Upper Guide by pressing in on the two (2) Upper Guide Access Buttons (Figure 2-8 a) located on each side of the Upper Guide, and lift the Acceptor top up and open and remove the jammed Banknote.
2. If the jammed Banknote is not found in the Acceptor Unit, then
3. Open the Transport Unit's Upper Guide by pressing in on the Upper Guide Access Lever (Figure 2-8 b) located in the center of the Upper Guide, and lift the Transport Section up and open and remove the jam.

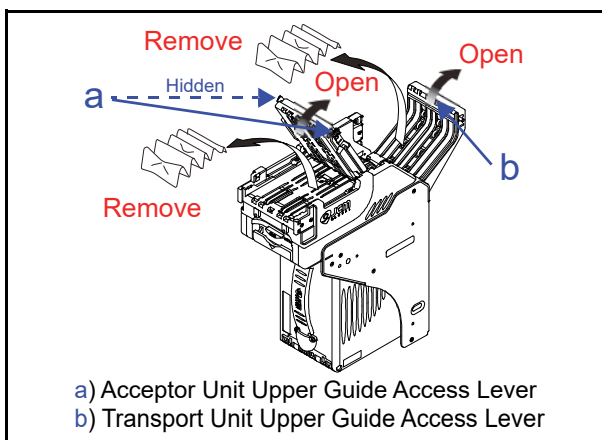


Figure 2-8 Open the Upper Guides

4. If the jammed Banknote is not found in the higher Sections, pull the Cash Box out of the Frame (Figure 2-9 a). Check at the rear side of the Frame and remove the jammed Banknote located there if any (Figure 2-9 b).

5. A jammed Banknote may also be present on top of the Cash Box; remove it if present at this location (Figure 2-9 c).

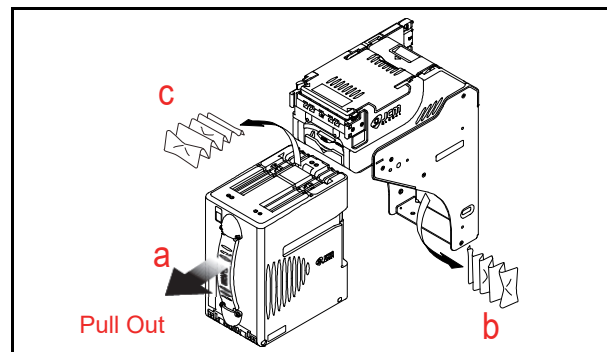


Figure 2-9 Retrieving Cash Box Banknote Jam

Cleaning Procedure

To clean the lenses, use a lint-free, Micro-Fiber Cloth and a mild non-abrasive detergent such as liquid dish soap mixed with water to wipe the dirt from the Lenses. It is important to keep the Banknote Path, Rollers, and Belts clean. Use a soft-lint free, Micro-Fiber Cloth or a Cotton Swab to wipe dirt and stains from the surfaces of the Optical Sensors, Rollers and Belts. The Sensor Lenses are transparent, and made of a polymer material; Handle them with care. When the Unit is exposed to liquid such as water, wipe and dry the wet areas immediately. Repeat the cleaning process as needed until the Transport Path is free of contaminants.



Caution: Do not allow any fluid to remain on internal components, especially on the Anti-String Mechanism and in the Feed-in Sensor's grooved areas.

Sensor Cleaning Procedure

1. Turn the iVIZION Unit Power OFF.
2. Clean the Sensors and lenses in the Acceptor Unit, the Transport Unit and on the Cash Box itself. If necessary, remove each Unit and/or open their Upper Guides for cleaning. See Figure 2-12 and Table 2-12 to locate all cleaning locations.



Caution: Do not use Alcohol, thinner or citrus based products for cleaning any Banknote transport Sensors or surfaces. The lenses can become clouded by chemical evaporation residue that may cause acceptance errors.



NOTE: When closing the Acceptor or Transport Unit's Upper Guides, ensure that they click firmly into place when being closed. Also, when reassembling the iVIZION Unit, ensure that it re-seats correctly into place when the reassembly is complete.

iVIZION Optional LD Version Unit Installation

Mounting holes are provided in the LD Frame Unit to attach the iVIZION LD Unit to a related Machine during installation. Perform the following steps to install the iVIZION LD Version Unit into the related Machine's Frame configuration:

1. Install the Interface Harness to the Frame Grounding Plate (FG PLT) (Figure 2-10 a) using the two (2) Floating Collars (Figure 2-10 b₁ & b₂), the related single (1) M2.6x12 W Washer Screw (Figure 2-10 c), the single (1) M2.6x10 W Washer Screw (Figure 2-10 d) and the single (1) M2.6 Nylon Nut (Figure 2-10 e) onto the upper Frame Assembly Bracket. See the Figure 2-10 circled inset to visually see the completed assembly as required.

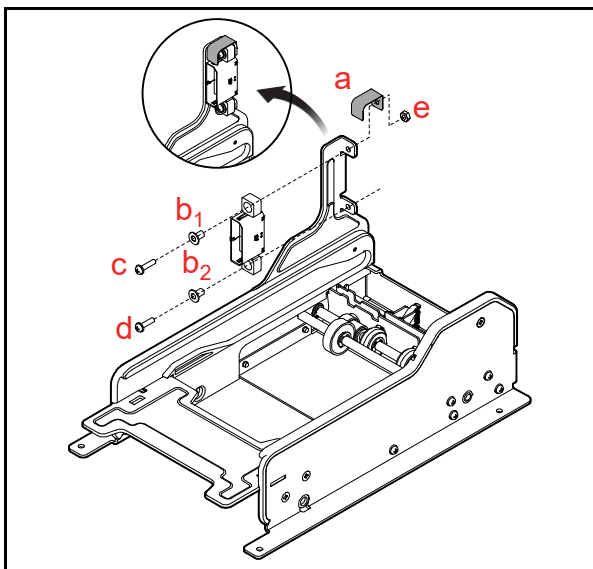


Figure 2-10 Interface Harness Installation Location

2. Bolt the bottom side of the iVIZION LD Frame into its intended Machine's location using four (4) M3x6 Screws on both bottom sides of the Frame (2 Screws on each side as shown in Figure 2-11).

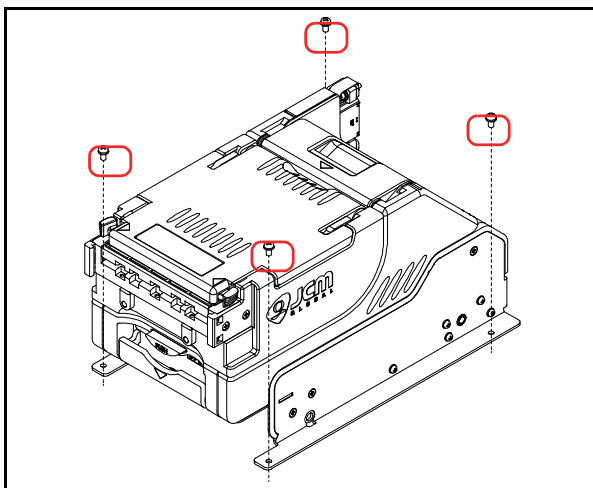


Figure 2-11 M3 Screws Locations

iVIZION Sensor Locations

Figure 2-12 illustrates and Table 2-12 lists the iVIZION Sensor and Sensor Lens locations.

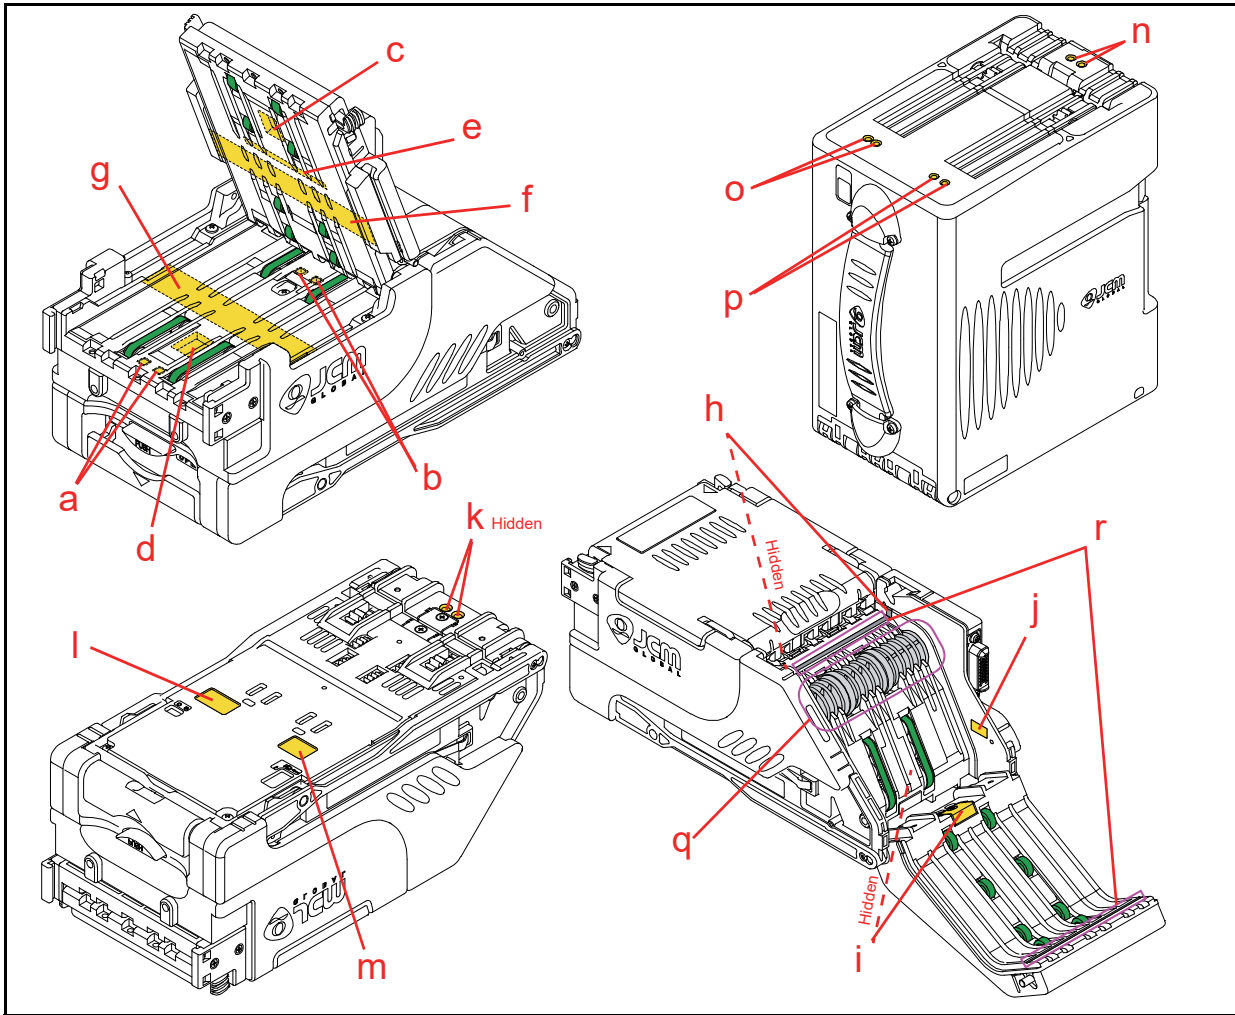


Figure 2-12 iVIZION Sensor Cleaning Locations

Table 2-12 iVIZION Sensor Cleaning Location Types

Sym.	Sensor	Cleaning Method
a	Entrance Sensors	Wipe area clean using a lint-free cloth such as a Micro-Fiber Cloth, or blow clean using Compressed Air.*
b	Exit Sensors	
c	UV Sensor (Upper)	
d	UV Sensor (Lower)	
e	Transmissive Sensor	
f	CIS (Upper)	
g	CIS (Lower)	
h	Feed-in Sensors	
i	Feed-out Sensors	
j	Home Position Sensor	
k	Home Position Sensor Lens	
l	Nearly Full Sensor	
m	Cash Box Sensor	
n	Home Position Sensor Lens	
o	Cash Box Sensor Lens	
p	Nearly Full Sensor Lens	
q	Anti-Stringing Mechanism	
r	Feed-in Sensor's Comb Grooves	

*. Use only non-flammable compressed air.

Standard Interface Circuit Schematics

Figure 2-13 illustrates the iVIZION USB Circuit Interface Schematic Diagrams.

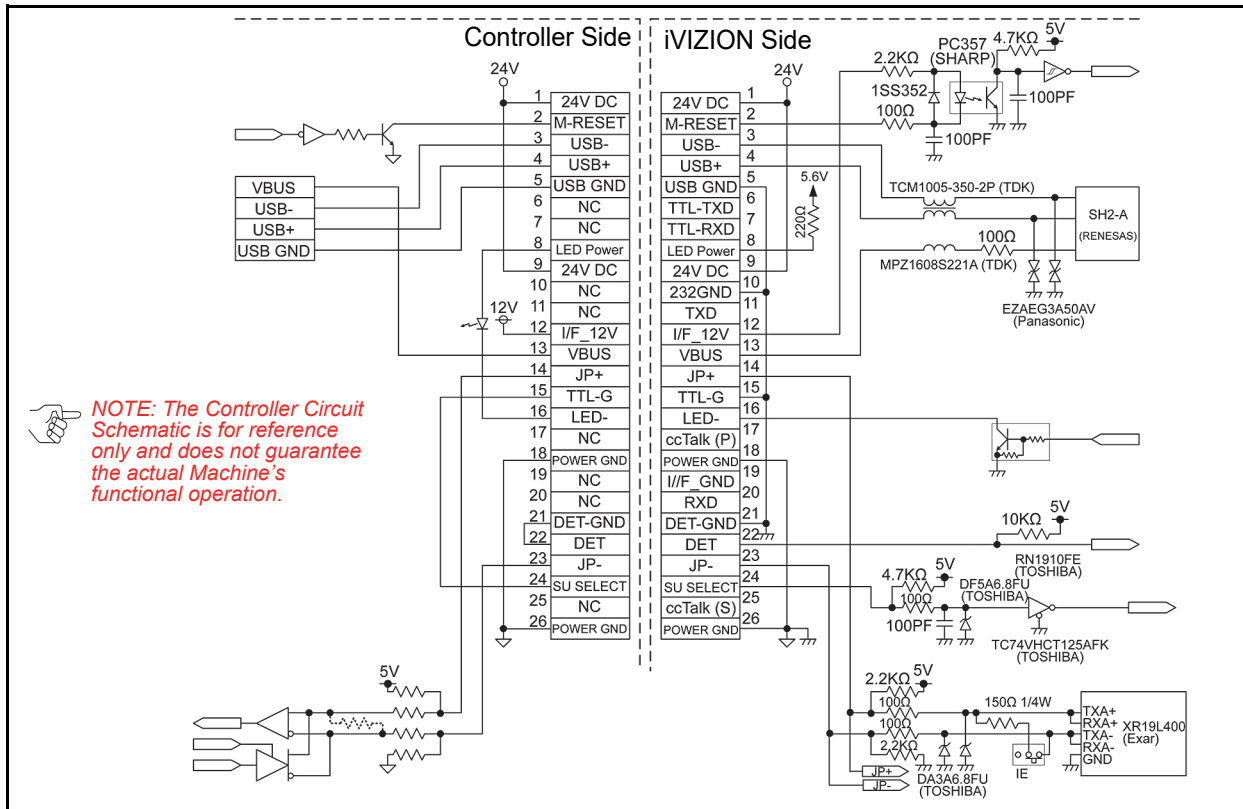


Figure 2-13 iVIZION USB Circuit Interface Schematic Diagram

Figure 2-14 illustrates the iVIZION Photo-Coupler Isolation Circuit Interface Schematic Diagrams.

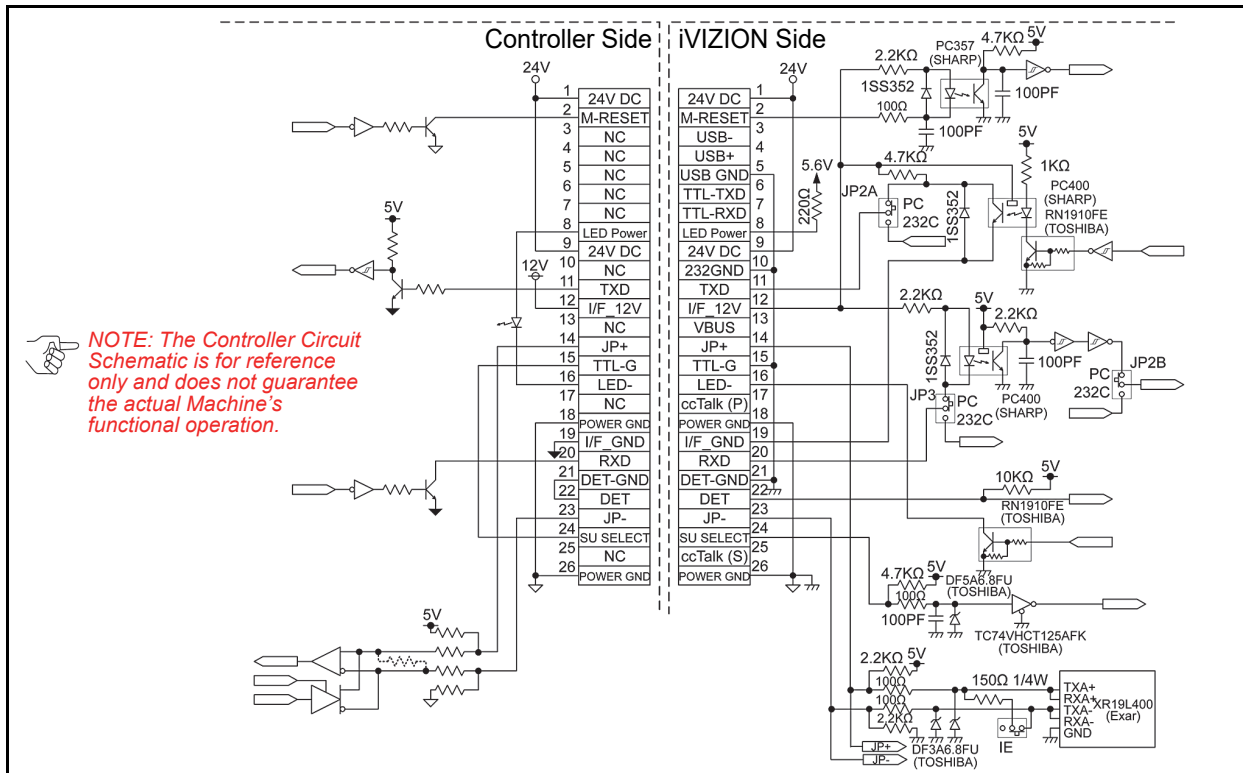


Figure 2-14 iVIZION Photo-Coupler Circuit Interface Schematic Diagram

Interface Circuit Schematics (Continued 1)

Figure 2-15 illustrates the iVIZION RS232C Circuit Interface Schematic Diagrams.

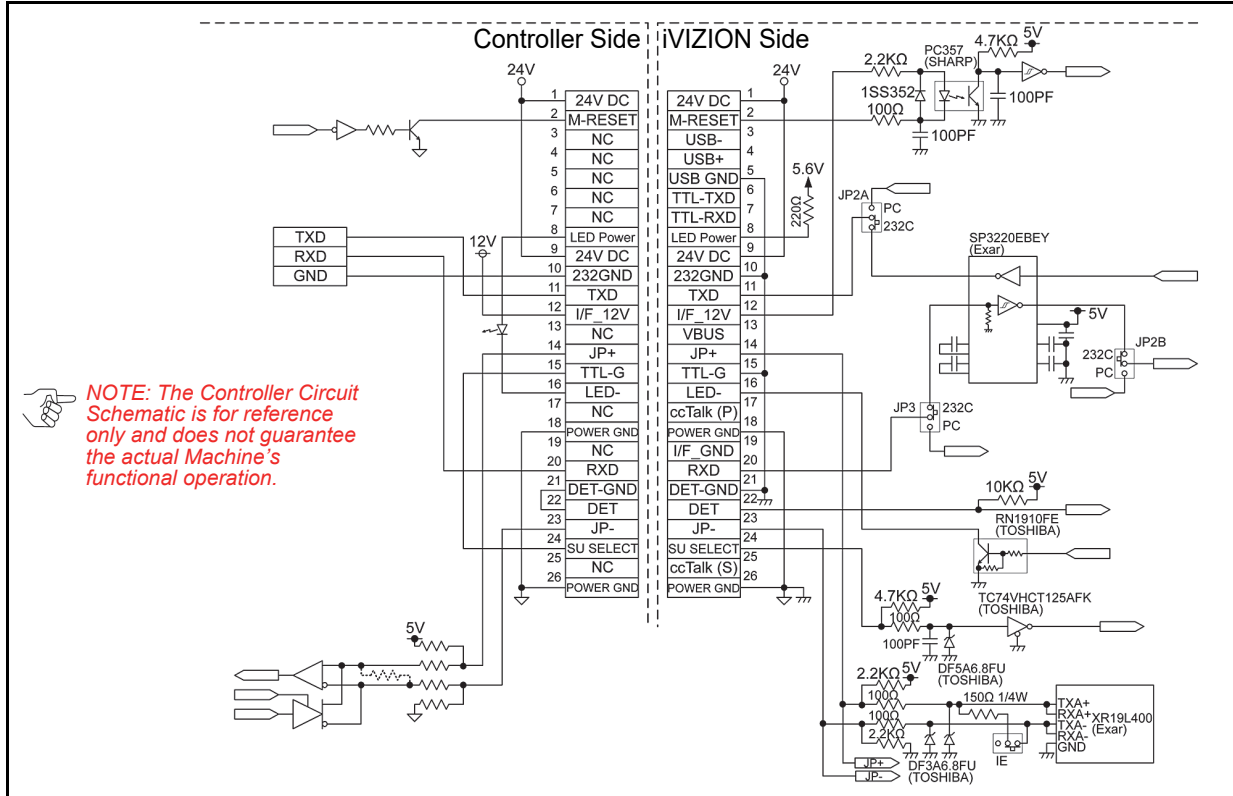


Figure 2-15 iVIZION RS232C Circuit Interface Schematic Diagram

Figure 2-16 illustrates the iVIZION ccTalk Circuit Interface Schematic Diagrams.

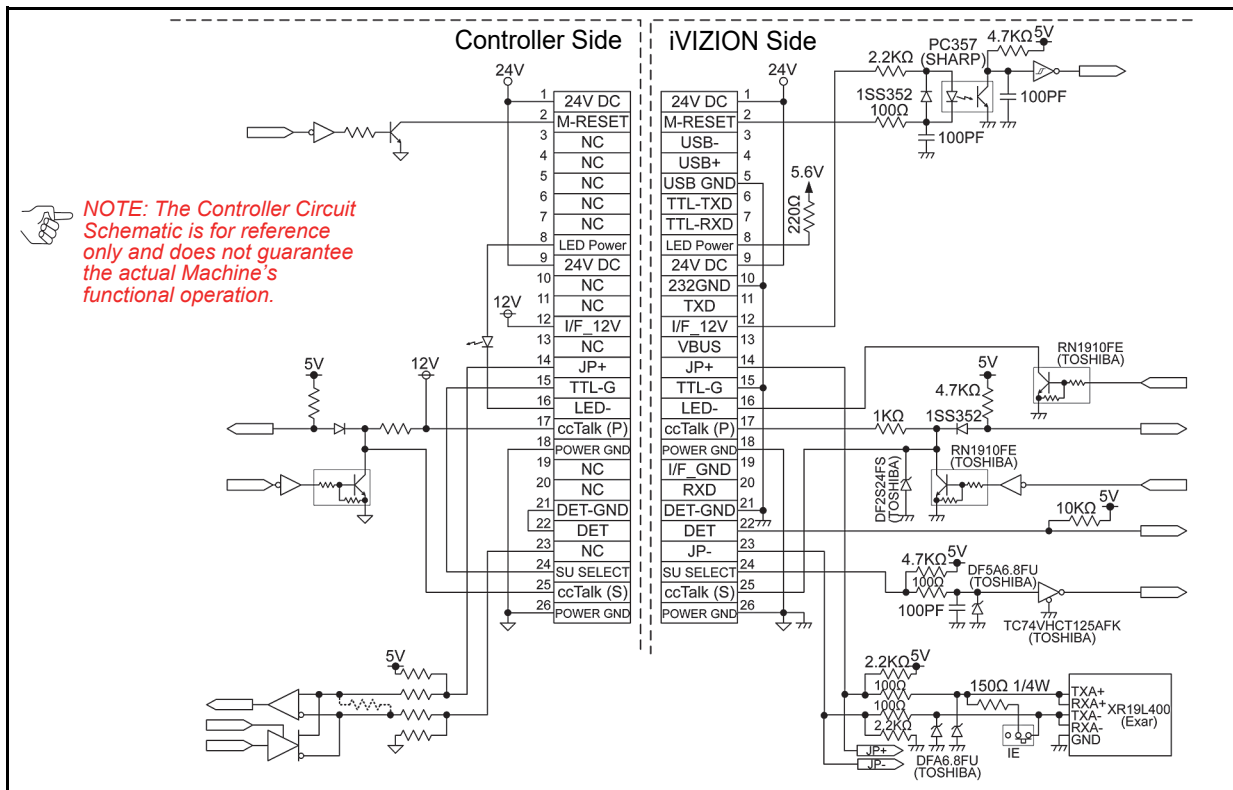


Figure 2-16 iVIZION ccTalk Circuit Interface Schematic Diagram

Interface Circuit Schematics (Continued 2)

Figure 2-17 illustrates the iVIZION TTL Circuit Interface Schematic Diagrams.

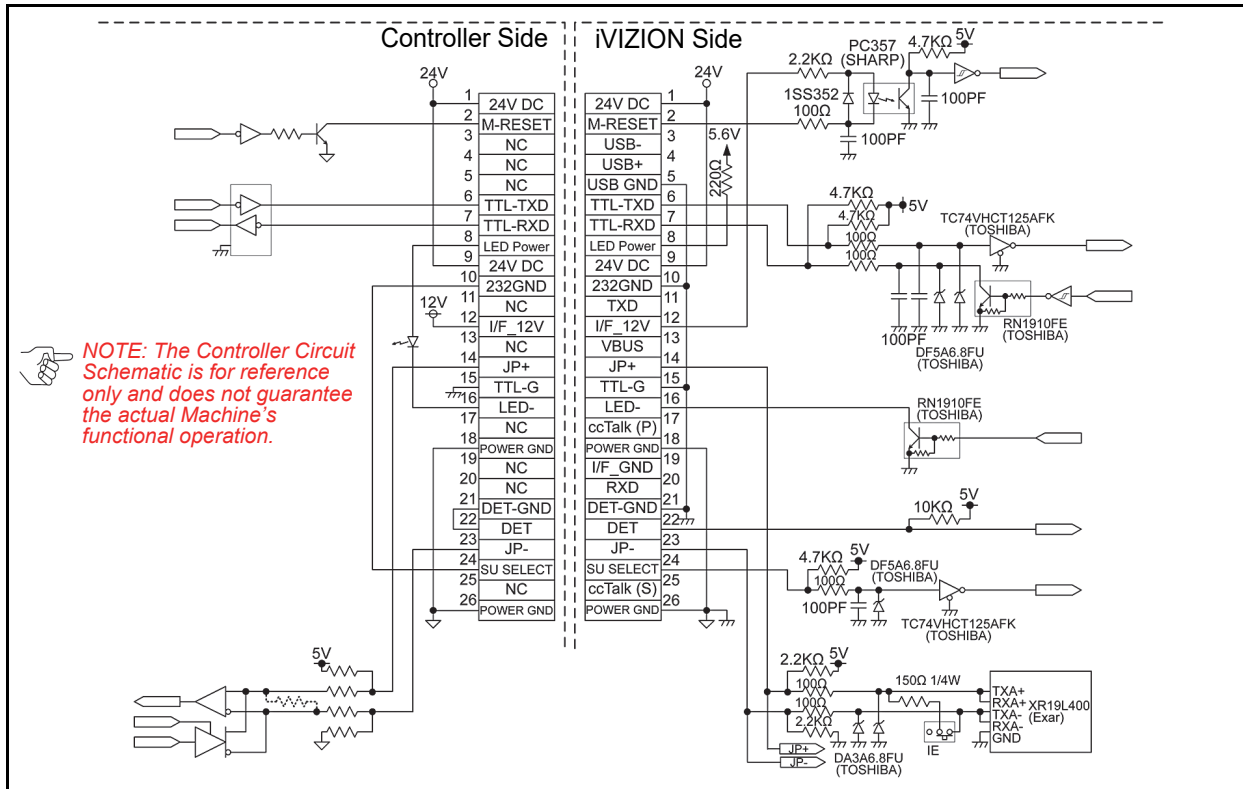


Figure 2-17 iVIZION TTL Circuit Interface Schematic Diagram

Interface Circuit Schematics (Continued 3)

Figure 2-18 illustrates the iVIZION LED Circuit Interface Schematic Diagrams.

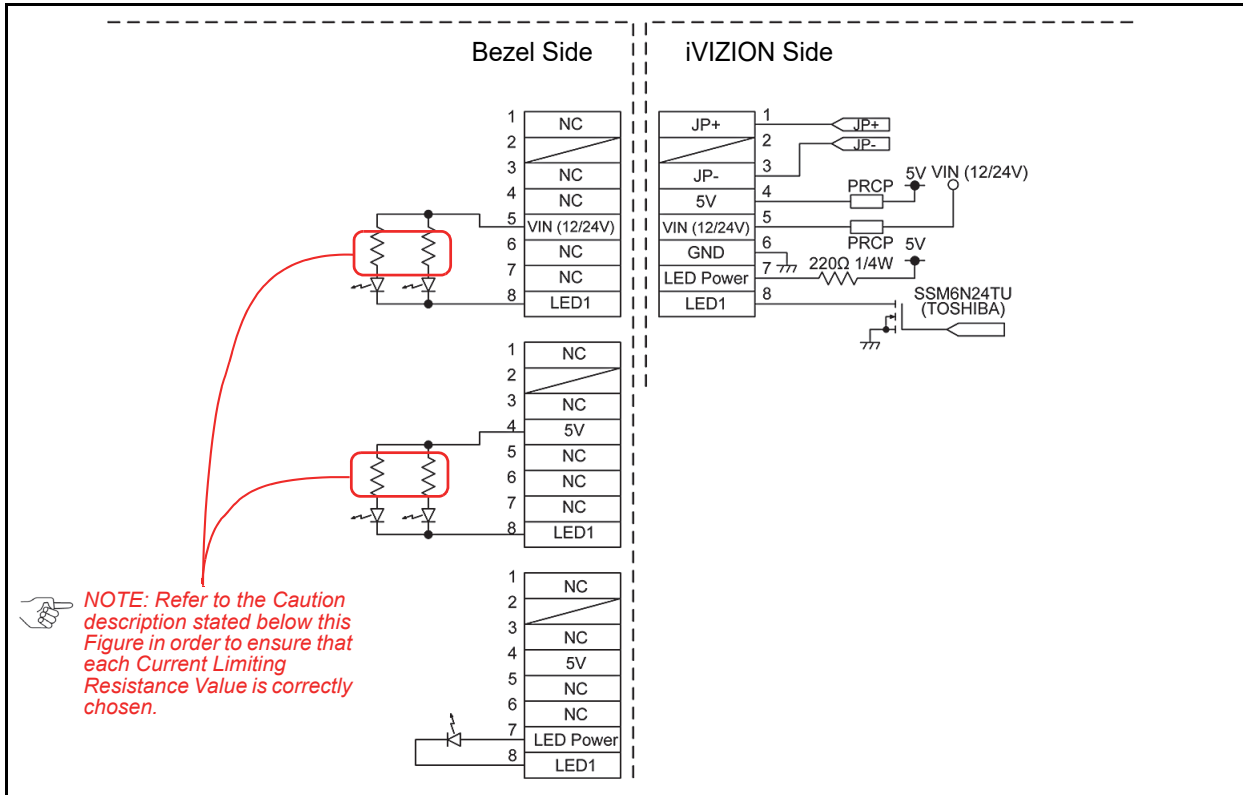


Figure 2-18 iVIZION LED Circuit Interface Schematic Diagram



Caution: Select the Current Resistance Limitation Variable depending on the Voltage at the 5th pin connected to the Machine's input Power Supply.

- Maximum Output Supply
 - 4th pin: 5V 300mA
 - 5th pin: VIN 300mA
 - 7th pin: LED Power 20mA
- Maximum Sink Current
 - 8th pin: LED1 300mA

Operational Flowcharts

Figure 2-19 depicts a typical iVIZION SS/LD Banknote acceptance flow process (Initialization).

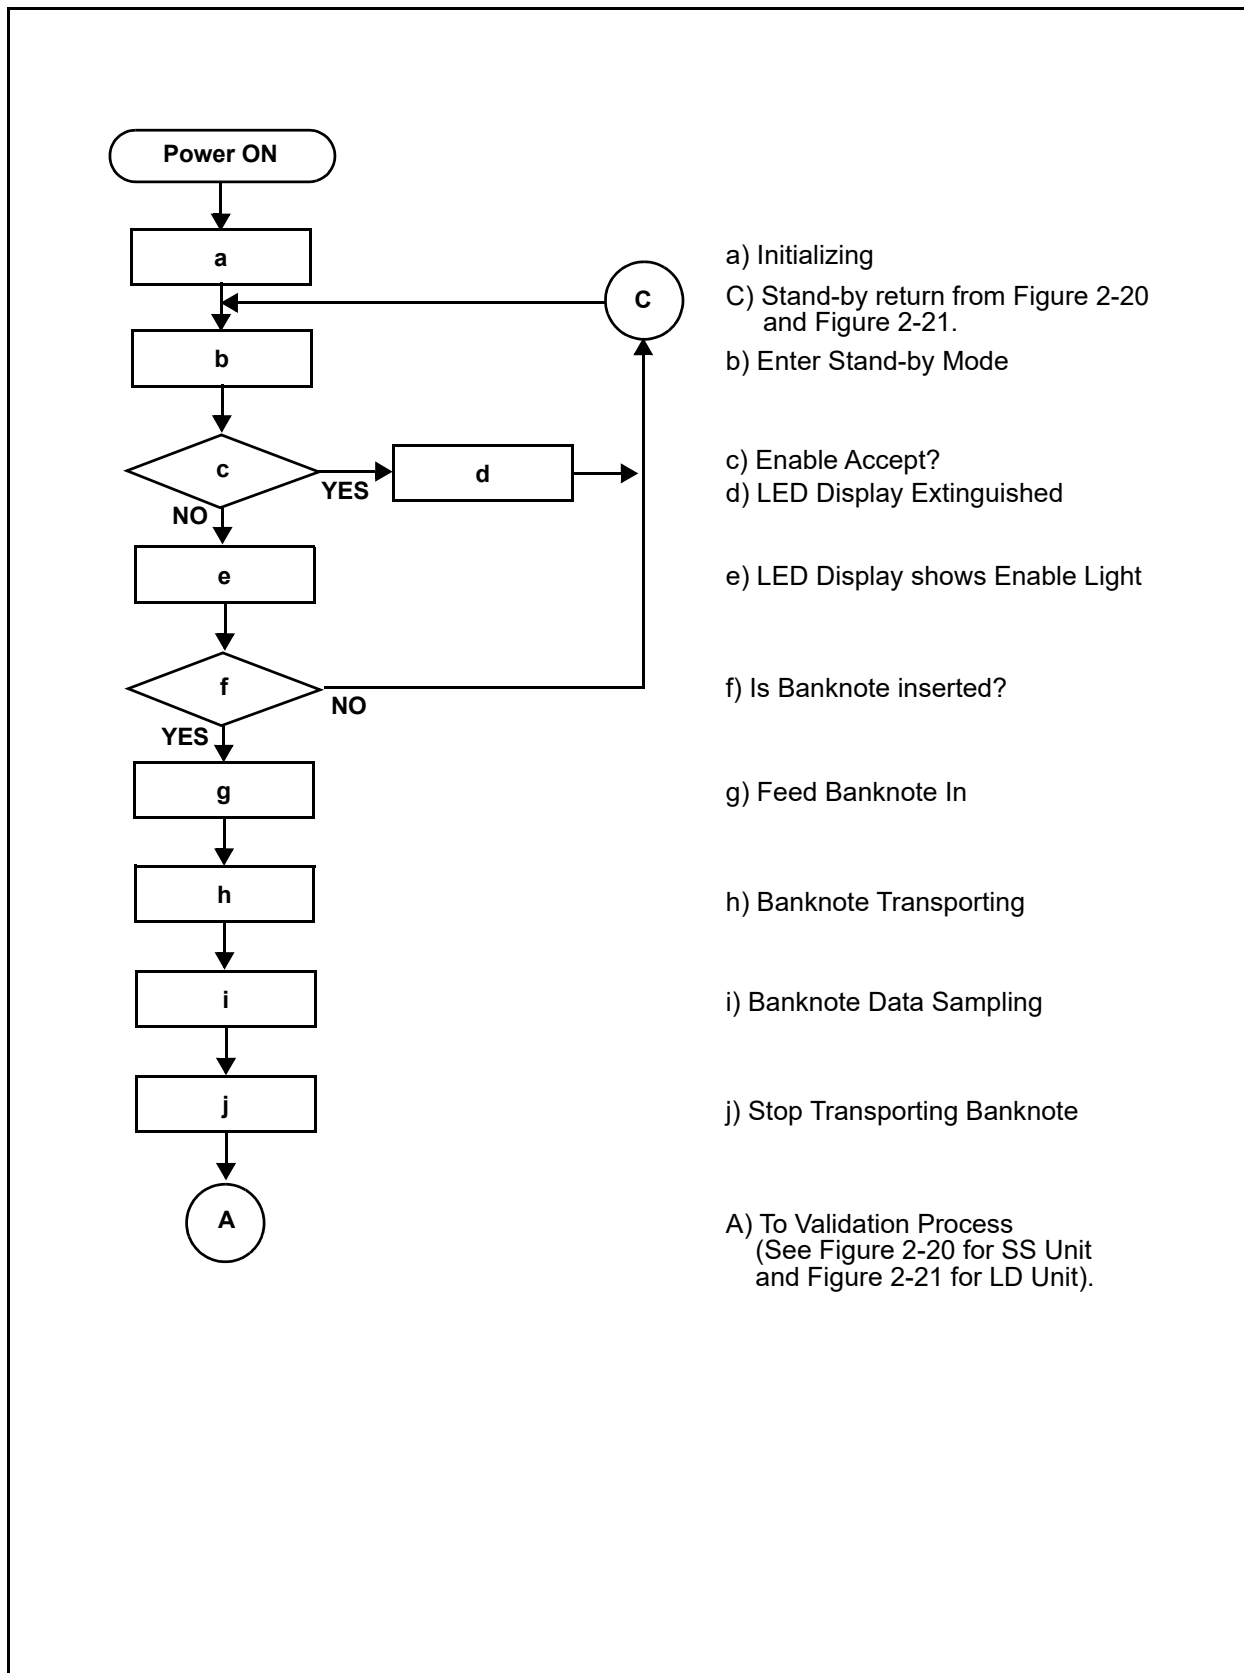


Figure 2-19 iVIZION SS/LD Banknote Acceptor Operational Flowchart (Initializing)

Operational Flowchart (Continued 1)

Figure 2-20 depicts a typical iVIZION SS Banknote flow process (Validation).

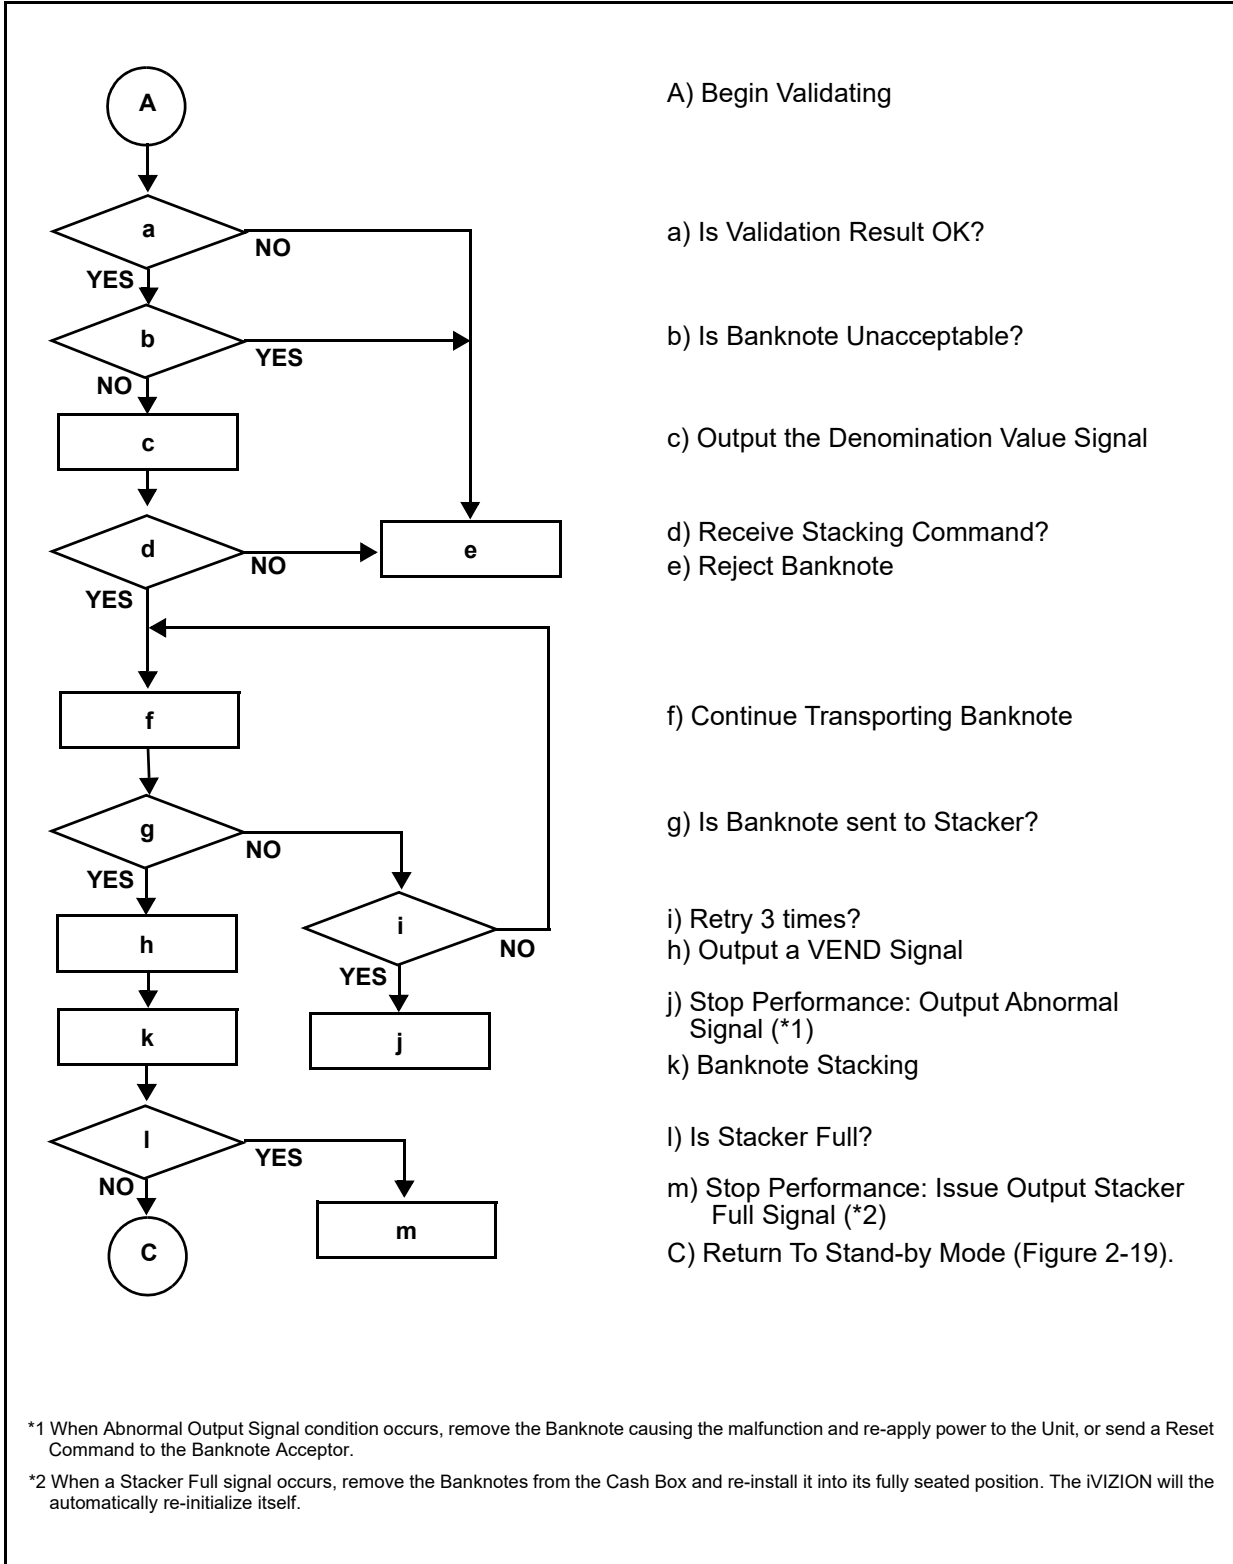


Figure 2-20 iVIZION SS Banknote Acceptor Operational Flowchart (Part 1 - Validating)

Operational Flowchart (Continued 2)

Figure 2-21 depicts a typical iVIZION LD Banknote flow process (Validation).

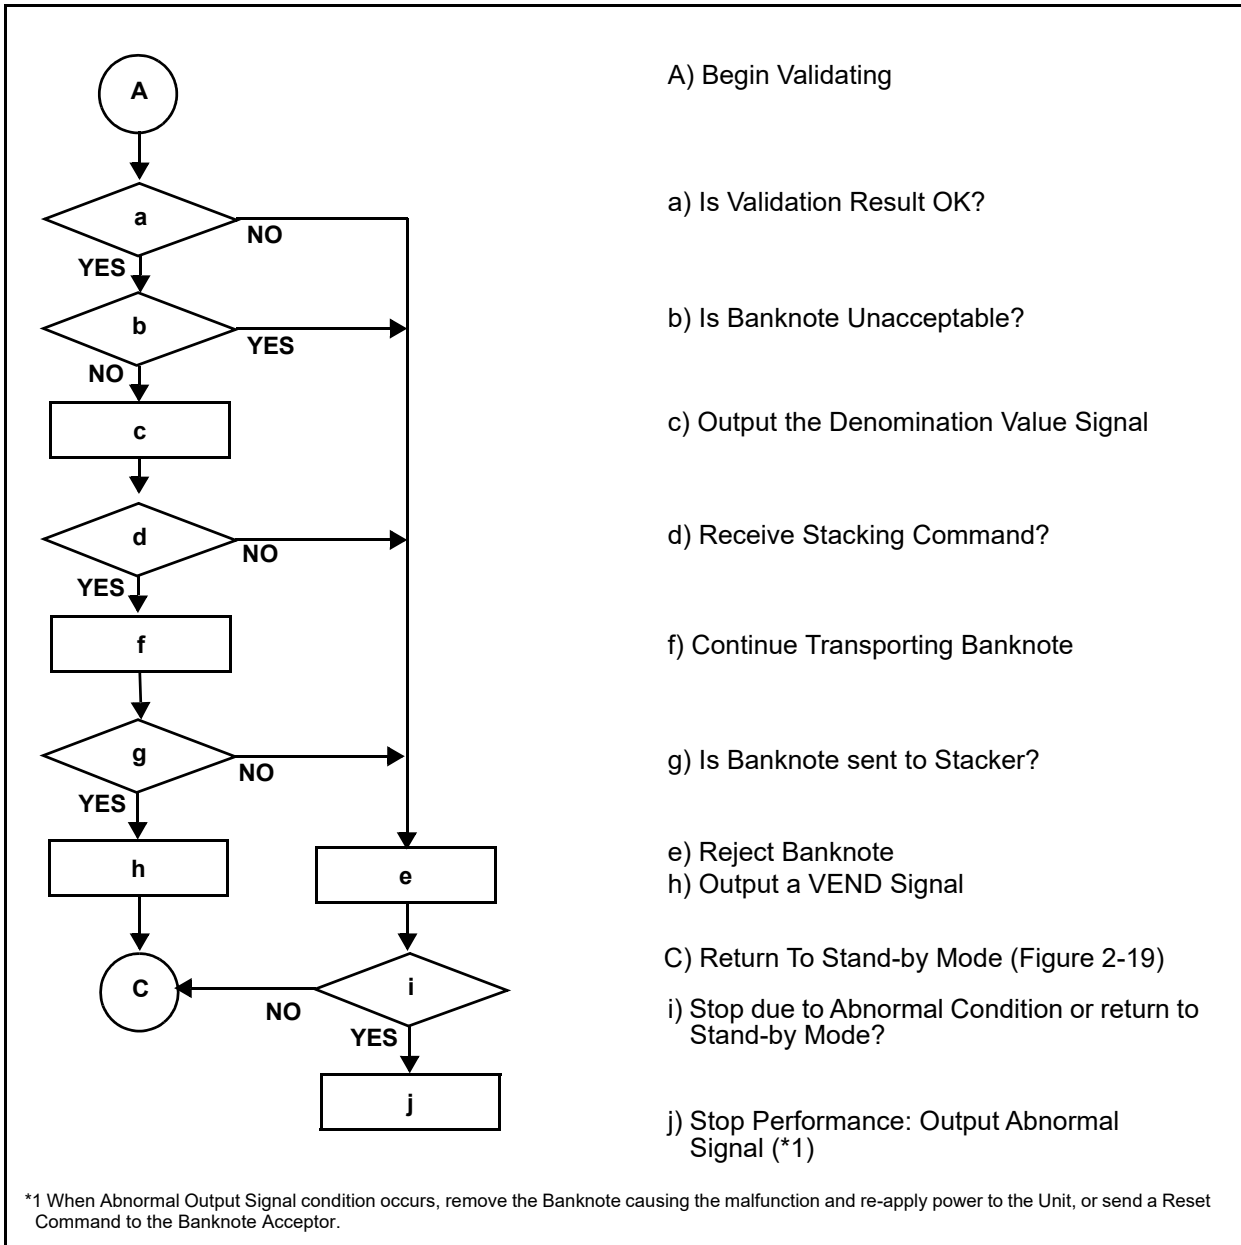


Figure 2-21 iVIZION LD Banknote Acceptor Operational Flowchart (Part 2 - Validating)

THIS PAGE INTENTIONALLY LEFT BLANK

iVIZION™ Series

Next-Generation Banknote Acceptor Unit

Section 3

3 COMMUNICATIONS

This section was intentionally left out due to a Non-Disclosure Agreement requirement.

If this information is required, please contact the closest office location listed below:

Americas

JCM American

Phone: +1-702-651-0000

Fax: +1-702-644-5512

925 Pilot Road,
Las Vegas, NV 89119

E-mail: support@jcmglobal.com

Europe, Middle East, Africa & Russia

JCM Europe GmbH

Phone: +49-211-530-645-60

Fax: +49-211-530-645-65

Mündelheimer Weg 60
D-40472 Düsseldorf Germany

E-mail: support@jcmglobal.eu

UK & Ireland

JCM Europe (UK Office)

Phone: +44 (0) 190-837-7331

Fax: +44 (0) 190-837-7834

Luminous House, 300 South Row,
Milton Keynes MK9 2FR,
United Kingdom

E-mail: support@jcmglobal.eu

Asia and Oceania

JCM American (Australia Office)

Phone: +61-2-9648-0811

Fax: +61-2-9647-1438

Unit 21, 8 Avenue of the Americas Newington,
NSW 2127 Australia

E-mail: sales-asiapac@jcmglobal.com

JAPAN CASH MACHINE CO., LTD.(HQ)

Phone: +81-6-6703-8400

Fax: +81-6-6707-0348

2-3-15, Nishiwaki, Hirano-ku, Osaka 547-0035
JAPAN

E-mail: Shohin@jcm-hq.co.jp

The JCM Website for all locations is:

<http://www.jcmglobal.com>

THIS PAGE INTENTIONALLY LEFT BLANK

iVIZION™ Series

Next-Generation Banknote Acceptor Unit

Section 4

4 DISASSEMBLY/REASSEMBLY

This section provides disassembly and reassembly instructions for the iVIZION™ Series Next-Generation Banknote Acceptor Unit (iVIZION). This section contains the following information:

- Tool Requirements
- Pusher Unit Timing Belt Removal
- Home Position Sensor Board/Home Position Sensor FFC & Interface Connector Board Removals
- RFID Module & RFID Harness Removals
- Validation CPU & Controller CPU Board Removals
- USB FPC/Power FPC & Interface FPC Cable Removals
- Validation Unit Harness Removal
- Interrupter Board Removal
- Motor Unit Timing Belt Removal
- Stacker Motor & Transport Motor Removals
- Bezel Hold Chips A/B Removals
- Sensor Transfer Board/CIS FFC/Transmissive Light FFC & Upper UV FPC Sensor Removals
- Validation Sensor Board Assembly Removal
- Validation Sensor FPC Cable Removal
- CIS/Transmissive Light/Upper UV Sensor Removals
- CIS/CIS FPC/Lower UV Sensor & Lower UV FFC Removals
- Validation Unit Timing Belt Removal
- Reassembly Cautions.



NOTE: Calibration is required after reassembly. (Refer to "Calibration" on page 6-6.)

Tool Requirements

The following tools will be required to perform iVIZION disassembly and reassembly;

- #1 & #2 Phillips Screw Drivers
- #T6 "TORX" Brand Torque Wrench Driver
- #1 & #2 Torque Wrench Drivers
- Motor Gear Assembly Pressure Bar
- Pliers
- Tweezers

Pusher Unit Timing Belt Removal iVIZION Standard and Large Cash Box

To remove the Timing Belt proceed as follows:

1. Remove the Cash Box from the iVIZION Unit.
2. Open the Cash Box Door.
3. Remove the two (2) screws (Figure 4-1 **a₁** & **a₂**) securing the Pusher Mechanism Unit to the Cash Box.

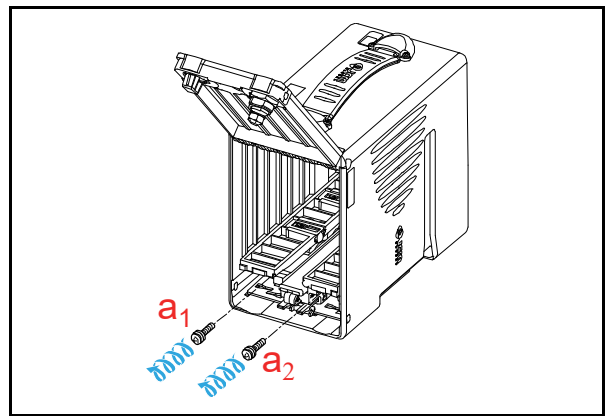


Figure 4-1 Pusher Mechanism Screws Removal

4. While pulling upward on the Door Latch Stoppers (Figure 4-2 **a₁** & **a₂**) of the Pusher Mechanism Unit (Figure 4-2 **b**), slide it forward to remove the Pusher Mechanism Assembly out of the Cash Box.

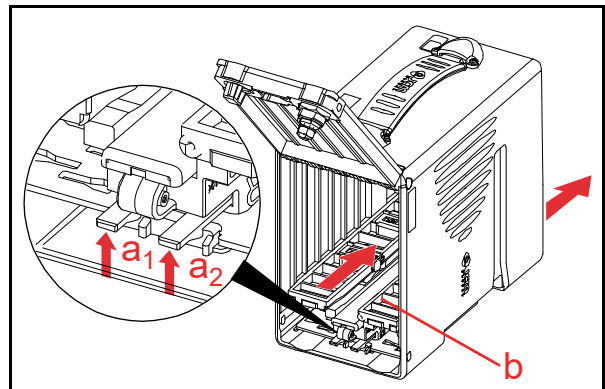


Figure 4-2 Pusher Mechanism Removal

5. Remove the four (4) screws (Figure 4-3 **a₁**, **a₂**, **a₃** & **a₄**) securing the Unit Cover in place (Figure 4-3 **b**), and remove the Unit Cover from the Pusher Mechanism Assembly.

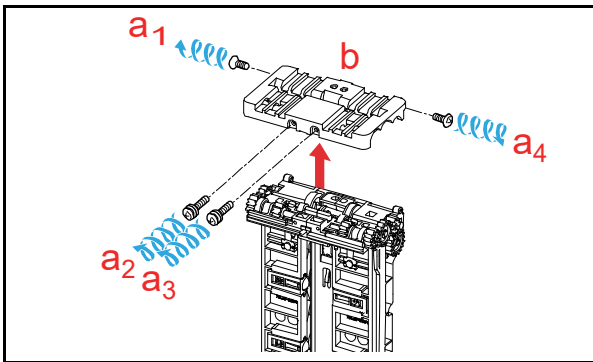


Figure 4-3 Pusher Mechanism Cover Removal

- Remove the two (2) Flat Springs, the single (1) Stacker Guide (Figure 4-4 a), the single (1) Pin 0360 (Figure 4-4 b), the two (2) Rollers (Figure 4-4 c₁ & c₂) and the single (1) related pressure Coil Spring (Figure 4-4 d) from the Pusher Mechanism Assembly.

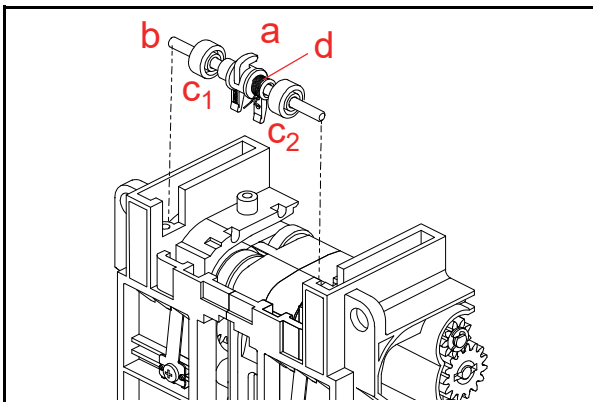



Figure 4-4 Stacker Guide Removal

-  **NOTE:** When reassembling the Stacker Guide (Figure 4-5 a), ensure that the Coil Spring (Figure 4-5 b) is replaced in the correct direction. When reinserting the Pin 0360, put it in place while lifting the Flat Leaf Springs upward; then install the screws securing each Flat Leaf Spring in place. Apply Screw Lock Compound to the head of each screw to secure.

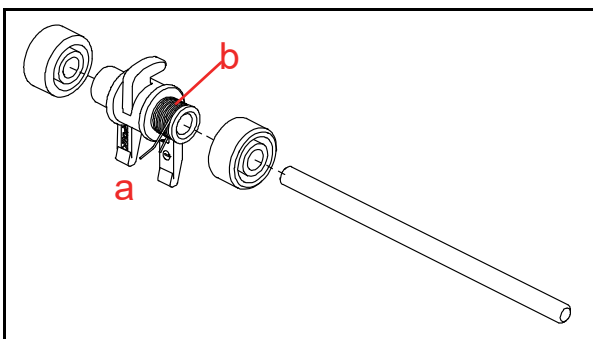



Figure 4-5 Stacker Guide Reassembly

- Remove the single (1) E-ring (Figure 4-6 a) and the single (1) Gear (Figure 4-6 b) located on the right side of the Transport Unit.

-  **NOTE:** Be careful that the parallel Pin (Figure 4-6 c) and the related Bushings (Figure 4-6 d₁ & d₂) are not lost when removed.

- Remove the three (3) Assembly Mounting Screws (Figure 4-6 e₁, e₂ & e₃) located on the right side of the Transport Unit, and remove the Right Frame Outer “R” Assembly (Figure 4-6 f) from the Transport Unit.

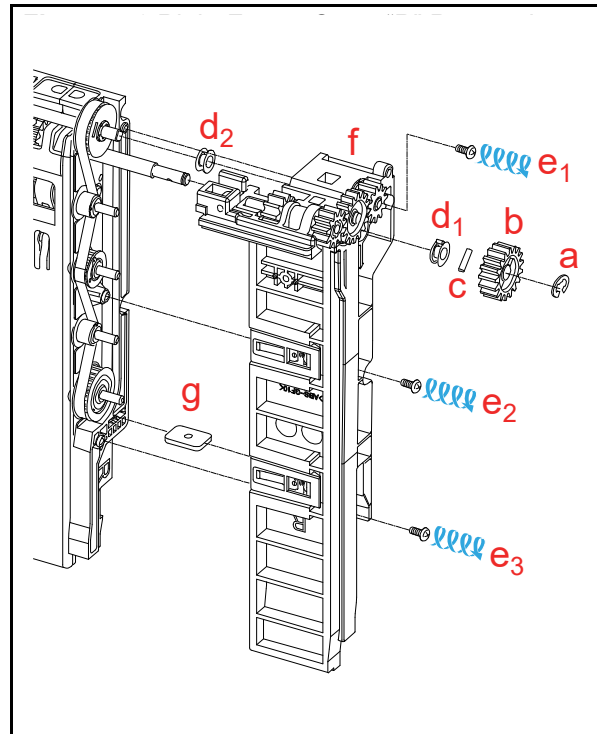




Figure 4-6 Right Frame Outer “R” Removal

-  **NOTE:** When replacing the Frame Outer “R” Assembly, ensure that the Plate Nut is correctly re-positioned (Figure 4-6 g).

- Remove the single (1) E-ring (Figure 4-7 a) and the two (2) Gears (Figure 4-7 b₁ & b₂) located on the left side of the Transport Unit.

-  **NOTE:** Be careful that the parallel Pin (Figure 4-7 c) and their related Bushings (Figure 4-7 d₁, d₂ & d₃) are not lost when removed.

- Remove the three (3) Assembly Mounting Screws (Figure 4-7 e₁, e₂ & e₃) and remove the Left Frame Outer “L” Assembly (Figure 4-7 f) from the Transport Unit.

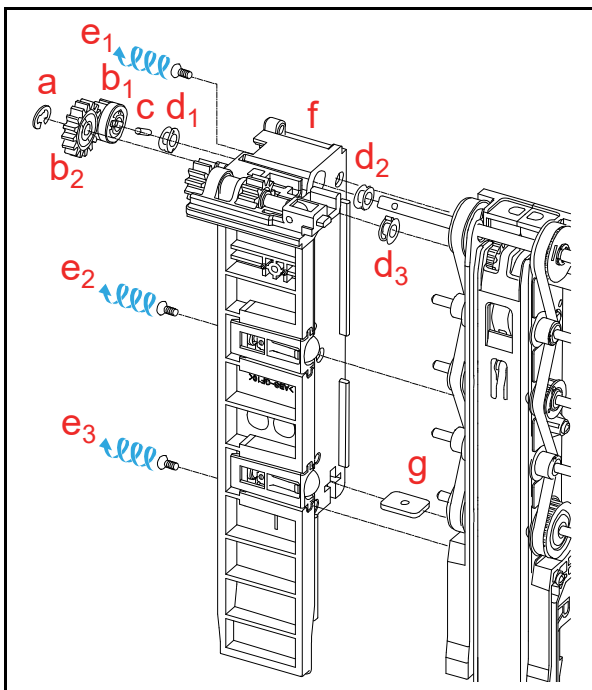



Figure 4-7 Left Frame Outer “L” Removal

 **NOTE:** When replacing the Frame Outer “L” Assembly, ensure that the Plate Nut is correctly re-positioned (Figure 4-7 g).

11. Remove the two (2) Timing Belts (Figure 4-8 a₁ & a₂) from the Transport Unit.

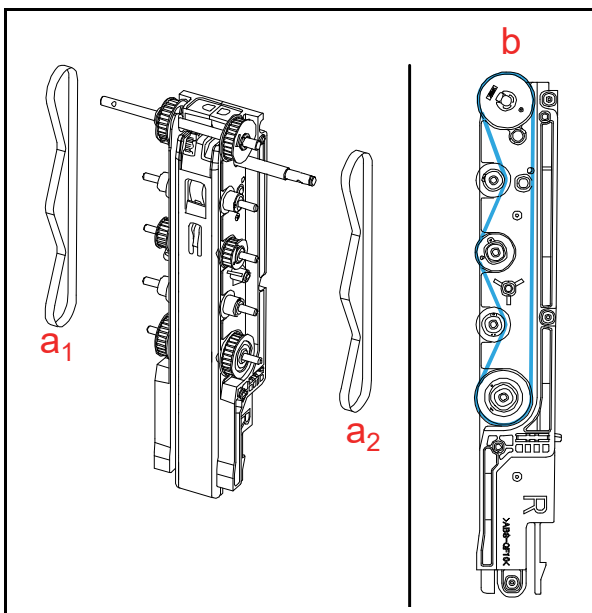



Figure 4-8 Timing Belt Removal

 **NOTE:** The Timing Belts should be replaced as illustrated in Figure 4-8b when reassembling the Unit. Be careful that the Pulleys and/or Rollers do not fall off during reassembly.

iVIZION HC Cash Box

To remove the Timing Belt proceed as follows:

1. Remove the Cash Box from the iVIZION Unit.
2. Open the Cash Box Door.
3. Remove the two (2) screws (Figure 4-9 a₁ & a₂) securing the Pusher Mechanism Unit to the Cash Box.
4. Slide the Pusher Mechanism Assembly (Figure 4-9 b) backward and remove the Pusher Mechanism Assembly out of the Cash Box

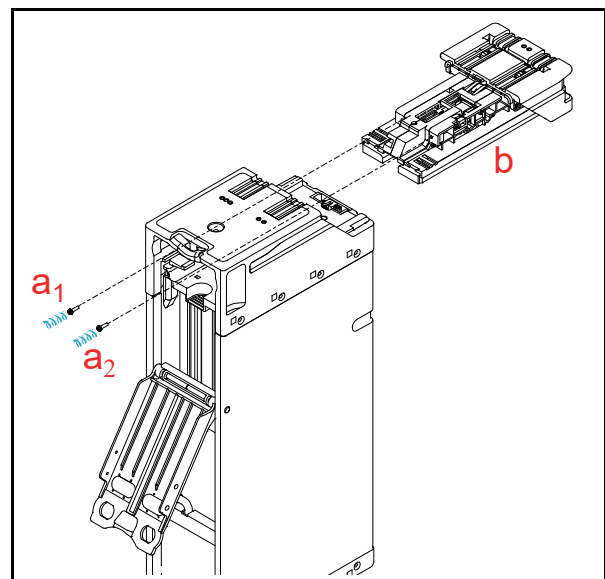


Figure 4-9 Pusher Mechanism Removal

5. Remove the four (4) screws (Figure 4-10 a₁, a₂, a₃ & a₄) securing the HC Box Stacker Base (Figure 4-10 b) in place, and remove the HC Box Stacker Base from the Pusher Mechanism Assembly.

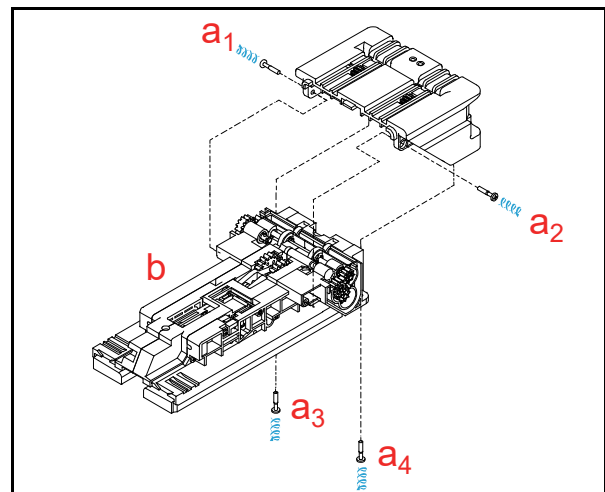


Figure 4-10 HC Box Stacker Base Removal

6. Remove the four (4) screws (Figure 4-11 a₁, a₂, a₃ & a₄) securing the Pusher Guide (Figure 4-11 b), and remove the guide from the Pusher Mechanism.

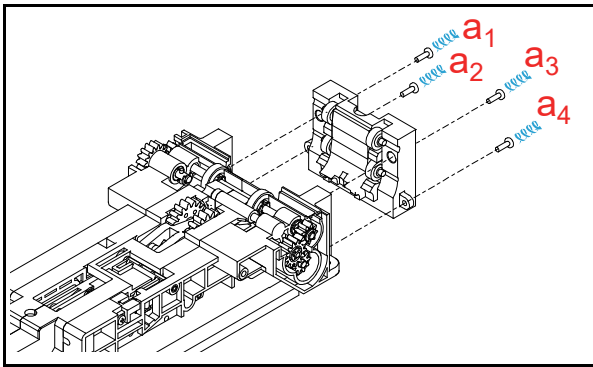


Figure 4-11 Pusher Guide Removal

- Remove the single (1) Stacker Guide (Figure 4-12 a), the single (1) Stacker Guide Sustainer (Pin 0360) (Figure 4-12 b), the two (2) Rollers (Figure 4-12 c₁ & c₂) and the single (1) related pressure Coil Springs (Figure 4-12 d) from the Pusher Mechanism Assembly.

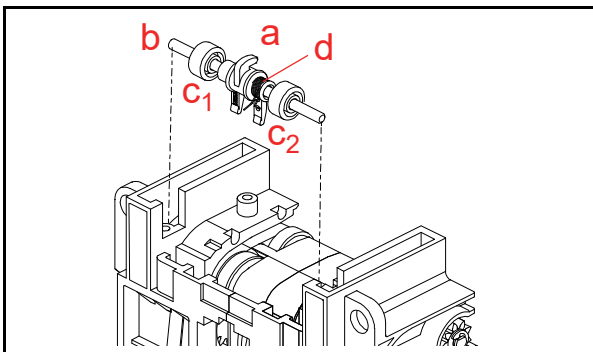



Figure 4-12 Stacker Guide Removal

 **NOTE:** When reassembling the Stacker Guide (Figure 4-13 a), ensure that the Coil Spring (Figure 4-13 b) is replaced in the correct direction.

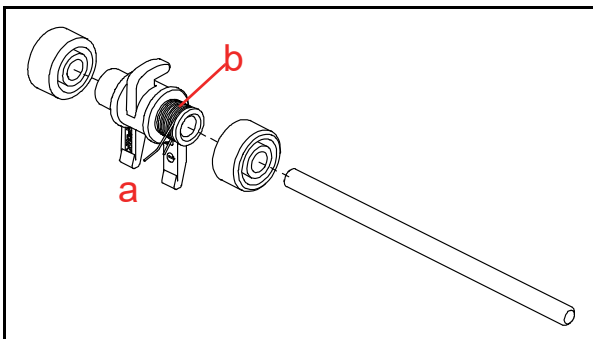



Figure 4-13 Stacker Guide Reassembly

- Remove the two (2) E-rings (Figure 4-14 a₁ & a₂) securing the two (2) Gears and then remove the three (3) Gears (Figure 4-14 b, c & d) on the right side of the Pusher Assembly.

 **NOTE:** Be careful that the parallel Pin (Figure 4-14 e), the bushing (Figure 4-14 f) and the E-ring (Figure 4-14 g) are not lost when removing them.

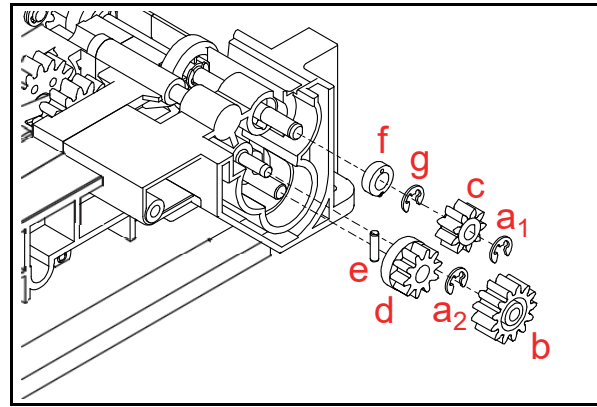




Figure 4-14 Outer Guide R Removal 1

- Remove the three (3) Assembly Mounting Screws (Figure 4-15 a₁, a₂ & a₃) and the Stacker Home Prism (Figure 4-15 b) located on the right side of the Pusher Assembly, and remove the Right Frame Outer R Assembly (Figure 4-15 c) from the Pusher Assembly.
- Remove the Stacker Home Lever (Figure 4-15 d) and the Plate Nut (Figure 4-15 e).

 **NOTE:** Be careful that the two bushings are not lost when removing them.

- Remove the single (1) Gear (Figure 4-15 f) from the Pusher Assembly.

 **NOTE:** Be careful that the single Parallel Pin (Figure 4-15 g) is not lost when removing it.

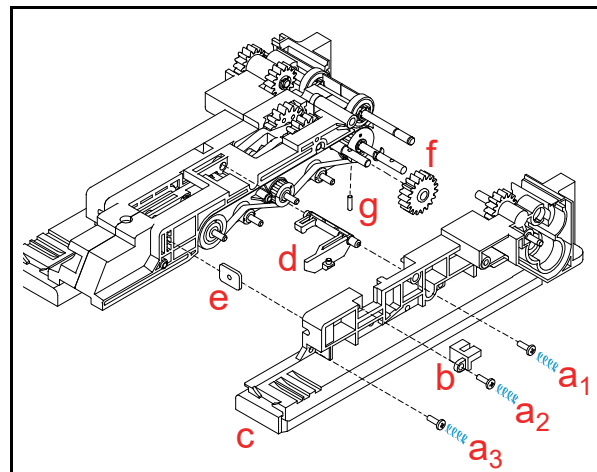



Figure 4-15 Outer Guide R Removal 2

 **NOTE:** When replacing the Frame Outer R Assembly, ensure that the Plate Nut (Figure 4-15 e) is correctly re-positioned.

- Remove the two (2) Assembly Mounting Screws (Figure 4-16 a₁ & a₂).
- Remove the single (1) E-ring (Figure 4-16 b) and the single (1) Gear (Figure 4-16 c) from the Outer Guide L (Figure 4-16 d)

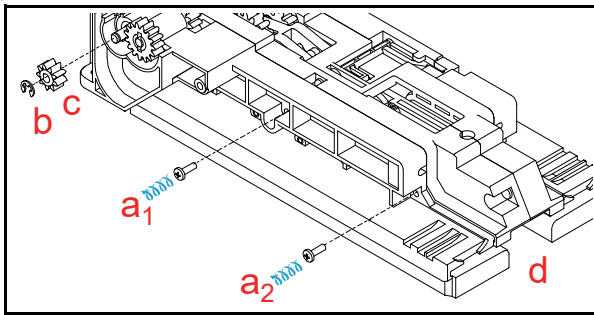


Figure 4-16 Outer Guide L Removal 1

14. Remove the Outer Guide L (Figure 4-17 a) from the Pusher Assembly (Figure 4-17 b).

NOTE: Be careful that the two (2) Bushings (Figure 4-17 c₁ & c₂) and the Plate Nut (Figure 4-17 d) are not lost when removing them.

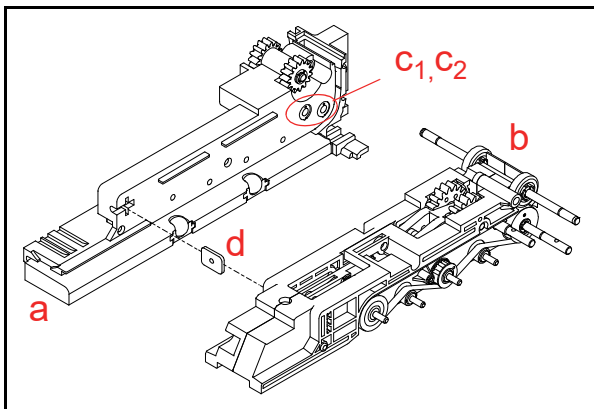


Figure 4-17 Outer Guide L Removal 2

NOTE: When replacing the Outer Guide L, ensure that the Plate Nut is correctly repositioned (Figure 4-17 d).

15. Remove the two (2) Timing Belts (Figure 4-18 a₁ & a₂) from the Pusher Assembly.

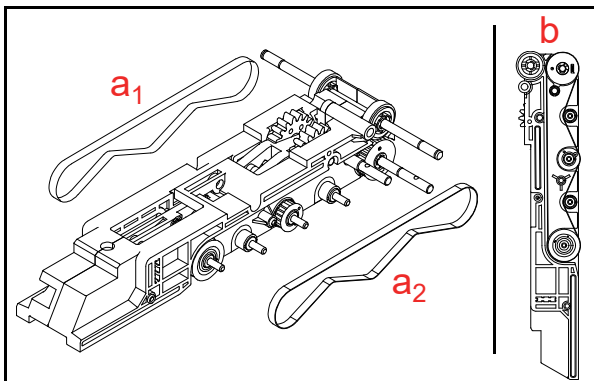


Figure 4-18 Timing Belt Removal

NOTE: The Timing Belts should be replaced as illustrated in Figure 4-18b when reassembling the Unit. Be careful that the Pulleys and/or Rollers do not fall off during reassembly.

Home Position Sensor Board/ Home Position Sensor, FFC & Interface Connector Board Removals

To remove the Home Position Sensor Board, the Home Position Sensor FFC and the Interface Connector Board proceed as follows:

1. Remove the Transport Unit from the iVIZION Unit.
2. Remove the Validation Section from the Transport Unit.
3. Remove the two (2) TR Cover mounting Screws (Figure 4-19 a₁ & a₂) from the bottom of the Transport Unit, and remove the Transport (TR) Bottom Cover (Figure 4-19 b) off the Transport Unit.

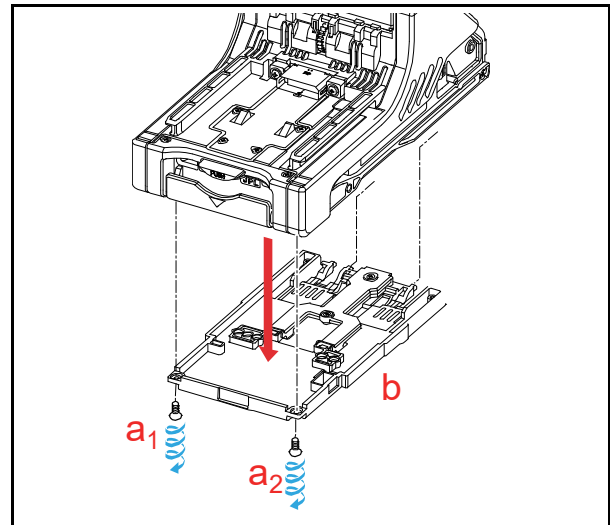


Figure 4-19 TR Bottom Cover Removal

4. Use a small Screwdriver to release the five (5) Click-tab Stops of TR Side Cover “A” (Figure 4-20 a₁ to a₅), and remove TR Side Cover “A” (Figure 4-20 b) from the Transport Assembly.

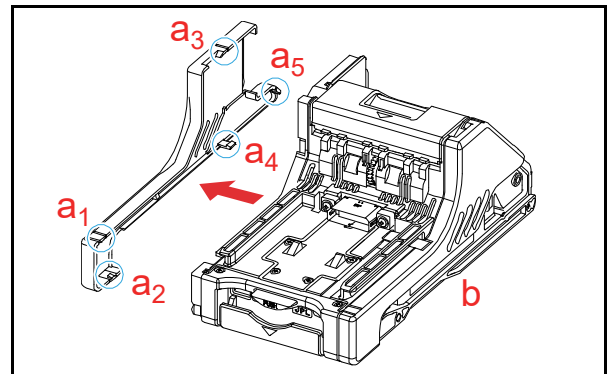


Figure 4-20 TR Side Cover “A” Removal

NOTE: When the three (3) lower Click-tab stops are difficult to remove from the top, release them from bottom-side instead.

- Remove the two (2) mounting Screws (Figure 4-21 **a₁** & **a₂**) securing the Home Position Sensor Board in place (Figure 4-21 **b**).
- Remove the Home Position Sensor Board and the Home Position Sensor FFC Assembly (Figure 4-21 **c**) from the Transport Unit.
- Remove the three (3) mounting Screws (Figure 4-21 **d₁**, **d₂** & **d₃**) securing the Interface Connector Board in place (Figure 4-21 **f**), and then remove the three (3) Flat Ribbon Cables from the Interface Connector Board (Figure 4-21 **e₁**, **e₂** & **e₃**).

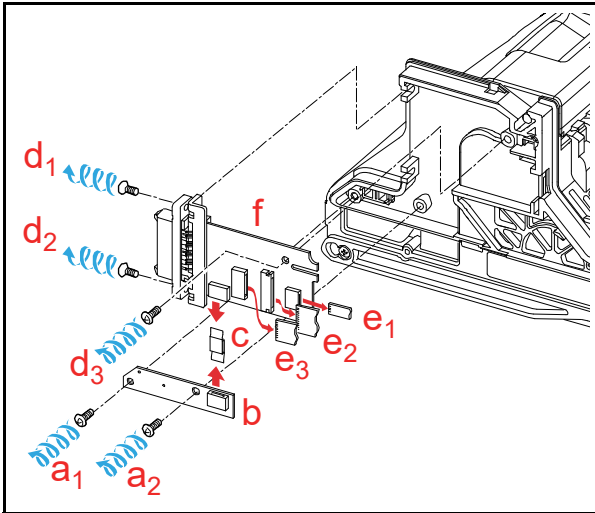


Figure 4-21 Home Position Sensor Board, Home Position Sensor FFC Assembly and Interface Connector Board Removals

RFID Module & Harness Removals

To remove the RFID Module and RFID Harness proceed as follows:

- Remove the two (2) mounting Screws (Figure 4-22 **a₁** & **a₂**) securing the RFID Module to the back side of the Transport Unit (Figure 4-22 **b**).
- Remove the RFID Module and the RFID Harness (Figure 4-22 **c**) from the Transport Unit.

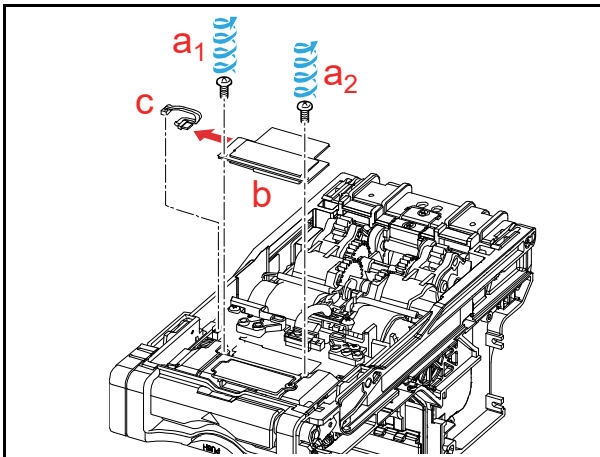


Figure 4-22 RFID Module & Harness Removal

Validation CPU & Controller CPU Board Removals

To remove the Validation CPU Board and the Controller CPU Board from the CPU Board Module, proceed as follows:

- Remove the four (4) mounting Screws (Figure 4-23 **a₁** to **a₄**) that are securing the CPU Board Module (Figure 4-23 **d**) to the Transport Unit, and unplug the two (2) Signal Connectors (Figure 4-23 **b₁** & **b₂**) with the three (3) Flat Ribbon Cables (Figure 4-23 **c₁**, **c₂** & **c₃**) located on the CPU Board Module and remove the CPU Board Module from the Transport Unit.

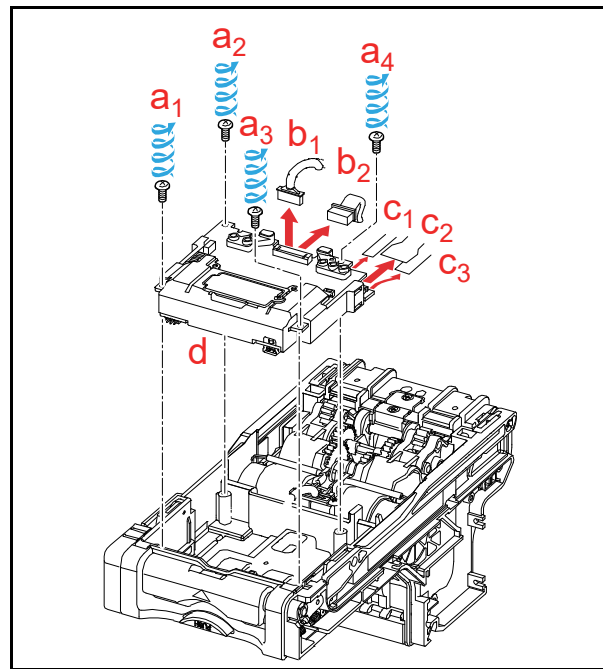


Figure 4-23 CPU Board Module Removal

- Remove the single (1) mounting Screw (Figure 4-24 **a**) and remove the Optional Extension Memory Board if installed (Figure 4-24 **b**) from the assembled Extension Memory Board.

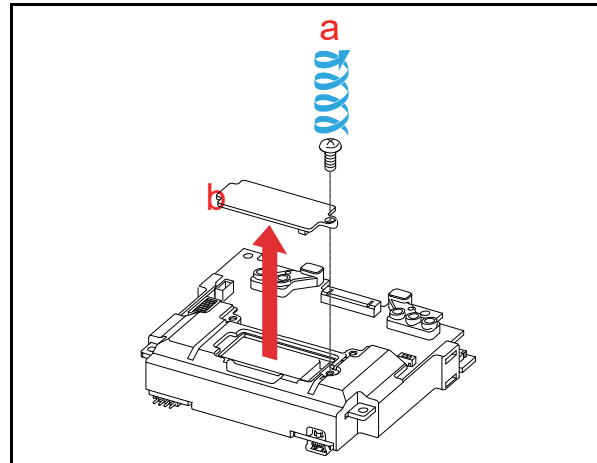


Figure 4-24 Extension Memory Board Removal

- Carefully spread both sides of the PCB Support apart (Figure 4-25 **a₁** & **a₂**) and slide the Validation CPU Board (Figure 4-25 **c**) and the Controller CPU Board (Figure 4-25 **d**) off of the CPU Board Module.
- Remove two (2) mounting Screws (Figure 4-25 **b₁** & **b₂**), and separate the Validation CPU Board and the Controller CPU Board from one another.

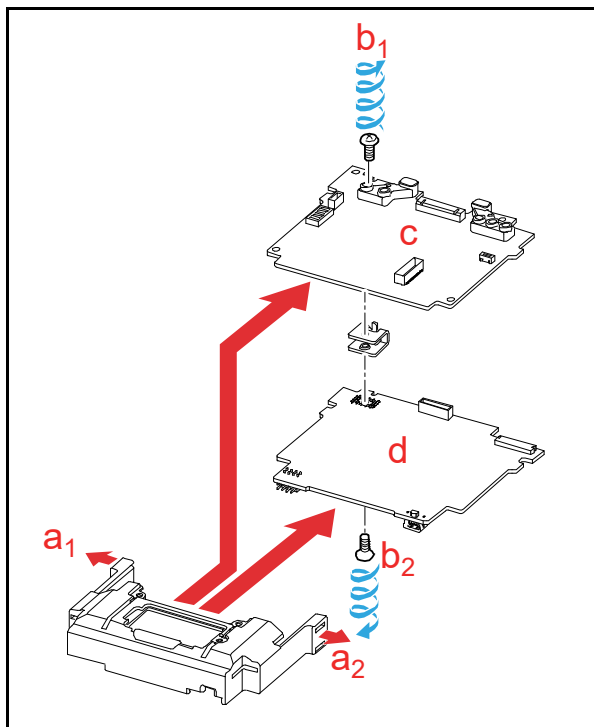


Figure 4-25 Validation CPU Board and Control CPU Board Removal

USB FPC, Power FPC & Interface FPC Cable Removals

To remove the USB FPC, the Power FPC and the Interface FPC proceed as follows:

- Remove the two (2) mounting Screws (Figure 4-26 **a₁** & **a₂**) securing the Motor Unit to the Transport Assembly, and remove the Motor Module (Figure 4-26 **b**) from the Transport Unit.

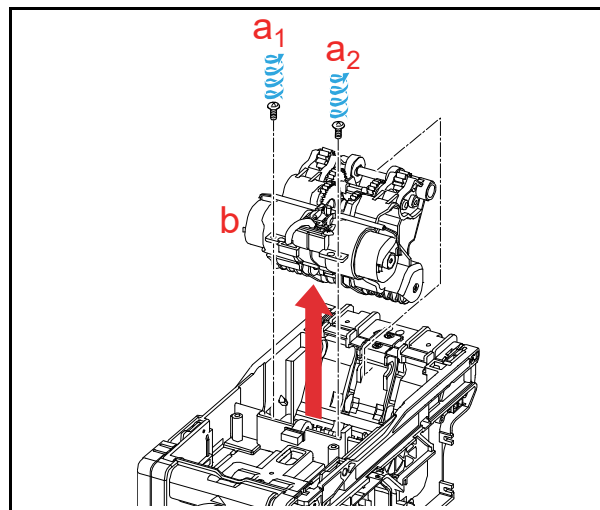


Figure 4-26 Motor Module Removal

- Remove the USB FPC (Figure 4-27 **a**), the Power FPC (Figure 4-27 **b**) and the Interface FPC (Figure 4-27 **c**) from the Transport Unit.

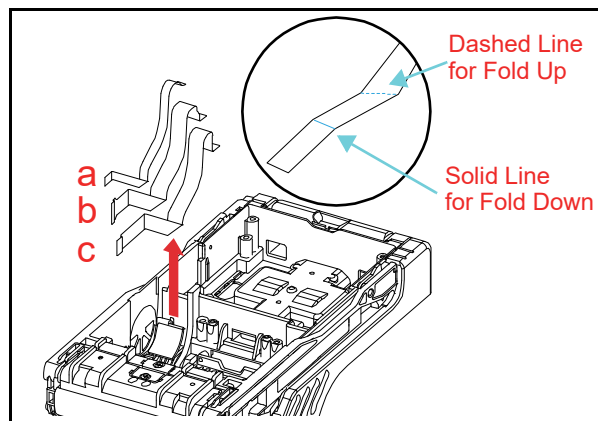


Figure 4-27 USB FPC, Power FPC & Interface FPC Cable Removal



NOTE: Carefully observe the Up and Down Fold Line indications shown by the two (2) Cyan Arrows in Figure 4-27. DO NOT bend them in an opposite direction!




NOTE: When installing new FPCs, fold-up along the Solid Lines and fold-down along the Dashed Lines before setting them in place. Once an FPC is folded, DO NOT un-fold it back again or fold in the opposite direction.

Validation Unit Harness Removal

To remove the Validation Unit Harness proceed as follows:

1. Remove the two (2) mounting Screws (Figure 4-28 a_1 & a_2) securing the Validation Unit Harness in place (Figure 4-28 b).
2. Remove the Validation Unit Harness from the Transport Unit.

 **NOTE:** Ensure that when the Collars (Figure 4-28 c_1 & c_2) and/or Washers (Figure 4-28 d_1 & d_2) are removed that they are not lost when they are removed.

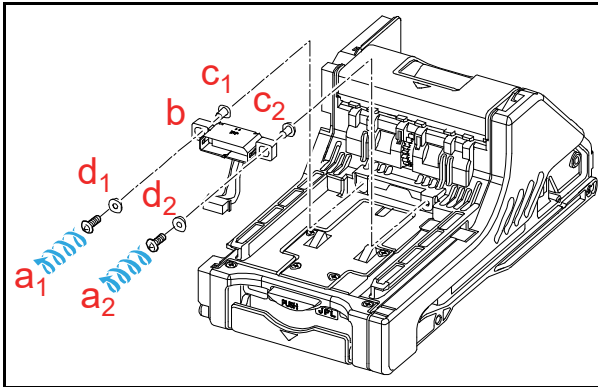


Figure 4-28 Validation Unit Harness Removal

Interrupter Board Removal

To remove the Interrupter Board proceed as follows:

1. Remove the two (2) mounting Screws (Figure 4-29 a_1 & a_2) securing the Interrupter Board to the Motor Module Assembly (Figure 4-29 b), and carefully unplug the three (3) Signal Connectors (Figure 4-29 c_1 , c_2 & c_3) from the Board.
2. Carefully pull the Interrupter Board off of the Motor Module Assembly.

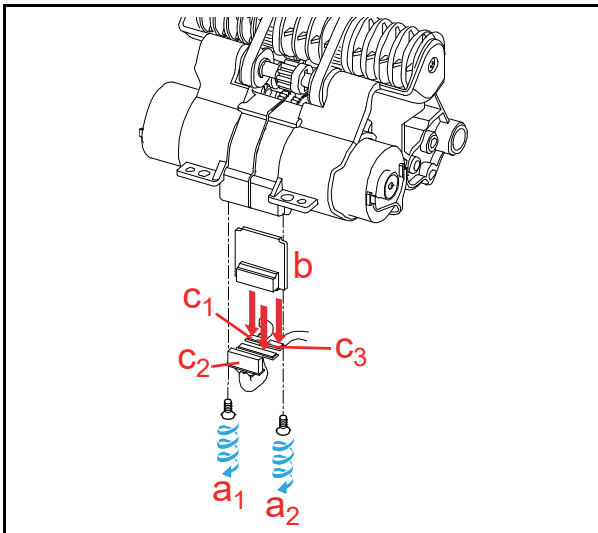


Figure 4-29 Interrupter Board Removal

Motor Unit Timing Belt Removal

To remove the Timing Belt, proceed as follows:

1. Remove the two (2) mounting Screws (Figure 4-30 a_1 & a_2) and remove Drive Mod FR "A" (Figure 4-30 b) from the Motor Module Assembly.

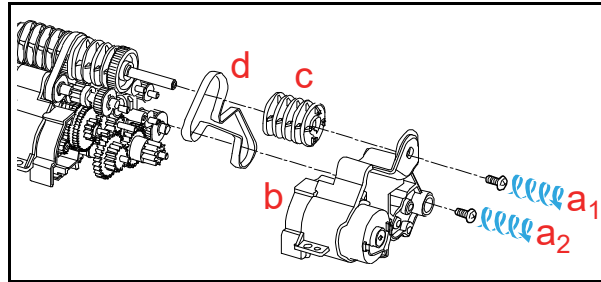





Figure 4-30 Timing Belt Removal

 **NOTE:** When re-assembling Drive Mod FR "A", ensure that it mates directly with the "D" Plane of the Drive Shaft.

2. Remove the Belt Reel (Figure 4-30 c) and the Timing Belt (Figure 4-30 d) from the Motor Module Assembly.

 **NOTE:** Follow the same procedure to remove the opposite side Timing Belt.

 **NOTE:** The a_1 and a_2 Mounting Screws should be reinstalled using a #1 (2.5kgf-cm) Torque Wrench Driver.

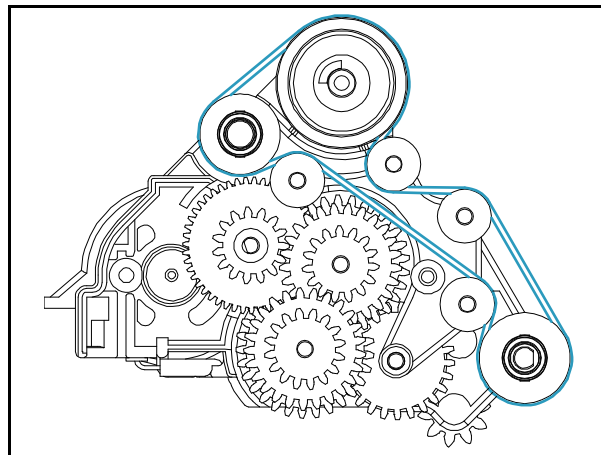




Figure 4-31 Timing Belt Reassembly Path

 **NOTE:** The Timing Belts should be re-placed as illustrated by the Blue path in Figure 4-31 when the Unit is being reassembled.

Stacker Motor & Transport Motor Removals

To remove the Stacker Motor and the Transport Motor proceed as follows:

1. Remove the TR-ST Motor Gear (Figure 4-32 a) and the two (2) mounting Screws (Figure 4-32 b₁ & b₂) securing the Motor Module in place.
2. Remove the Stacker Motor (Figure 4-32 c) from the Motor Module Assembly.

 **NOTE:** Follow the same procedure to remove the Transport Motor on the opposite side.

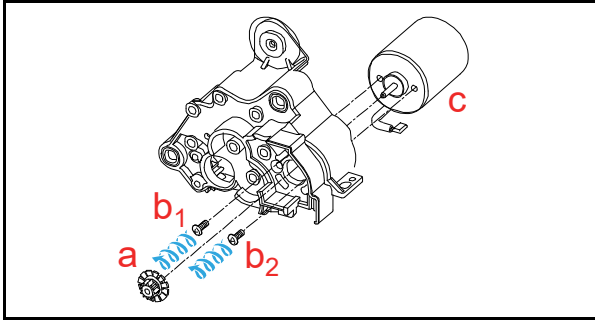



Figure 4-32 Stacker & Transport Motor Removal

 **NOTE:** When reassembling the TR-ST Motor Gear, a Motor Gear Assembly Pressure Bar will be required.

Bezel Hold Clips A & B Removal

To remove Bezel Hold Clips “A” and Bezel Hold Clips “B” proceed as follows:

1. Remove the two (2) laminated, M2.6x6 Phillips Self-Tapping Screws (Figure 4-33 a₁ & a₂) from the Bezel, and then remove Bezel Hold Clip “A” from the left side of the Assembly (Figure 4-33 b).
2. Remove the two (2) laminated M2.6x6 Phillips Self-Tapping Screws (Figure 4-33 a₃ & a₄) from the Bezel, and then remove Bezel Hold Clip “B” from the right side of the Assembly (Figure 4-33 c).

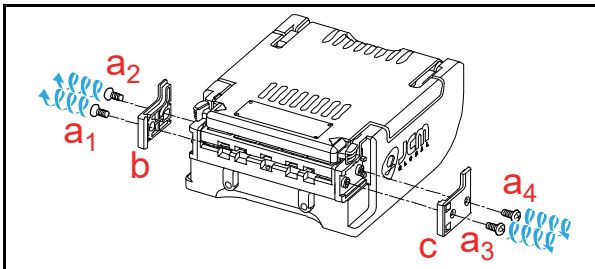



Figure 4-33 Bezel Hold Chips A&B Removal

 **NOTE:** Use a T6 “TORX” Torque Wrench Driver when reattaching Bezel Hold Clips “A” and “B” onto the Transport Unit.

Sensor Transfer Board/CIS FFC/ Transmissive Light FFC & Upper UV FPC Sensor Removals

To remove the Sensor Transfer Board, the CIS FFC Sensor, the Transmissive Light FFC Sensor and the Upper UV FPC Sensor proceed as follows:

1. Open the Validation Section and release the six (6) Upper Cover Click-tab Stops (Figure 4-34 a₁ to a₆) by using a small Screwdriver.
2. Remove the Upper Cover (Figure 4-34 b) from the Upper Guide.

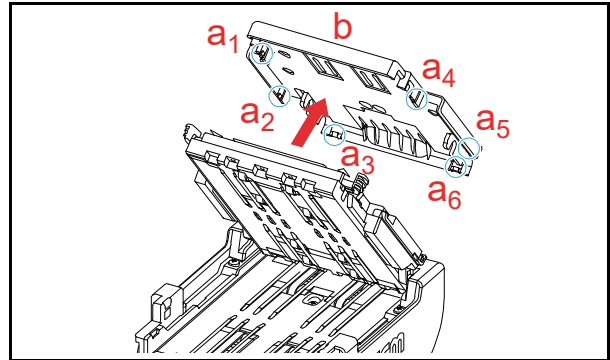


Figure 4-34 Upper Cover Removal

3. Remove the two (2) mounting Screws (Figure 4-35 a₁ & a₂) securing the Sensor Transfer Board Assembly to the Transport.
4. Remove the CIS FFC (Figure 4-35 b), the Transmissive Light FFC (Figure 4-35 c), and the Upper UV FPC (Figure 4-35 d) from the Validation Head.
5. Unplug the two (2) Flat Flexible Cables (FFC) (Figure 4-35 e₁ & e₂) and then remove the Sensor Transfer Board Assembly (Figure 4-35 f) off of the Validation Head; then
6. Remove the CIS FFC, the Transmissive Light FFC and the Upper FPC from the Validation Unit.

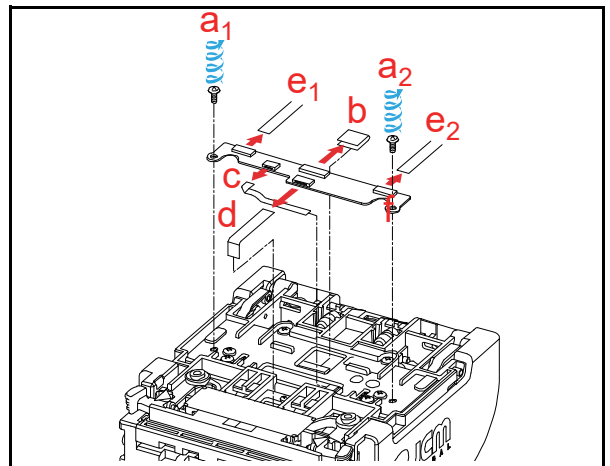


Figure 4-35 Sensor Transfer Board Assembly, CIS FFC, Transmissive Light & Upper UV FPC Cable Removal

Validation Sensor Board Assembly Removal

To remove the Validation Sensor Board Assembly, proceed as following:

1. Remove the four (4) Cover Mounting Screws (Figure 4-36 a₁ to a₄) located on the base side of the Validation Unit, and remove the iVIZION Head Cover “A” (Figure 4-36 b) off the Validation Assembly.

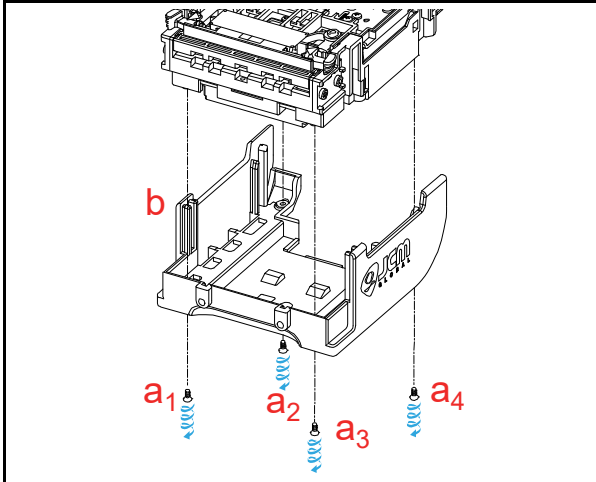


Figure 4-36 iVIZION Head Cover A Removal

2. Remove the two (2) mounting Screws (Figure 4-37 a₁ & a₂) and take Grounding Plate “A” (Figure 4-37 b) off the Validation Unit.
3. Remove the two (2) screws (Figure 4-37 c₁ & c₂) securing the Validation Sensor Assembly Board.
4. Unplug the two (2) FPC Cables (Figure 4-37 d₁ & d₂) and the two (2) FFC Cables (Figure 4-37 e₁ & e₂) from the Validation Sensor Assembly Board.
5. Take the Validation Sensor Board Assembly (Figure 4-37 f) off the Validation Unit.

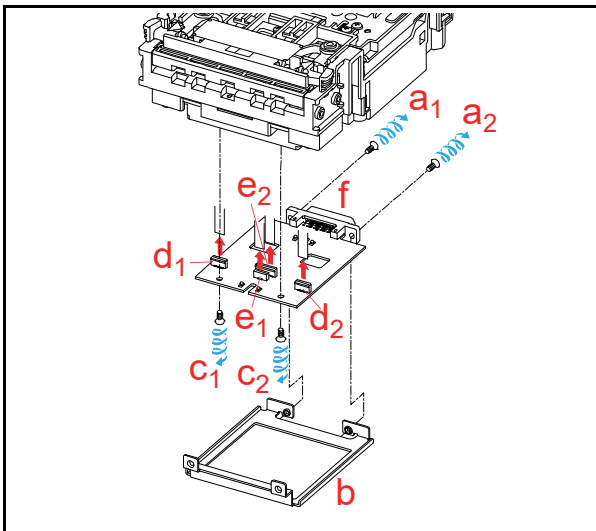


Figure 4-37 Validation Sensor Board Assembly Removal

Validation Sensor FPC Cable Removal

To remove the Validation Sensor FPC Cables, proceed as follows:

1. Remove the two (2) Validation Sensor FPC Cables (Figure 4-38 a₁ & a₂) from the Validation Unit.

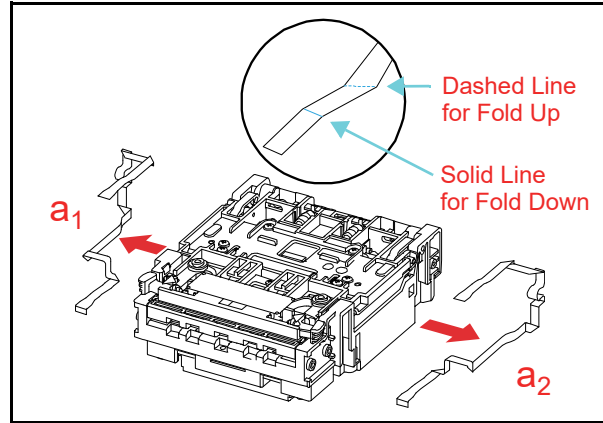





Figure 4-38 Validation Sensor FPC Removal

 **NOTE:** Carefully observe the Up and Down Fold Line indications shown by the two (2) Cyan Arrows in Figure 4-38, and DO NOT unfold them in an opposite direction!

 **NOTE:** When installing new FPCs, fold-up along the Solid Lines and fold-down along the Dashed Lines before setting them in place. Once an FPC is folded, DO NOT unfold it back again or fold in the opposite direction.

 **NOTE:** When the Unit is reassembled, the FPCs should be reinstalled as illustrated by the Blue paths shown in Figure 4-39.

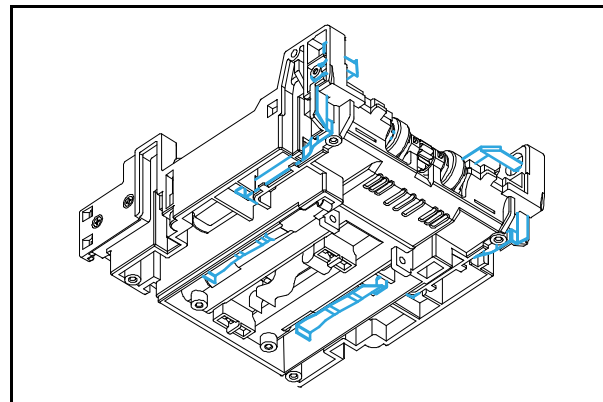


Figure 4-39 Validation Sensor FPC Reassembly

CIS/Transmissive Light & Upper UV Sensor Removals

To remove the CIS, the Transmissive Light and the Upper UV Sensors proceed as follows:

1. Push out the two (2) Alignment Pins (Figure 4-40 **a₁** & **a₂**) securing the two (2) Limit Stops (Figure 4-40 **b₁** & **b₂**) using holes provided inside the Unit, and individually remove the two (2) Stops from the Validation Unit.



NOTE: When reassembling the Unit, ensure that the right and left side Pins are correctly repositioned when reinstalled.

2. Carefully spread both sides of iVIZION Head FR "A" Frame apart (Figure 4-40 **c₁** & **c₂**), and lift the Upper Validation Section (Figure 4-40 **d**) up and out of the Validation Unit.

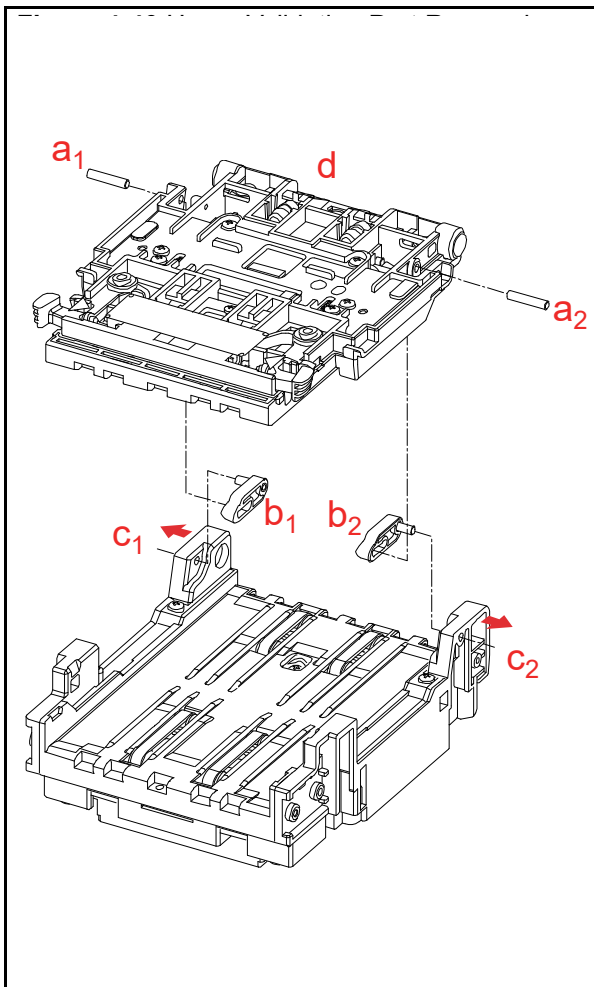


Figure 4-40 Upper Validation Part Removal

3. Remove the six (6) mounting Screws (Figure 4-41 **a₁** to **a₆**) securing the upper iVIZION BG 85B Head Assembly (Figure 4-41 **b**) to the lower Validation Unit.

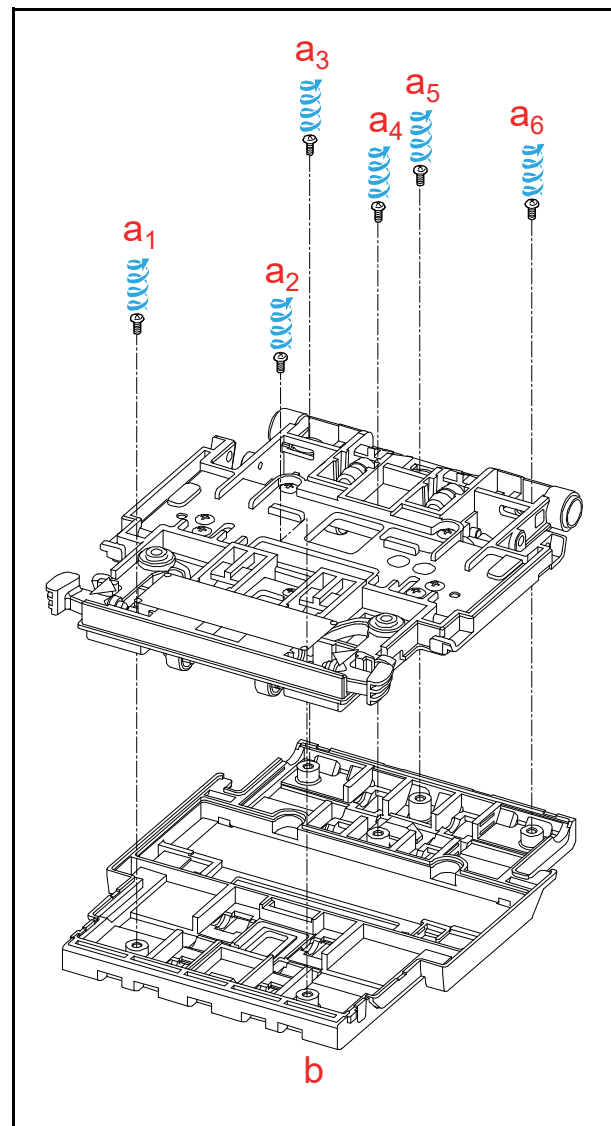


Figure 4-41 iVIZION Head BG85B Removal

4. Remove the four (4) CIS Sensor Mounting Screws (Figure 4-42 **a₁** to **a₄**) and remove the CIS Sensor (Figure 4-42 **b**) from the Upper Validation Section.



NOTE: When reassembling the Unit, ensure that the UV Sensors are correctly re-positioned when set in place (See "Reassembly Cautions" on page 4-14 of this Section).



NOTE: If foreign objects are observed adhering to the Sensor's surface, blow it clean by using a Compressed Air spray.

5. Remove the two (2) mounting Screws (Figure 4-42 **c₁** & **c₂**) securing the Transmissive Light Sensor in place (Figure 4-42 **d**), and remove it from the Upper Validation Section.

6. Remove the two (2) mounting Screws (Figure 4-42 e_1 & e_2) securing the Upper UV Sensor in place (Figure 4-42 f), and drop it down and off the Upper Validation Section.

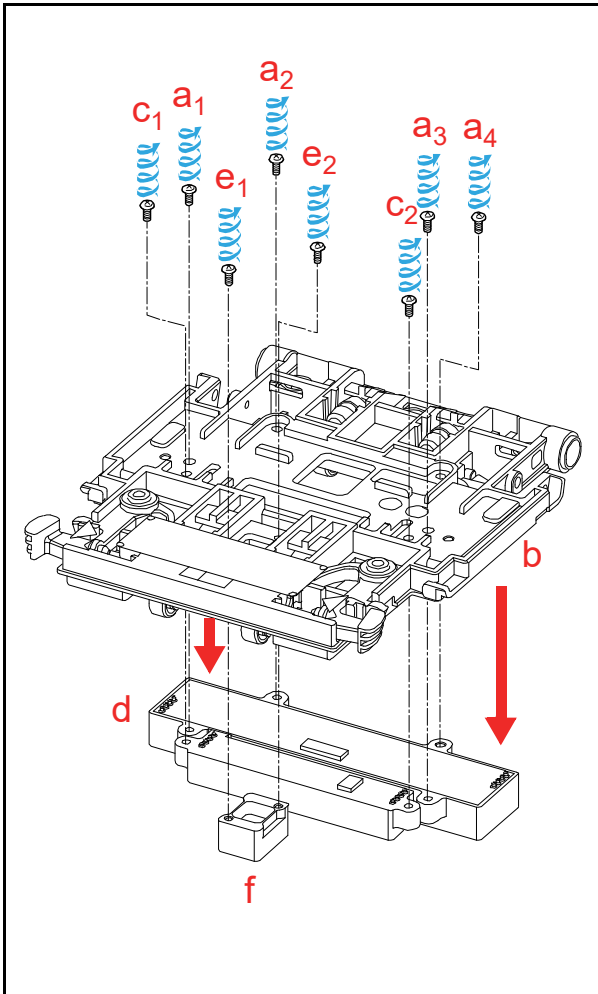


Figure 4-42 CIS, Transmissive Light & Upper UV Sensor Removal

CIS/CIS FPC/Lower UV Sensor & Lower UV FFC Removal

To remove the CIS, the CIS FPC, the Lower UV Sensor and the Lower UV FFC proceed as follows:

1. Remove three (3) BG 85A Head Mounting Screws (Figure 4-43 a_1 , a_2 & a_3) and release the four (4) Clip-tab Stops (Figure 4-43 b_1 to b_4) on the iVIZION BG 85A Head.
2. Remove the iVIZION BG 85A Head (Figure 4-43 c) up and off of the Validation Unit.

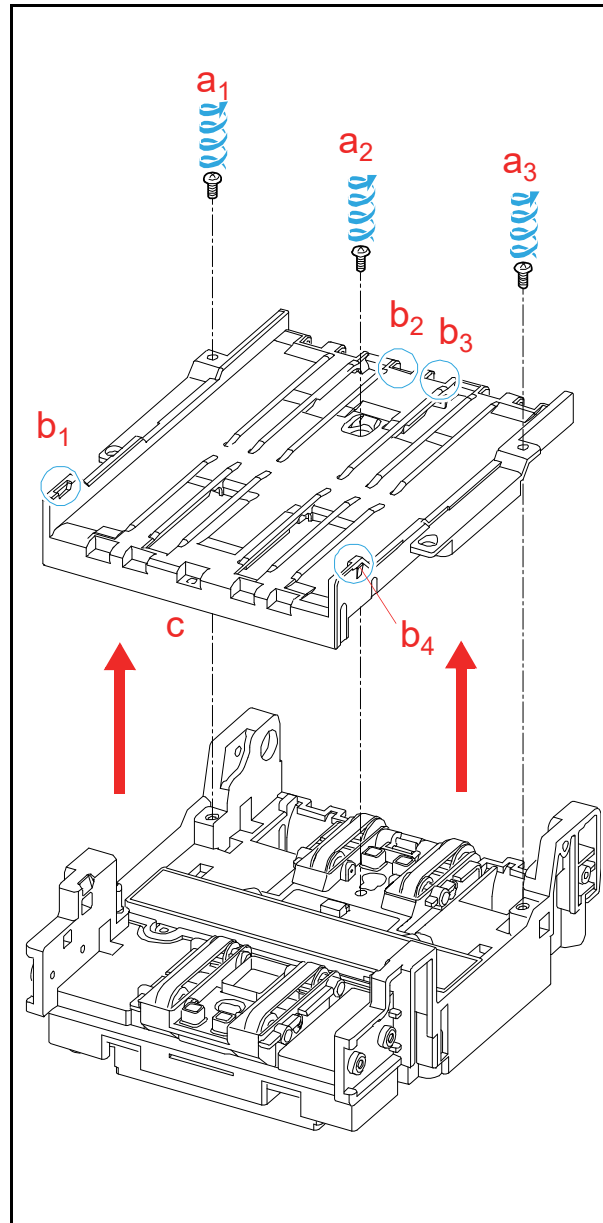


Figure 4-43 iVIZION BG 85A HEAD Removal

3. Remove two (2) mounting screws (Figure 4-44 a_1 & a_2) securing the Lower Validation Section in place (Figure 4-44 b) and remove it up and off the Validation Unit.

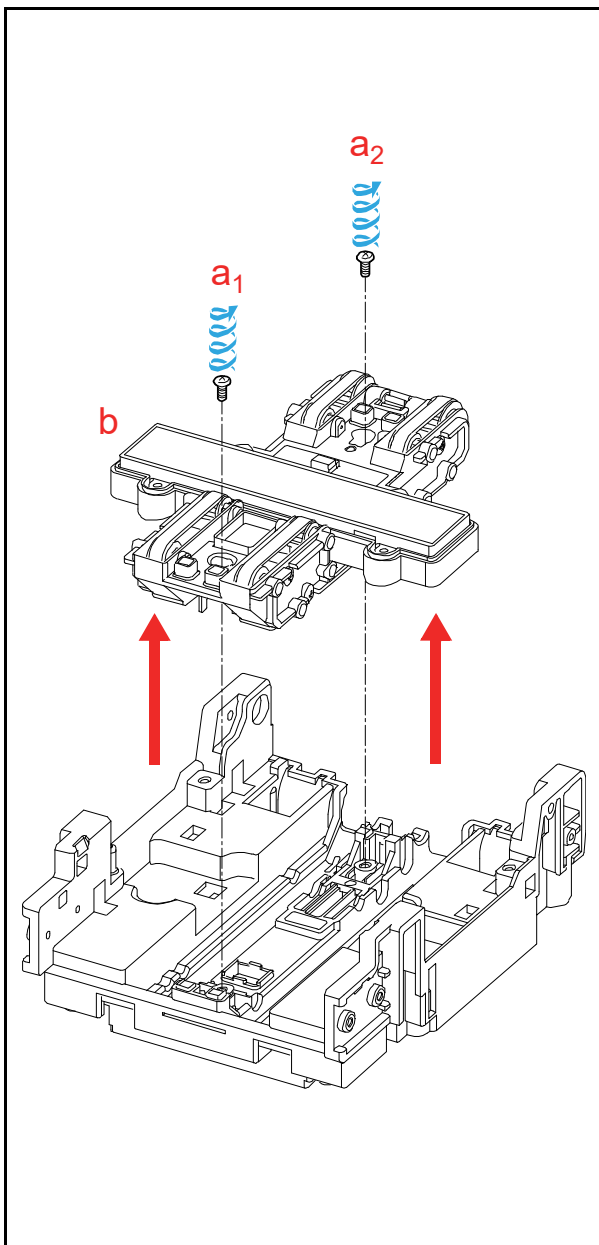


Figure 4-44 Lower Validation Part Removal

4. Remove the four (4) CIS Sensor Mounting Screws (Figure 4-45 a_1 to a_4), and remove the CIS Sensor (Figure 4-45 b) and the CIS FPC Cable (Figure 4-45 c) off of the Lower Validation Section.



NOTE: If foreign objects are observed adhering to the CIS surface, blow it clean by using a Compressed Air spray.

5. Remove two (2) mounting screws (Figure 4-45 d_1 & d_2), securing the Lower UV Sensor (Figure 4-45 e) in place and remove it and the Lower UV FFC Cable (Figure 4-45 f) from the Lower Validation Section.

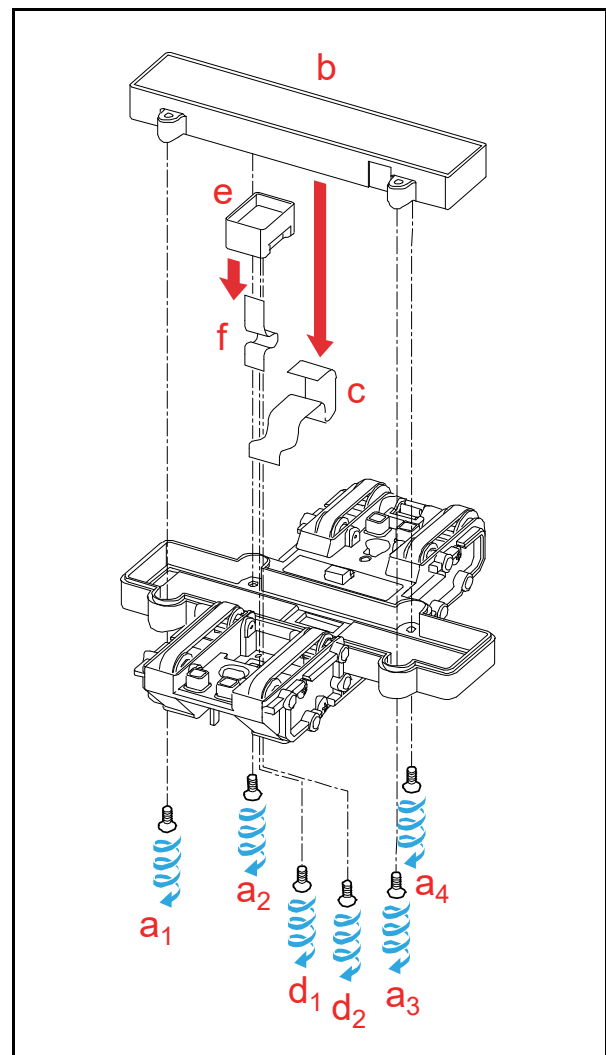


Figure 4-45 CIS, CIS FPC, Lower UV Sensor & Lower UV FFC Removal




NOTE: When reassembling the Unit, ensure that the UV Sensors are correctly re-positioned and set in place as illustrated in Figure 4-48.

Validation Unit Timing Belt Removal

To remove Timing Belt proceed as follows:

1. Remove the three (3) Side Plate Cover Mounting Screws (Figure 4-46 **a**₁, **a**₂ & **a**₃) located on right side of the Lower Validation Section.
2. Remove the Cover (Figure 4-46 **b**) from the Lower Validation Section.
3. Remove Timing Belt (Figure 4-46 **c**) from the Lower Validation Section.

 **NOTE:** Follow the same procedure to remove the opposite side Timing Belt.

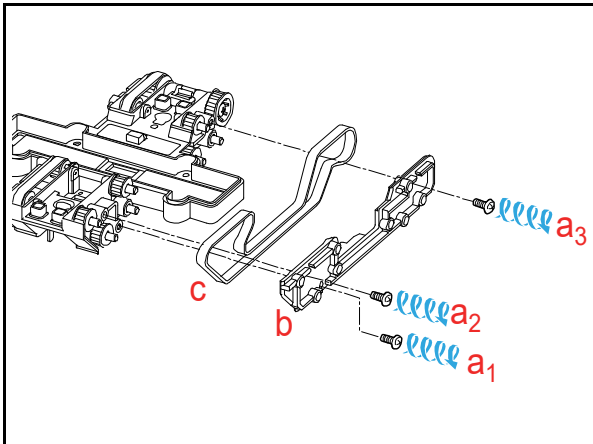



Figure 4-46 Timing Belt Removal

 **NOTE:** The Timing Belt should be reinstalled as illustrated by the **Blue** path shown in Figure 4-47 when the Unit is being reassembled.

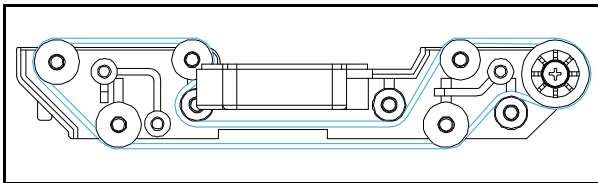


Figure 4-47 Timing Belt Replacement

Reassembly Cautions

When reassembling the Upper/Lower UV Sensors, make sure that both of the Sensor positions and directions are correctly placed. Match the Connector's position as illustrated in Figure 4-48**a**.

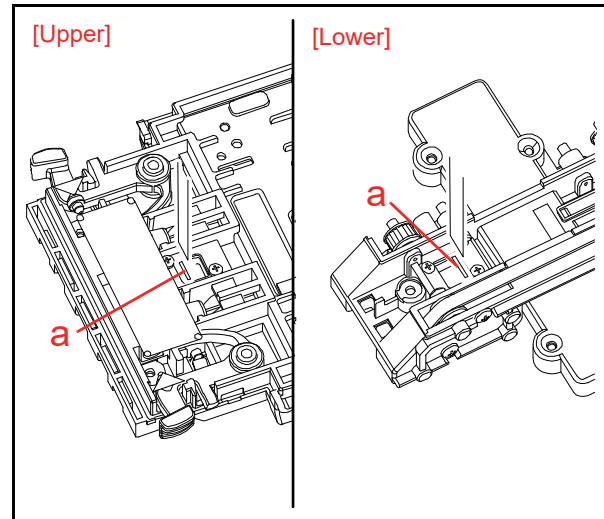



Figure 4-48 Upper/Lower UV Sensors Location

 **NOTE:** Ensure that all Sensors and the iVIZION BG 85B Head surfaces are absolutely clean before reassembling the iVIZION Unit. Also ensure that all Finger Prints, smudges, dirt or film that exists on any surfaces in the Transport path are removed.

Disassembly and Reassembly of the iVIZION Unit is now complete.

iVIZION™ Series

Next-Generation Banknote Acceptor Unit

Section 5

5 WIRING DIAGRAMS

This chapter provides the following Wiring Diagrams of the iVIZION™ Series Next-Generation Banknote Acceptor Unit (iVIZION):

- iVIZION System Wiring Diagram

iVIZION System Wiring Diagram

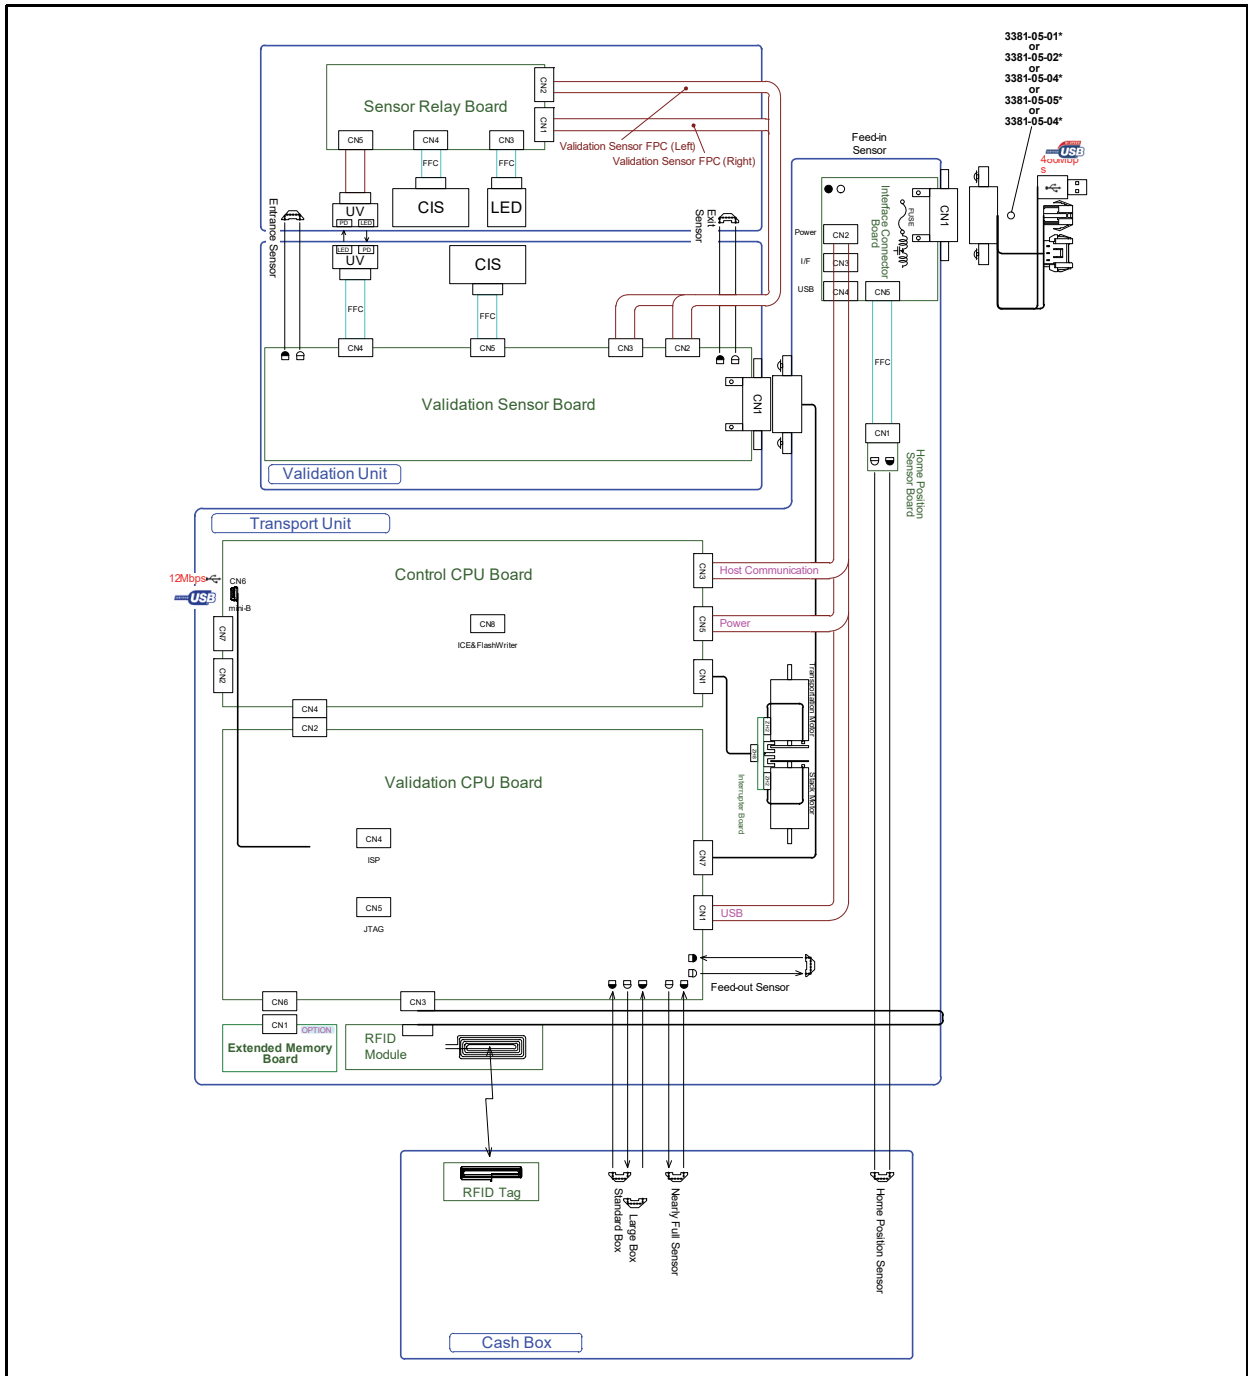


Figure 5-1 iVIZION System Wiring Diagram

THIS PAGE INTENTIONALLY LEFT BLANK

iVIZION™ Series

Next-Generation Banknote Acceptor Unit

Section 6

6 CALIBRATION AND TESTING

This section provides Calibration and Performance Testing instructions for the iVIZION™ Series Next-Generation Banknote Acceptor Unit (iVIZION) and contains the following information:

- Tool Requirements
- Installation Procedures
- JCM Tool Suite Standard Edition Mode
- Download Procedures
- Calibration
- Performance Tests
- iVIZION Utility Tools

Tool Requirements

Figure 6-1 illustrates and identifies the tools and equipment interconnects necessary to download and install the iVIZION Device.

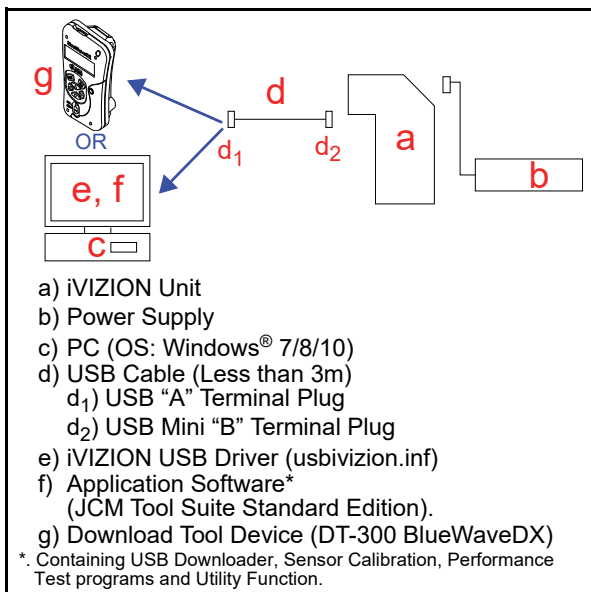


Figure 6-1 Tools and Connections

NOTE: For the download procedures with a DT-300 BlueWaveDX, refer to the JCM Global® DT-300™ Series Download Tool Operation Integration Guide (Part Number 960-000167R)

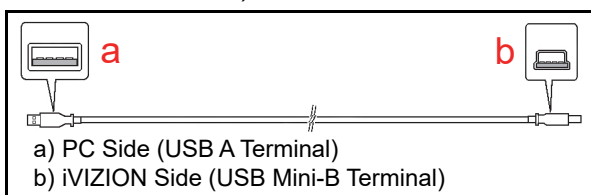


Figure 6-2 USB Cable Type Requirements

Installation Procedures

This section provides the JCM Tool Suite Standard Edition installation procedure.

Application Software Installation

Perform the following steps to install the "JCM Tool Suite Standard Edition" Application Software (refer to Figure 6-1 and Figure 6-2 for the necessary Tools and Connections and USB Cable Type Requirements respectively).

1. Copy the "JCMToolSuiteStandardEdition.zip" Application Software and extract on to the Desktop.
2. Open the Third Layer of the extracted Folder and Double-click on "Setup.exe"(Figure 6-3 a).

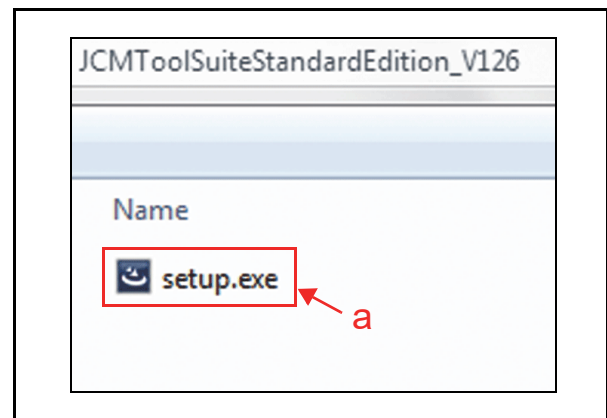


Figure 6-3 Setup.exe File Location

The "JCM Tool Suite Standard Edition - InstallShield Wizard" Screen shown in Figure 6-4 will appear.

3. Click on the "Next>" Button (Figure 6-4 a).

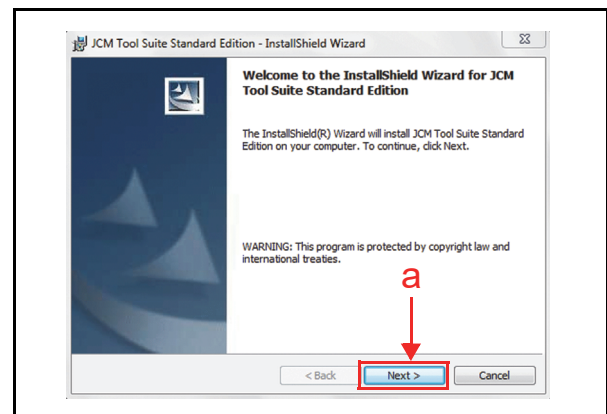


Figure 6-4 InstallShield Wizard Screen

4. Click on the “Next>”  Screen Button (Figure 6-5 a) when the “Destination Folder” Screen shown in Figure 6-5 appears.

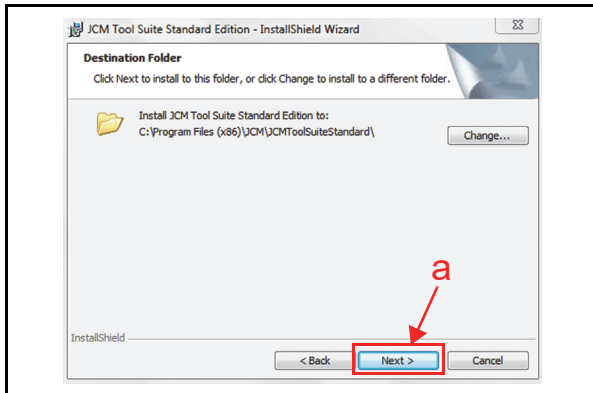



Figure 6-5 Destination Folder Screen

5. When the “Ready to Install the Program” Screen appears, select “Anyone who uses this computer (all users)” (Figure 6-6 a) and then click on the “Install”  Screen Button (Figure 6-6 b) to start the installation.

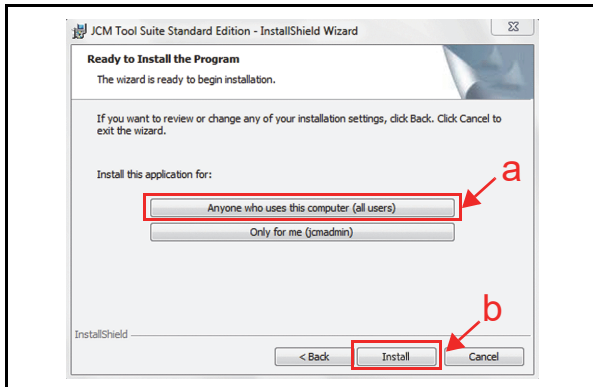



Figure 6-6 Current Settings Confirmation

6. Once installation is complete, the “InstallShield Wizard Completed” Screen shown in Figure 6-7 will appear. Click on the “Finish”  Screen Button (Figure 6-7 a) to end the installation process.

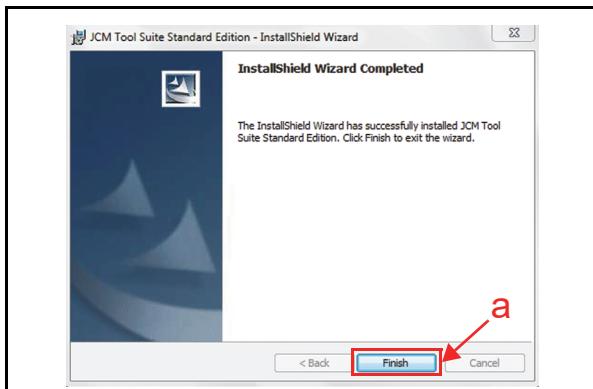


Figure 6-7 Installation Completion Screen


This completes the “JCM Tool Suite Standard Edition” installation procedure.

Driver Installation Procedure

iVIZION USB Drivers need to be installed on the PC before the JCM Tool Suite Standard Edition can be used. To install the iVIZION Software Driver, proceed as follows:



NOTE: USB Drivers are automatically loaded on the PC when JCM Tool Suite is installed. Use this procedure if the USB Drivers need to be installed manually.

1. Copy the iVIZION Driver (usbvizion.inf) into the desired PC Folder.
2. Connect the USB Cable to the iVIZION Unit (refer to Figure 6-1 and Figure 6-2 for the Tool Requirements and Harness Connector locations).
3. When the Device Driver Installation Wizard Screen (Figure 6-8) appears, click on the “Next>”  Screen Button (Figure 6-8 a) to install the driver for the iVIZION Unit.

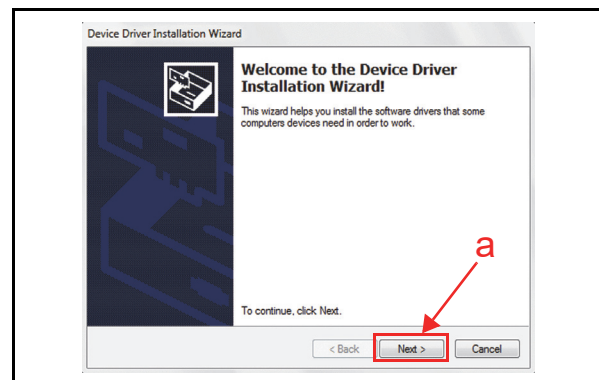



Figure 6-8 Hardware Update Wizard Screen 1

4. When the USB Driver Installation is complete, the “Completing the Device Driver Installation Wizard” Screen will appear as shown in Figure 6-9. Click on the “Finish”  Screen Button (Figure 6-9 a) to close the Screen.

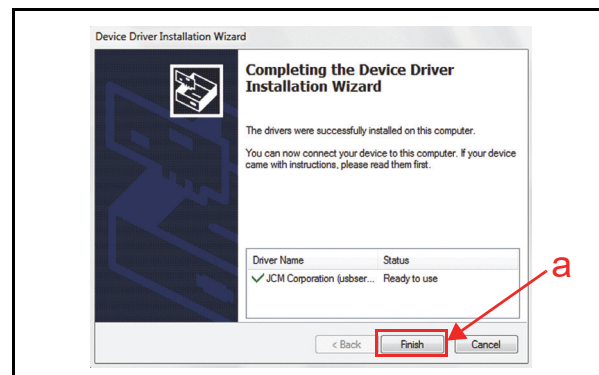


Figure 6-9 Hardware Update Wizard Screen 2



NOTE: If the Windows Security Screen appears, select “Install this Driver Software (I)” to proceed.

This completes the iVIZION USB Driver Software installation procedure.

JCM Tool Suite Standard Edition Mode

The following two (2) modes exist in the “JCM Tool Suite Standard Edition” package:

- Normal Mode
- Test Mode.

“**Normal Mode**” is a mode designed to provide the iVIZION Operating Software to be downloaded. The “**Service Mode**” Pull-Down Menu contains three (3) available choices shown in Figure 6-10 as follows:

- **Download** (for downloading software)
- **Statistics** (for observing log data)
- **Utility** (for setting ICB and CIS Image functions).

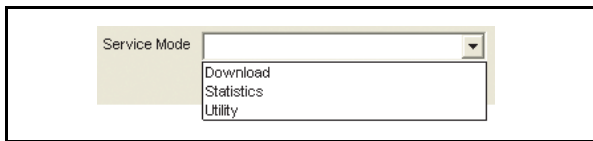


Figure 6-10 Normal Mode Selection

“**Test Mode**” is a mode designed to perform iVIZION Calibration and Performance Testing. The “**Service Mode**” contains five (5) available choices in its Pull-down Menu shown Figure 6-11 as follows:

- **Download** (for downloading software)
- **Statistics** (for observing log data)
- **Sensor Adjustment** (for calibration)
- **Performance Test** (for performance testing)
- **Utility** (for setting ICB and CIS Image functions).

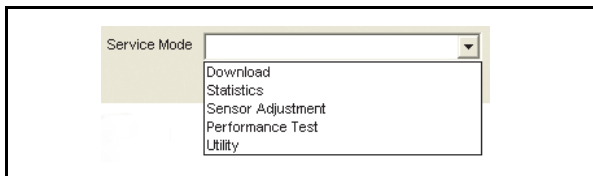


Figure 6-11 Test Mode Selection

Download Procedures

The following two (2) types of download procedures exist, depending on the iVIZION operating conditions:

- The iVIZION contains the “iVIZION Software Program already installed” (Upgrading)
- The iVIZION is new and does not have the “iVIZION Software Program installed” (e.g., New CPU Board).

NOTE: Refer to Figure 6-1 and Figure 6-2 for the necessary Tools and Harness Connections and USB Cable Type Requirements respectively.

Download the Upgrade Program

To download an update of the last “iVIZION Software Program” into the iVIZION, proceed as follows:

1. Turn the iVIZION Power Switch to **OFF**.
2. Set all of the 8-Position DIP Switches to **OFF** (Figure 6-12).



Figure 6-12 DIP Switches All OFF

3. Connect the USB Port located on the front side of the iVIZION Unit to the PC using a USB “A” to “mini-B” Communications Cable.
4. Turn the iVIZION Power Switch to **ON**.
5. Launch the “**JCM Tool Suite Standard Edition**” Application. The Screen shown in Figure 6-13 will appear when the application becomes activate.

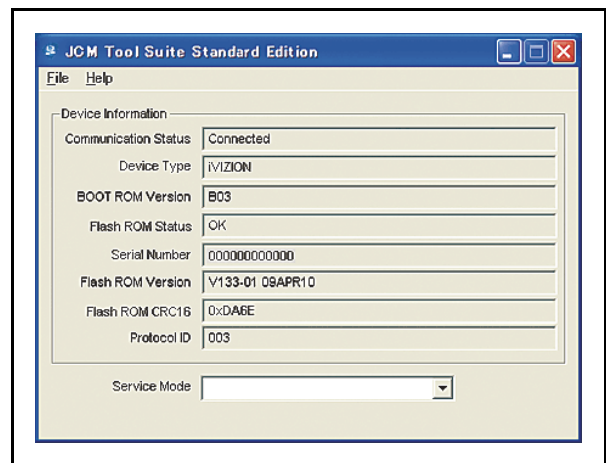


Figure 6-13 JCM Tool Suite Standard Edition Screen

6. Click on, and hold-down the “Service Mode” Pull-Down Menu and select “Download”. When selected it will highlight the selected Field Area in Blue (Figure 6-14), the Status LED will flash at a **Green Color** rate. The “JCM Downloader Suite Edition Version X.XX” will automatically open, and the Screen shown in Figure 6-15 will appear.

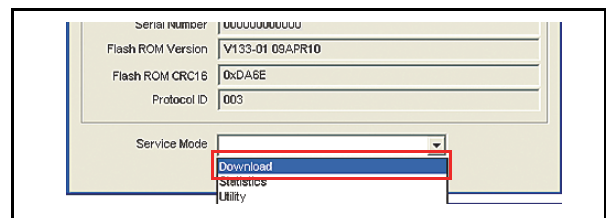


Figure 6-14 JCM Tool Suite Standard Edition Screen Pull-Down Menu

- Click on the “Browse” Screen Button (Figure 6-15 a).

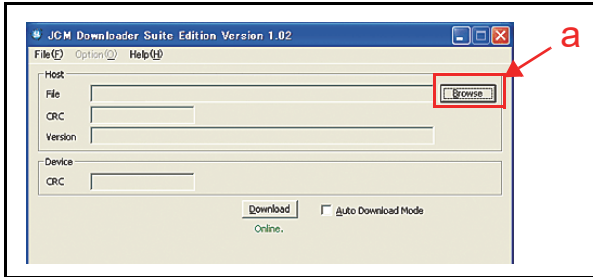


Figure 6-15 Browse Screen Button Location

- Select the Current iVIZION Software Program Version (e.g., the “iVIZION100(USA)ID003 V13901” example shown in Figure 6-16 a) from the **Download File** Screen that appears.
- Click on the “Open” Screen Button (Figure 6-16 b).

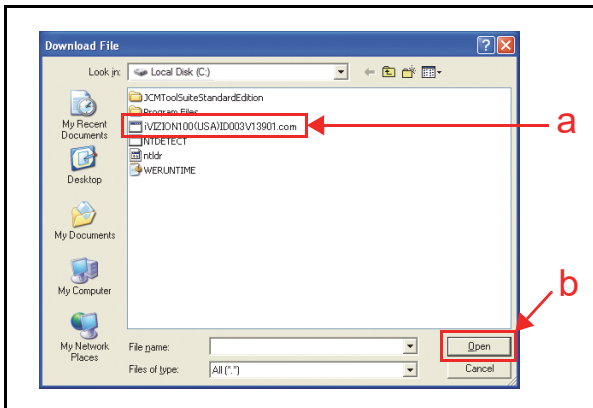


Figure 6-16 iVIZION Software Program Selection

- When the “JCM Downloader Suite” Screen reappears, click on the center “Download” Screen Button (Figure 6-17 a) to begin the Software download into the iVIZION Unit. The Download Screen will display a Progress Barograph during the download operation (Figure 6-17 b), and a Blue Text Line below the Download Screen Button will display the download Percentage as “Downloading : XX%” (Figure 6-17 c). The Status LED will alternately light Green and Red during this operation.

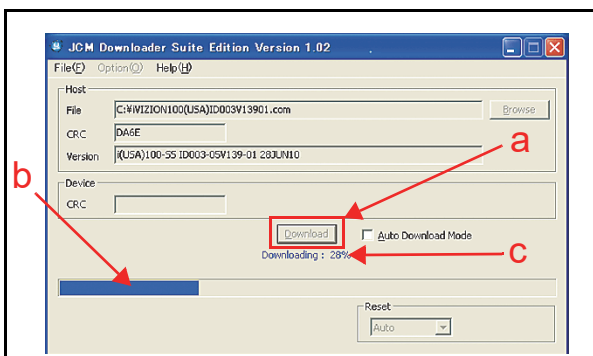


Figure 6-17 Download Progress Screen 1

- When the download is complete, the “Download Success. Reset Done. Waiting for USB Cable Disconnection.” Blue Text Line will appear (Figure 6-18 a).
- Confirm that the Host’s Checksum and the Device Checksum’s identically match each other (Figure 6-18 b).



NOTE: When the software downloaded shows completed on the JCM Tool Suite Screen, the iVIZION Red and Green LED will continue to flash as the software is transferred and loaded into the iVIZION. Do not turn the unit off until the Status LED turns off.

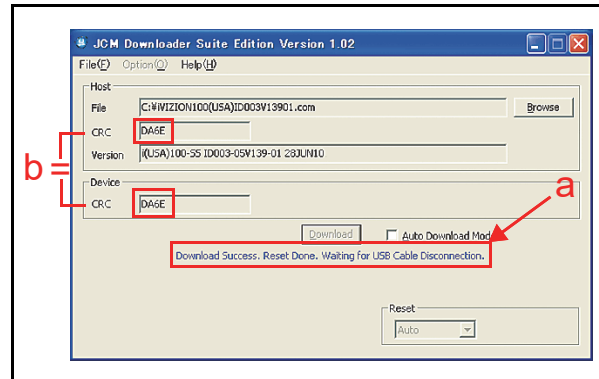


Figure 6-18 Download Completed Screen 1

Downloading the Program First Time

When the iVIZION Software Program is not pre-installed (e.g., when changing the CPU Board), the download procedure for an “empty” Unit is slightly different from the Download and Upgrade Program procedures that were presented previously.

To download the “iVIZION Software Program” into an “empty” iVIZION for the first time, proceed as follows:

- Turn the iVIZION Power Switch to **OFF**.
- Set 8-Position DIP Switch #6, #7 and #8 to **ON** (Figure 6-19).

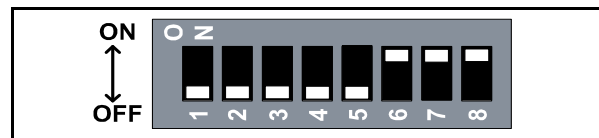


Figure 6-19 DIP Switches 6, 7, & 8 ON

- Connect from the USB Port located on the front side of the iVIZION Unit to the PC using the “A”/”mini-B” USB Communications Cable.
- Turn the iVIZION Power Switch to **ON**. The Status LED will flash at a Green Color rate.
- Launch the “JCM Tool Suite Standard Edition” Application. The Screen shown in Figure 6-20 will appear when the application is activate.

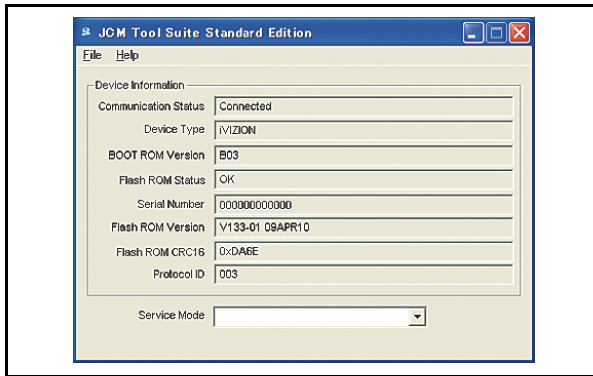


Figure 6-20 JCM Tool Suite Standard Edition Screen 2

- Click on, and hold-down the “Service Mode” Pull-Down Menu selection and Slide-down the Menu to select “Download”. When selected it will Highlight the selected Field Area in Blue (Figure 6-21), and the Status LED will flash at a Green Color rate.

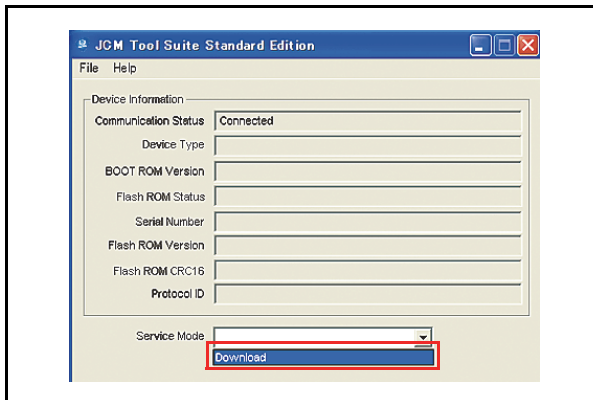


Figure 6-21 JCM Tool Suite Standard Edition Screen Pull-Down Menu 2

The “JCM Downloader Suite Edition Version X.XX” will automatically open, and the Screen shown in Figure 6-22 will appear.

- Click on the “Browse” Screen Button (Figure 6-22 a).

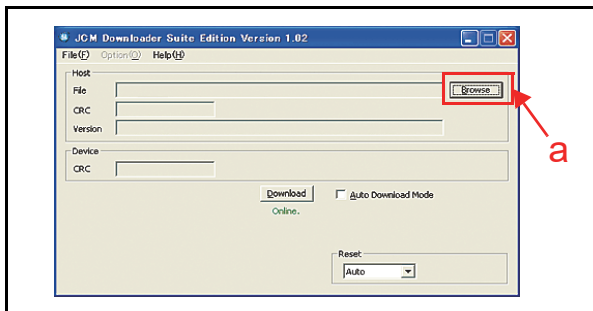


Figure 6-22 Browse Screen Button Location

- Select the current iVIZION Software Program version (e.g., iVIZION100(USA)ID003V13901 in the Figure 6-23a example) from the **Download File** Screen that appears, then click on the “Open” Screen Button (Figure 6-23 b).

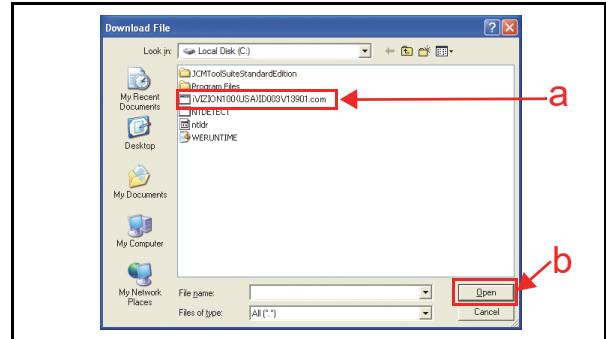


Figure 6-23 iVIZION Software Program Selection

- When the “JCM Downloader Suite...” Screen reappears, click on the center “Download” Screen Button (Figure 6-24 a) to begin the Software download into the iVIZION Unit. The Download Screen will display a Progress Barograph during the download operation (Figure 6-24 b), and a Blue Text Line below the Download Screen Button will display the download Percentage as “Downloading : XX%” (Figure 6-24 c). The Status LED will alternately light Green and Red.

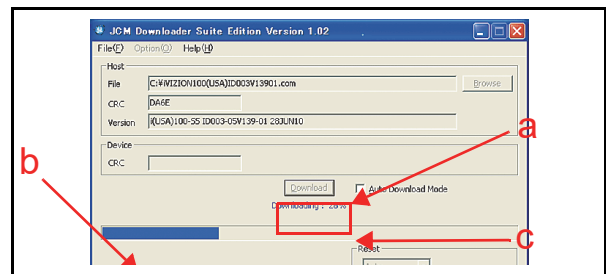


Figure 6-24 Download Progress Screen 2

- When the download is complete, the “Download Success. Reset Done. Waiting for USB Cable Disconnection.” Blue Text Line will appear (Figure 6-25 a).
- Confirm that the Host’s Checksum and the Device Checksums identically match each other (Figure 6-25 b).

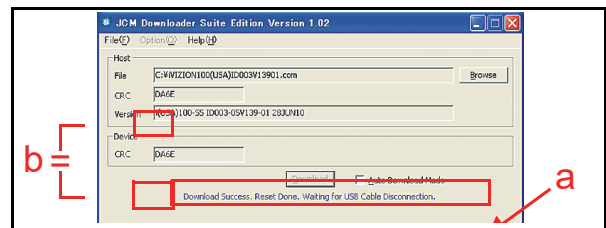


Figure 6-25 Download Completed Screen 2



NOTE: When the software downloaded shows completed on the JCM Tool Suite Screen, the iVIZION Red and Green LED will continue to flash as the software is transferred and loaded into the iVIZION. Do not turn the unit off until the Status LED turns off.

This completes the iVIZION Software Downloading Procedures.

Calibration

This section provides instructions for performing a calibration of the Acceptor Unit Sensors and the Transport Unit Sensors within the iVIZION Unit.

When to Calibrate

Calibration should be performed when one of the following four (4) conditions occur:

1. When removing one of the Circuit Boards.
2. When replacing one of the Circuit Boards.
3. When dirt adheres to the Sensors (See “iVIZION Sensor Cleaning Locations” on page 2-12).
4. When the Banknote Acceptance Rate becomes drastically degraded.

Calibration Order

Table 6-1 lists the Calibration Order related to each iVIZION Sensor’s Screen indication.

Table 6-1 iVIZION Sensor Calibration Order

Step	Screen Indication	Related Sensor
Calibration #1	Box RUNNING	Cash Box Sensor
	Nearly Full RUNNING	Nearly Full Sensor
	Feed-Out RUNNING	Feed-Out Sensor
Calibration #2	Home Position RUNNING	Home Position Sensor
	Feed-In RUNNING	Feed-In Sensor
	Entrance RUNNING	Entrance Sensor
	Exit RUNNING	Exit Sensor
Calibration #3	UV RUNNING	UV Sensor (Upper)
	UV RUNNING	UV Sensor (Lower)
Calibration #4	CIS RUNNING	CIS transmissive Sensor
		CIS Sensor (Lower)
		CIS Sensor (Upper)

Calibration Tool Requirements

Figure 6-26 illustrates and list identifies the calibration Tools and equipment interconnects necessary to install an iVIZION Unit away from its Host Machine.



NOTE: When the “USB “A” Terminal” is connected to a USB Hub, the iVIZION may not be operating. Ensure that the “USB “A” Terminal” is properly connected directly to the USB Port of the PC.

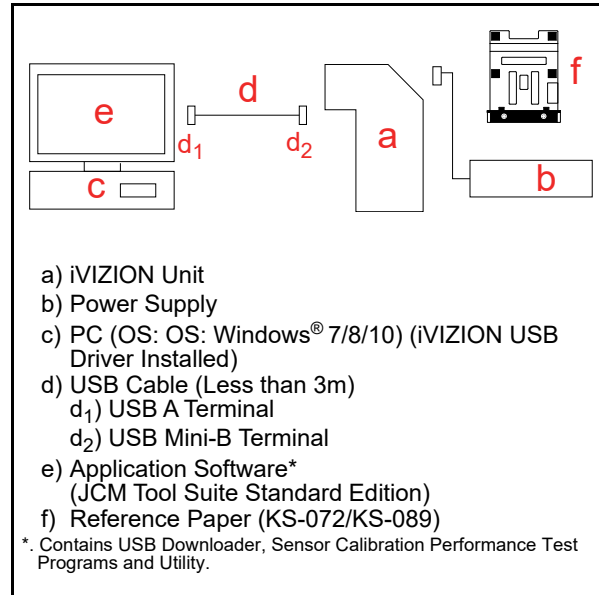


Figure 6-26 Remote Calibration Tools Required

Reference Paper Placement

Placing the KS-072/KS-089 Reference Paper

This portion provides information concerning the KS-072/KS-089 Reference Paper’s settings and uses.



NOTE: Do not touch the Paper Surfaces of either side of the KS-072/KS-089 Reference Paper (Figure 6-27 a).

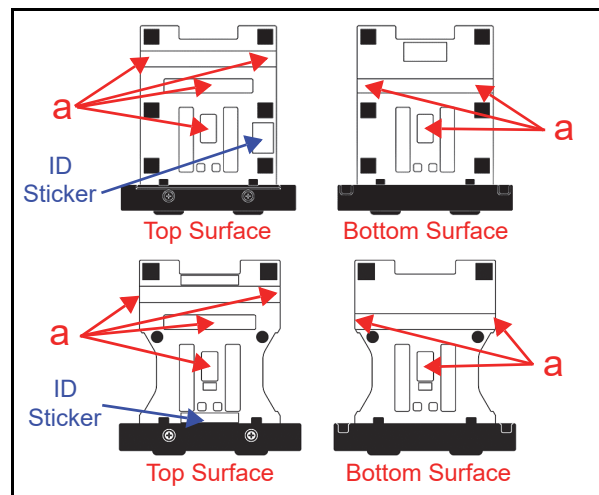


Figure 6-27 KS-072/KS-089 Reference Paper

Perform the following steps to properly place the KS-072/KS-089 Calibration Reference Paper into the iVIZION Unit:

1. Open the Upper Guide while pressing in on the Upper Guide Access Levers located on each side of the Acceptor Unit that are indicated by the **Blue Arrows** in Figure 6-28a.
2. Place the KS-072/KS-089 Reference Paper (Figure 6-28 b) in the Unit until its Catch Edge reaches both the left and right side of the Frame (Figure 6-28 c).

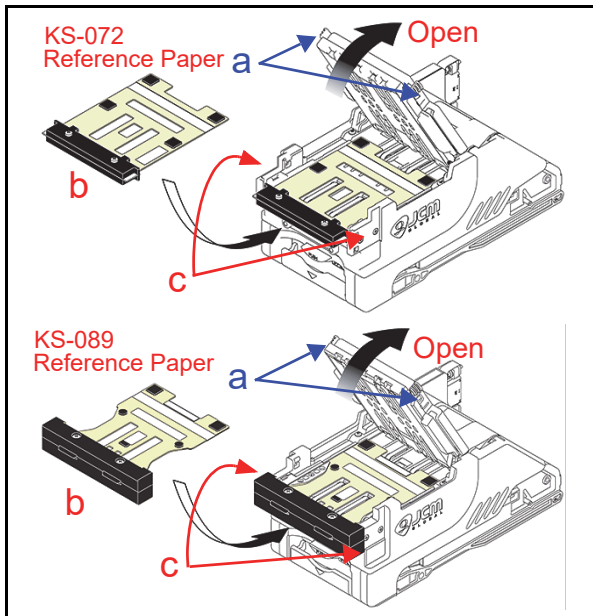


Figure 6-28 Reference Paper Setting 1

NOTE: Place the KS-072/KS-089 Reference Paper so the ID Sticker is visible, otherwise, Calibration will not be performed correctly.

3. Firmly close the Upper Guide (Figure 6-29 a) until it “clicks” into place, and ensure that both sides are tightly closed and locked in place.

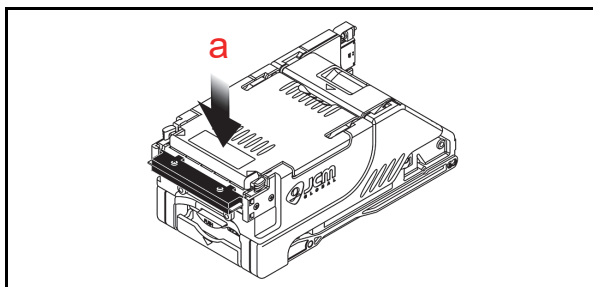


Figure 6-29 Reference Paper Setting 2

Calibration Procedure

The following two (2) methods exist for performing each of the iVIZION Calibration Procedures:

- Calibration Only
- Calibration plus Serial Number Writing.

Calibration Only

Perform the following steps to just calibrate the iVIZION Unit Sensors:

1. Turn the iVIZION Unit’s Power Switch **OFF**.
2. Set DIP Switch #8 to **ON** (Figure 6-30).
3. Turn the iVIZION Unit’s Power Switch **ON**. The Status LED will begin flashing and then will light a steady **Blue** Color.



Figure 6-30 DIP Switch #8 ON

4. Launch the “JCM Tool Suite Standard Edition” Application. The “**JCM Tool Suite Standard Edition**” Screen shown in Figure 6-31 will appear when the application becomes active.
5. Click on, and hold-down the “Service Mode” Pull-Down Menu Selection (Figure 6-31 a) and slide-down to select “Sensor Adjustment” from within the Pull-Down Menu (Figure 6-31 b).

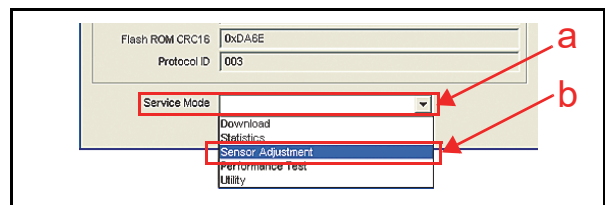


Figure 6-31 JCM Tool Suite Standard Edition Screen 3

6. This action will activate the “iVIZION Calibration Ver.X.XX” Mode automatically, and the Screen shown in Figure 6-32 will appear.

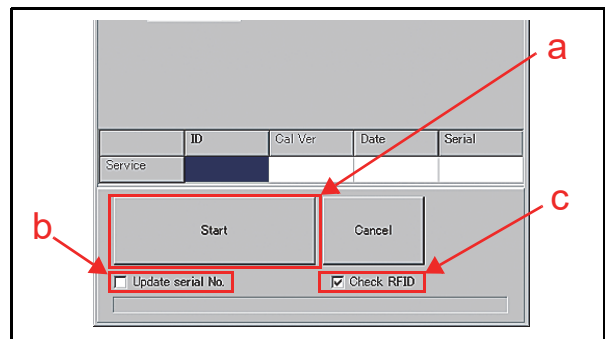


Figure 6-32 iVIZION Calibration Ver.X.XX Screen

NOTE: Writing a Serial No. can be performed after a Calibration is completed. To do so, Click on the “Update serial No.” Check-box (Figure 6-32 b) if the iVIZION Unit needs its current Serial No. written.

NOTE: If the RFID Board is not featured within the iVIZION Unit, remove the check in the “Check RFID” Check-box.

7. Click on the “Start” Screen Button (Figure 6-32 a) to begin the following three (3) sequential Sensors Calibration Procedures:

- Cash Box Sensor
- Nearly Full Sensor
- Feed-Out Sensor

Calibration will be performed in the above order while one of either “Box RUNNING”, “Nearly Full RUNNING” and “Feed-Out RUNNING” messages is showing on the Screen (Figure 6-33).

NOTE: If the “Check RFID” Check-box shown in Figure 6-33a is unchecked, the “Calibration Information” Screen shown in Figure 6-34 will appear. When present, click on the “OK” Screen Button (Figure 6-34 a) to begin the Calibration Procedure.

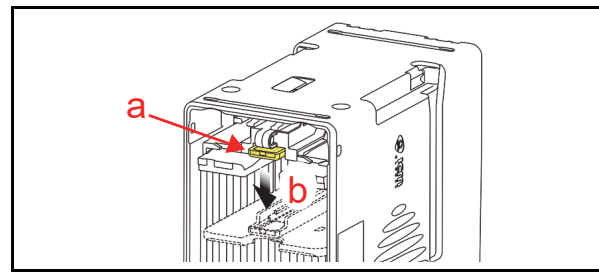


Figure 6-36 Pusher Plate Release Location

10. Hold the Pusher Plate down (Figure 6-37 a) and slide a 80x50mm piece of Cardboard (Figure 6-37 b) in between the Frame Outer LR Guides (Figure 6-37 c) and the Pusher Plate.

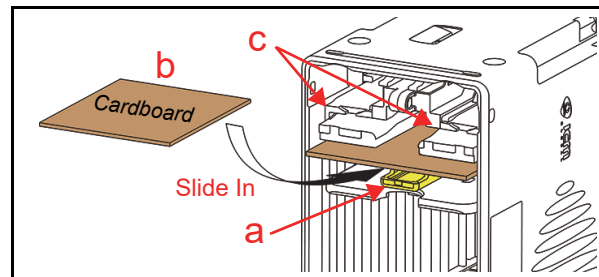


Figure 6-37 Cardboard Setting Location

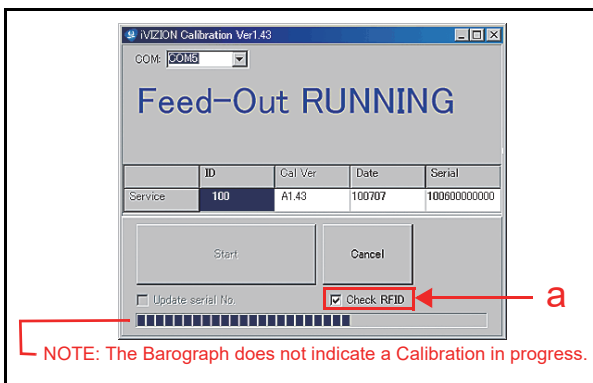


Figure 6-33 Feed-Out Calibration Proceeding Screen

NOTE: The Barograph does not indicate a Calibration in progress.

11. Reseat the Cash Box back into its Frame position.
12. Click on the “OK” Screen Button (Review Figure 6-35 a) to begin the following four (4) Sensor Calibration Procedures:

- Home Position Sensor
- Feed-In Sensor
- Entrance Sensor
- Exit Sensor

Calibration will be performed in the above order while one of “Home Position RUNNING”, “Feed-In RUNNING”, “Entrance RUNNING” or “Exit RUNNING” messages is showing on the Screen (Figure 6-38).

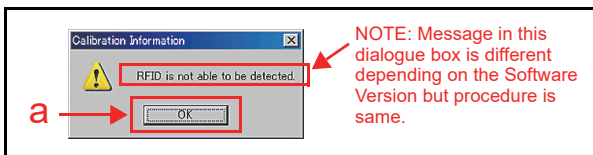


Figure 6-34 Calibration Information Screen 1

NOTE: Message in this dialogue box is different depending on the Software Version but procedure is same.

Once the three (3) Sensor Calibration Procedures are complete, the “Calibration Information” Screen shown in Figure 6-35 will appear.

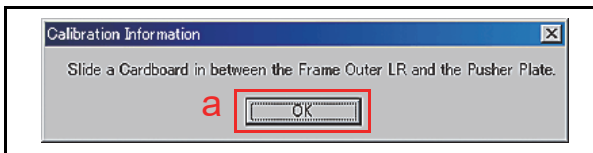


Figure 6-35 Calibration Information Screen 2

8. Remove the Cash Box to set the Pusher Plate for the Home Position Sensor Calibration Procedure.
9. Open the Cash Box and press down on the Pusher Release Plate (Figure 6-36 a & b).

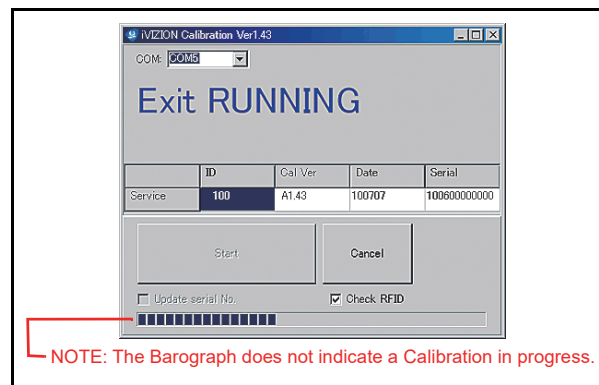


Figure 6-38 Exit Calibration Proceeding Screen

NOTE: The Barograph does not indicate a Calibration in progress.

Once the four (4) Sensors Calibration Procedures are complete, the “Calibration Information” Screen shown in Figure 6-39 will appear.

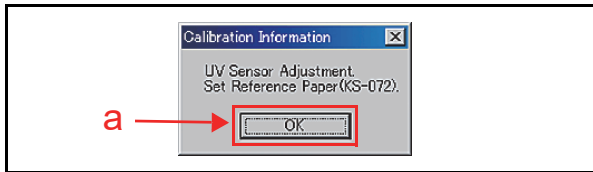


Figure 6-39 Calibration Information Screen 3

13. Remove the Cash Box and remove the piece of Cardboard, then reseat the Cash Box into the iVIZION Unit again.
14. Place Reference Paper KS-072/KS-089 into the iVIZION Unit (See “Placing the KS-072/KS-089 Reference Paper” on page 6-6 of this Section).
15. Click on the “OK” Screen Button (Figure 6-39 a) to begin the following two (2) UV Sensor Calibration Procedures:
 - Lower UV Sensor
 - Upper UV Sensor
 Calibration will be performed in the above alphabetic order while “UV RUNNING” is showing on the Screen (Figure 6-40).

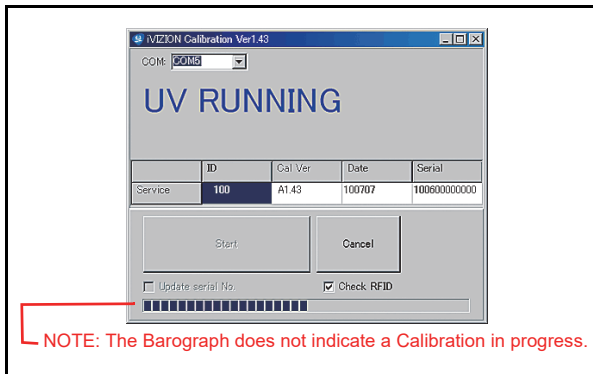


Figure 6-40 UV Calibration Proceeding Screen

Once the UV Sensor Calibration is complete, the “Calibration Information” Screen shown in Figure 6-41 will appear.

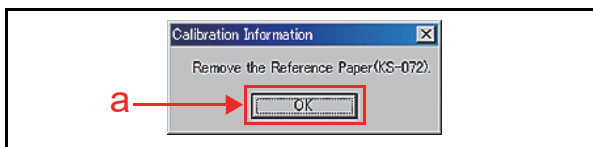


Figure 6-41 Calibration Information Screen 4

16. Remove the KS-072/KS-089 Reference Paper and click on the “OK” Screen Button (Figure 6-41 a) to begin the UV Sensor Non-Paper Calibration. Once the UV Sensor Non-Paper Calibration is complete, the “Calibration Information” Screen shown in Figure 6-42 will appear.

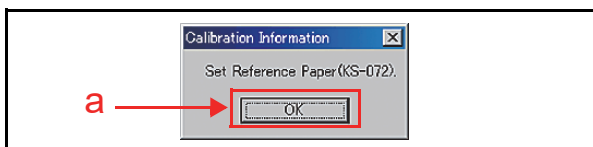


Figure 6-42 Calibration Information Screen 5

17. Place the KS-072/KS-089 Reference Paper back into the iVIZION Unit (See “Placing the KS-072/KS-089 Reference Paper” on page 6-6 of this Section).
18. Click on the “OK” Screen Button (Figure 6-42 a) to begin the following three (3) CIS Calibration Procedures:
 - CIS Transmissive
 - CIS Upper
 - CIS Lower
 Calibration will be performed in the above order while “CIS RUNNING” is showing on the Screen (Figure 6-43).

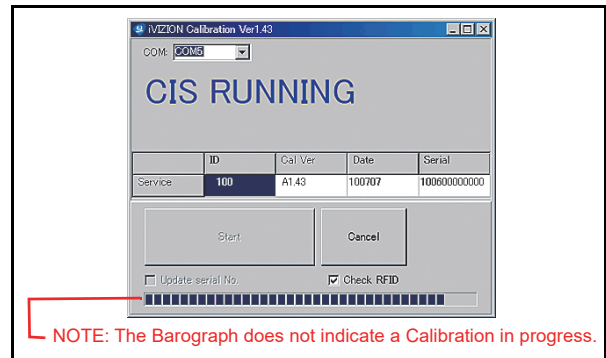


Figure 6-43 CIS Calibration Proceeding Screen

Once the CIS Calibration is complete, the “Calibration Information” Screen shown in Figure 6-44 will re-appear.

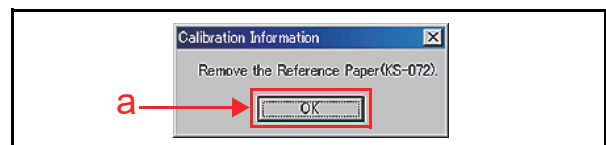


Figure 6-44 Calibration Information Screen 6

19. Remove the KS-072/KS-089 Reference Paper and click on the “OK” Screen Button (Figure 6-44 a) to begin the CIS Sensor Non-Paper Calibration Procedure. Once the CIS Non-Paper Calibration Procedure is complete, the Calibration Value will be written to the EEPROMs located on the Sensor Board and the CPU Board (Figure 6-45).

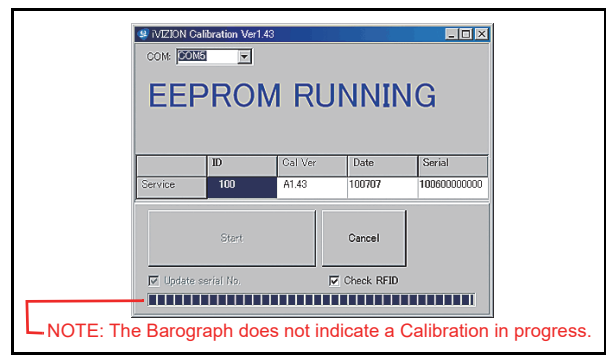


Figure 6-45 Calibration Value Writing Screen

20. When the Calibration Value writing EEPROM writing is complete, the “**Calibration Information**” Screen shown in Figure 6-46 will appear.
21. Click on the “OK” Screen Button (Figure 6-46 a).

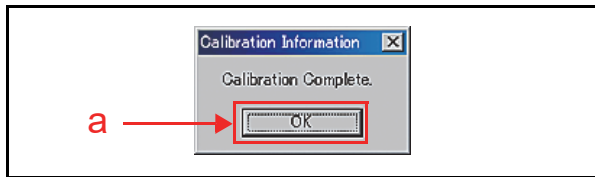


Figure 6-46 Calibration Complete Screen

This completes the Paper Calibration Procedures. Refer to “Reference Paper Use Precautions” on page 1-4 to properly store and prevent damage to the KS-072/KS-089 Reference Paper.

Calibration Plus Serial Number Writing

When the Sensor Calibration procedure is complete, the capability to write the Serial Number into the iVIZION Unit becomes possible. To write a Serial Number into Memory, proceed as follows:

1. Complete the initial Sensor Calibration Procedure first (See “Calibration Only” on page 6-7 of this Section).



NOTE: To perform the “Writing Serial No.”, process, click on the “Update serial No.” Check-box when the “iVIZION Calibration Ver.X.XX” Screen is active (See iVIZION Calibration Ver.X.XX Screen Figure 6-32 b on page 6-7 of this Section).

2. Once the CIS Sensor Calibration is complete, the “iVIZION Calibration Service Suite Edition” Screen shown in Figure 6-47 will appear.

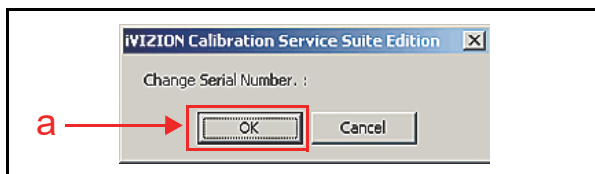


Figure 6-47 iVIZION Calibration Service Suite Edition Screen

3. Click on the “OK” Screen Button (Figure 6-47 a). The “**Setting Manufacture No**” Screen shown in Figure 6-48 will then appear.
4. Click on either the “▲” or “▼” Triangle Indication Buttons in each Serial Number Box located at the bottom of the Screen to either increase or decrease the numbers to change (Figure 6-48 a).
5. Click on the “OK” Screen Button located on the right side of the Screen (Figure 6-48 b).

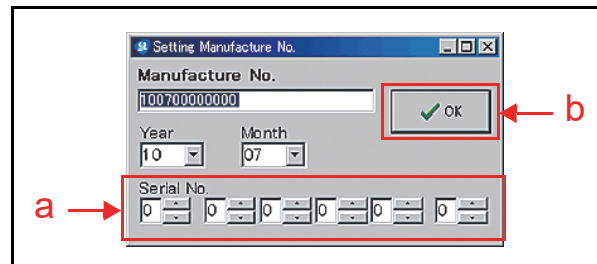


Figure 6-48 Setting Manufacture No. Screen

The Calibration Value and the Serial Number will then be written into the EEPROMs on the Sensor and the CPU Boards (Figure 6-49).

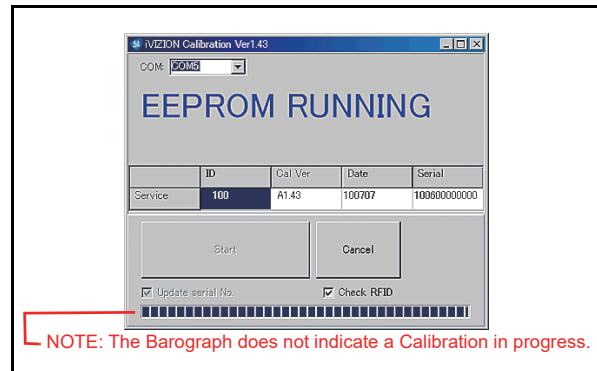


Figure 6-49 Calibration Value Writing Screen

When the data writing into the EEPROM is complete, the “**Calibration Information**” Screen shown in Figure 6-50 will appear.

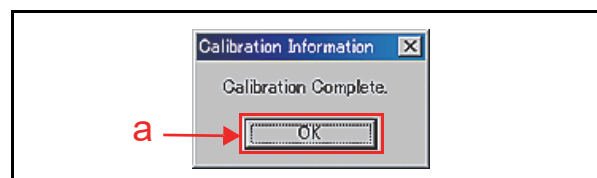


Figure 6-50 Adjustment Info Screen


6. Click on the “OK” Screen Button (Figure 6-50 a). This completes the Serial Number Writing Procedure.

Performance Tests

This portion explains the iVIZION Performance Test Procedures. The following two (2) methods exist to perform this Performance Test Procedure.

- Performance Test using a PC
-

Choose one (1) of the two (2) above Performance Test Procedures by selecting the one related to the particular circumstance desired.

 **NOTE:** Refer to Figure 6-1 and Figure 6-2 for the necessary Tools and Harness Connections and USB Cable Type Requirements respectively.

Performance Test Items using a PC

Table 6-2 lists the available Performance Test Items and their purpose using a PC for testing.

Table 6-2 PC Performance Test Items

No.	Test Item	Test Purpose	Status LED	
			Stand-by	Operating
1	Motor Normal Rotation	Testing the Transport Motor rotation in a Banknote intake direction	Blue Lit	Yellow Flashes
2	Motor Reverse Rotation	Testing the Transport Motor rotation in a Banknote reject direction		
3	Stacker Motor	Testing the Stacker Motor's movement		
4	Cycle Movement	Testing sequential movement from Banknote transportation to stacking at regular intervals without Banknotes		
5	Status LED Indication	Testing the Status LED Indications	Red	Green
			Blue	
6	Sensor ON/OFF	Testing each Sensor's Performance	Blue Lit	Blue Lit
7	DIP Switch ON/OFF	Testing the 8-Position DIP Switches Performance		
8	Banknote Acceptance	Testing Transportation, Validation, Stacking and Reject Performance, and the Vend Signal Output	Blue Lit	Extinguished (Out)
9	ICB Setting (Reading Ticket)	Setting the ICB Enable, Disable and Machine No. Functions.		

PC Performance Test Preparation

Perform following steps to begin the Performance Test Preparation Procedure:

1. Turn the iVIZION Unit's Power Switch **OFF**.
2. Remove the Transport Unit from the Frame.
3. Set 8-Position DIP Switch #8 to **ON**.

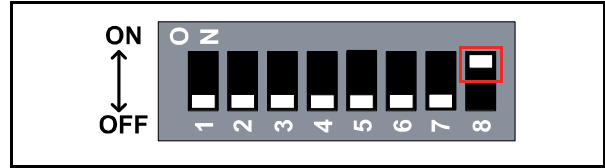


Figure 6-51 DIP Switch #8 Set ON

4. Place the Transport Unit into the Frame.
5. Turn the iVIZION Unit's Power Switch **ON**. The Status LED will light a steady **Blue** Color.
6. Launch the "JCM Tool Suite Standard Edition" Application. The Screen shown in Figure 6-52 will appear when the application becomes active.

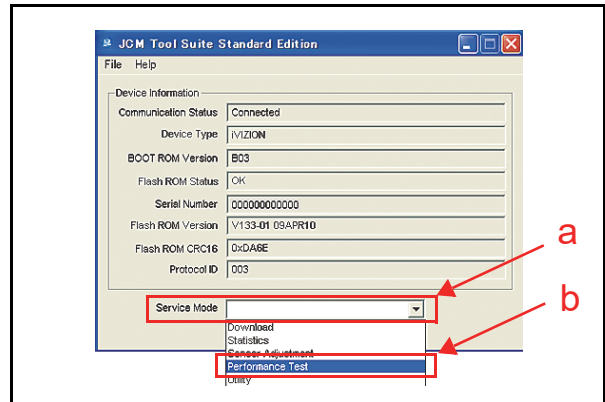


Figure 6-52 JCM Tool Suite Standard Edition Screen

7. Click on, and hold-down the "Service Mode" selection Pull-Down Menu (Figure 6-52 a) and Slide-down select "Performance Test" from the Pull-Down Menu Selections (Figure 6-52 b).
8. Activate the "iVIZION Test Item VerX.XX" Application and the Screen shown in Figure 6-53 will automatically appear.

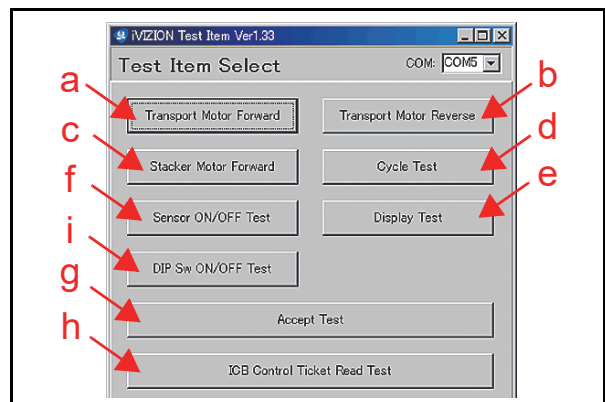


Figure 6-53 iVIZION Test Item VerX.XX Screen

9. Click on each Screen Button to begin its related Performance Test. A Screen similar the Screen shown in Figure 6-54 will appear for each Test. For more detail concerning each Performance Test, “Performance Test Items using a PC” on page 6-11 of this Section.
10. Click on the related “Start” Screen Button (Figure 6-54 a) to begin the desired Performance Test. When the desired Performance Test is complete, click on the “Stop” Screen Button (Figure 6-54 b).
If a return to the “Test Item Select” Screen is desired, click on the “Exit” Screen Button (Figure 6-54 c).

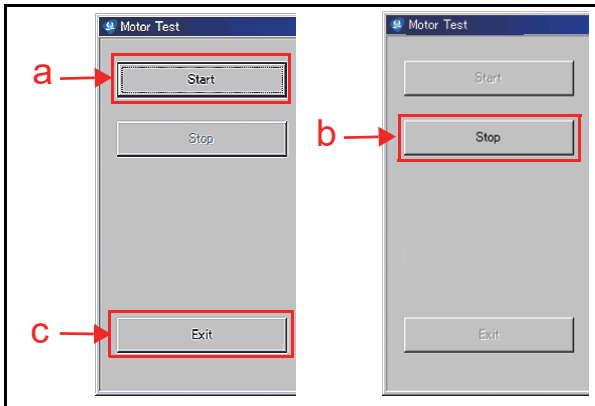


Figure 6-54 Start, Stop & Exit Screen Button

Performance Test Procedures

This portion provides information concerning each Performance Test Procedure.

Any Motor Test

Perform the following steps to test the Transport Motor’s Normal Rotation, the Transport Motor’s Reverse Rotation, the Stacker Motor’s operation and a complete Cyclic Movement Test.

The following four (4) Motor Tests available:

- Transport Motor Normal Rotation Test
- Transport Motor Reverse Rotation Test
- Stacker Motor Test
- Cyclic Movement Test.

To run a specific Test, proceed as follows:

1. Launch the “Test Item Select” Screen (Refer to the “PC Performance Test Preparation” on page 6-11 of this Section).
2. Click on the desired Test Screen Button from the Menu Screen provided (Refer back to Figure 6-53 a, b, c & d).
3. Click on the “Start” Screen Button (Refer to Figure 6-55 a) to begin each Test.
4. Check that the Status LED is blinking at a Yellow Color rate. (Table 6-3 to identify the various Status LED conditions).

5. Click on the “Stop” Screen Button (Figure 6-55 b) to end each Test.
6. Click on the “Exit” Screen Button (Figure 6-55 c) to return to the “Test Item Select” Screen.

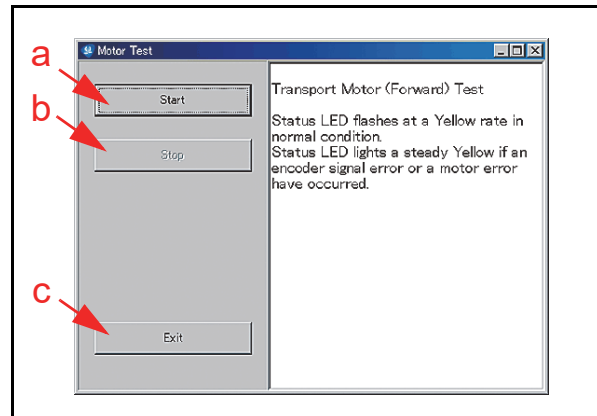


Figure 6-55 Transport Motor Normal Forward Test Screen

Table 6-3 lists the Status LED indications for each normal or abnormal Test Item condition.

Table 6-3 LED Indications for each condition

Test Item	Screen Button	Status LED	
		Normal	Abnormal
Transport Motor Normal Rotation	Transport motor Forward	Yellow Flashes	Lit Yellow or Extinguished (Out)
Transport Motor Reverse Rotation	Transport motor Reverse		
Stacker Motor	Stacker motor Forward		
Cyclic Movement*	Cycle Test		Red Flashes

*. Once the Cycle Movement Test is complete, transport movement will halt for approximately 25 seconds; then start the test again. (See “Error, Jam and Reject Code Tables” on page A-2 of Appendix A in this Service Manual when the Status LED indicates an abnormal operating condition).

LED Indicator Test

Perform the following steps to test the LED Indicators.

1. Launch the “**Test Item Select**” Screen again (Refer to “PC Performance Test Preparation” on page 6-11 of this Section).
2. Click on the “**Display Test**” Screen Button (Figure 6-53 e).
3. Click on the “**Start**” Screen Button (Figure 6-56 a) to begin the LED Indicator Test.

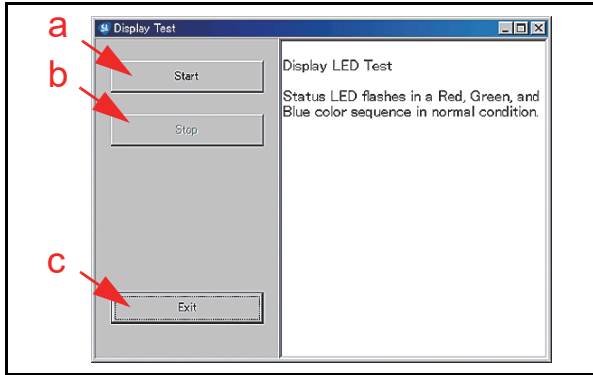


Figure 6-56 LED Indicator Test Screen

4. Check the Status LED’s condition. When the Status LED Indicator blinks in a Red, Green, and Blue Color sequence, the Status LED is performing normally.
5. Click on the “**Stop**” Screen Button (Figure 6-56 b) to end the LED Indicator Test.
6. Click on the “**Exit**” Screen Button (Figure 6-56 c) to return to the “**Test Item Select**” Screen.

Sensor ON/OFF Test

Perform the following steps to enable the Sensor ON/OFF Test.

1. Launch the “**Test Item Select**” Screen again (Refer to “PC Performance Test Preparation” on page 6-11 of this Section).
2. Click on the “**Sensor ON/OFF Test**” Screen Button (Figure 6-53 f).
3. Click on the “**Start**” Screen Button (Figure 6-57 a) to begin the Sensor ON/OFF Test. The current testing condition is indicated in a column adjacent to the Function being tested on the Figure 6-57 Screen.

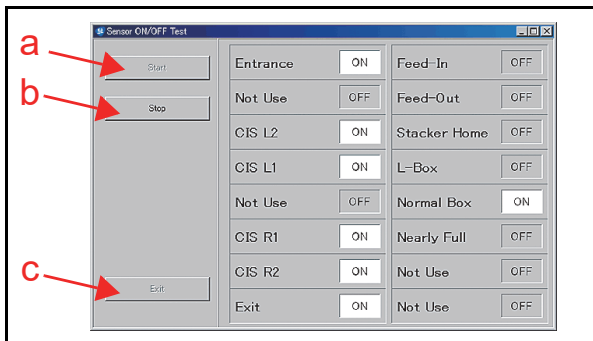


Figure 6-57 Sensor ON/OFF Test Screen

Five (5) actions are required to check all twelve (12) Sensors in the iVIZION Unit. Refer to Table 6-4 for each action regarding the related Sensor being tested.

When the desired test action is complete, the resulting condition of each Sensor is indicated by its Screen condition turning “ON”.

Table 6-4 Sensor Actions and Conditions

Action	Sensor	Condition
Open the Acceptor Unit's Upper Guide	Entrance	OFF→ON
	CIS L2	
	CIS L1	
	CIS R1	
	CIS R2	
	Exit	
Open the Transport Unit's Upper Guide	Feed-In	OFF→ON
	Feed-Out	
No Action Required (Seat the Cash Box correctly in place)	Cash Box (Large Cash Box or Standard Cash Box)	OFF→ON
Remove the Cash Box from the Unit	Nearly Full	OFF→ON
Hold-down the Pusher Plate and slide a 80x50mm piece of Cardboard in-between the Frame Outer LR and the Pusher Plate*	Home Position	OFF→ON

*. Review Figure 6-36 and Figure 6-37 on page 6-8 regarding how to set the Cardboard in place.

4. Click on the “**Stop**” Screen Button (Figure 6-57 b) to end the Sensor ON/OFF Test.
5. Click on the “**Exit**” Screen Button (Figure 6-57 c) to return to the “**Test Item Select**” Screen.

Banknote Acceptance Test

Perform the following steps to test the transportation, validation, stacking and reject sequential performance and Vend Signal Output functions of the iVIZION Unit.

1. Launch the “**Test Item Select**” Screen again (Refer to “PC Performance Test Preparation” on page 6-11 of this Section).
2. Click on the “**Accept Test**” Screen Button (Figure 6-53 g).
3. Click on the “**Start**” Screen Button (Figure 6-58 a) to begin the Banknote Transport Test.
4. Insert a Banknote into the iVIZION Unit. The Banknote’s Denomination will be indicated on a Screen similar to Figure 6-58d.

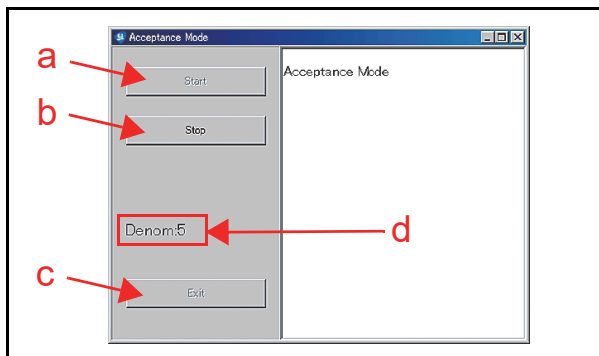



Figure 6-58 Denomination Indication Location

Table 6-5 Denomination Valuation List

Denomination	Value Indication
\$1	1
\$5	5
\$10	10
\$20	20
\$50	50
\$100	100
Ticket	Ticket

5. Click on the “**Stop**” Screen Button (Figure 6-58 b) to end the Acceptance Test Screen.
6. Click on the “**Exit**” Screen Button (Figure 6-58 c) to return to the “**Test Item Select**” Screen.

 **NOTE:** If the intent is to perform other tests, close all of the Screens open on the PC, and turn the iVIZION Power Switch OFF; then, Turn the iVIZION Power Switch back ON, and begin the Performance Test Procedures over again.

ICB Function Setting (Barcode Coupon)

Perform the following steps to set the ICB Enable/Disable Functions when using a Barcode Coupon.

To enable the ICB function:

1. Launch the “**Test Item Select**” Screen again (Refer to “PC Performance Test Preparation” on page 6-11 of this Section).
2. Click on the “**ICB Control Ticket Read Test**” Screen Button (Figure 6-53 h).
3. Click on the “**Start**” Screen Button (Figure 6-59 a) to begin the ICB Function Setting.

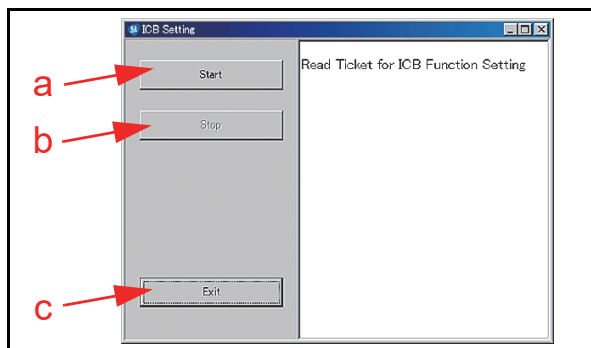




Figure 6-59 ICB Function Test Screen

4. Insert an “**ICB Enable Ticket**” Barcode Coupon. The Status LED will blink three (3) times at a **Green** Color rate when the ICB Enable Ticket is being read correctly.
5. Once the Status LED begins blinking normally, insert a “**JCM Global**” Barcode Coupon in order to configure the Machine Number for the iVIZION Unit being tested. The Status LED will blink three (3) times at a **Green** Color rate when the Machine Number is being read correctly. If the Status LED blinks at a **Blue** Color rate, an error condition has occurred (See “Error, Jam and Reject Code Tables” on page A-2 of Appendix A in this Service Manual for more details).
6. Click on the “**Stop**” Screen Button (Figure 6-59 b) to complete the ICB Function Setting operation.
7. Click on the “**Exit**” Screen Button (Figure 6-59 c) to return to the “**Test Item Select**” Screen.

 **NOTE:** If the intent is to perform other tests, close all of the Screens open on the PC, and turn the iVIZION Power Switch OFF; then, Turn the iVIZION Power Switch back ON, and begin the Performance Test Procedures over again.

To disable the ICB function:


1. Launch the “**Test Item Select**” Screen (Refer to “PC Performance Test Preparation” on page 6-11 of this Section).
2. Click on the “ICB Control Ticket Read Mode” Screen Button (Figure 6-53 h).
3. Click on the “Start” Screen Button (Figure 6-59 a) to begin the ICB Function Setting operation.
4. Insert an “ICB Disable Ticket” Barcode Coupon. The Status LED will blink three (3) times at a **Green** Color rate when the ICB Disable Ticket reading is properly completed. If the Status LED is blinks at a **Blue** Color rate, some error condition has occurred (See “Error, Jam and Reject Code Tables” on page A-2 of Appendix A in this Manual for more details).
5. Click on the “Stop” Screen Button (Figure 6-59 b) to finish the ICB Function Setting operation.
6. Click on the “Exit” Screen Button (Figure 6-59 c) to return to the “**Test Item Select**” Screen.

 **NOTE:** If the intent is to perform other tests, close all of the Screens open on the PC, and turn the iVIZION Power Switch OFF; then, Turn the iVIZION Power Switch back ON, and begin the Performance Test Procedures over again.

DIP Switch ON/OFF Test

Perform the following steps to test the 8-Position DIP Switch ON/OFF Functions:

1. Turn the iVIZION Power Switch to **OFF**.
2. Remove the Transport Unit from the iVIZION Unit’s upper Section.
3. Set the desired DIP Switches being tested to **ON** and set DIP Switch #8 to **ON**. DIP Switch #8 will always be set to ON during all remaining Switch Tests being performed (The Figure 6-60 example shows DIP Switch #3 and #5, plus DIP Switch #8 all set to **ON**).
4. Launch the “**Test Item Select**” Screen (Refer to “PC Performance Test Preparation” on page 6-11 of this Section).
5. Click on the “DIP Sw ON/OFF Test” Screen Button (Review Figure 6-53 i) to begin the DIP Switch ON/OFF Test.
6. Click on the “Start” Screen Button (Figure 6-60 a). The tested DIP Switch condition will be indicated on the Screen similar to that shown in Figure 6-60. Make sure the desired DIP Switch Number is shown as “ON”.

 **NOTE:** If DIP Switch #3 and #5 were set during a previous procedure, the Screen will indicate “ON” in each Field Window related to their DIP Switch Number.

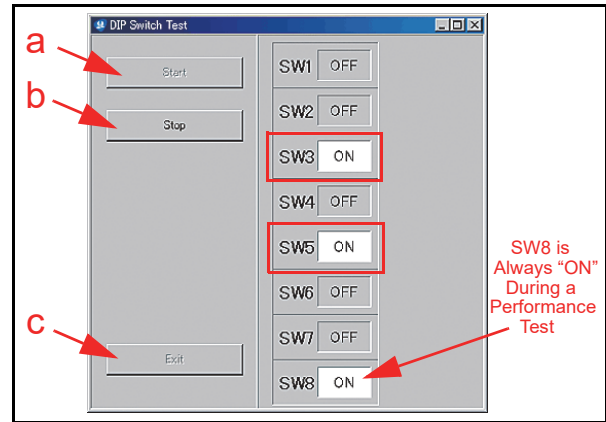



Figure 6-60 DIP Switch ON/OFF Test Screen 1

7. Set the desired DIP Switch to **OFF** (Figure 6-61 example = DIP Switch #3 and #5).
8. Make sure the desired DIP Switch Number is “OFF”. (If DIP Switch #3 and #5 were set during a previous procedure, the Screen will indicate “ON” in each Field Window related to their DIP Switch Number).
9. Click on the “Stop” Screen Button (Figure 6-61 b) to end the DIP Switch ON/OFF Test.
10. Click on the “Exit” Screen Button (Figure 6-61 c) to return to the “**Test Item Select**” Screen.
11. Turn the iVIZION Power Switch **OFF**.
12. Place the Transport Unit onto the Frame.

 **NOTE:** If it is necessary to perform another test, make sure that DIP Switch No.8 is still set to ON.

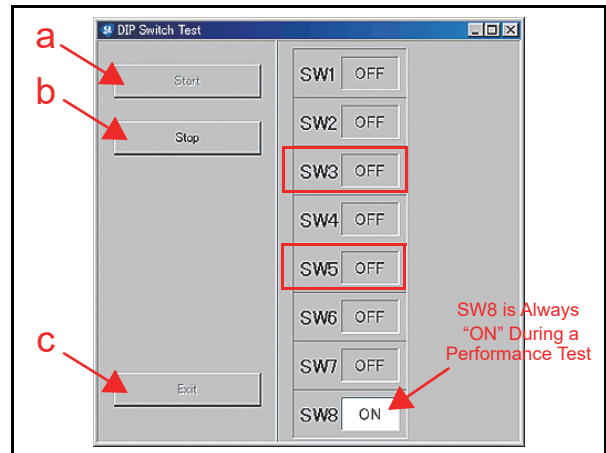


Figure 6-61 DIP Switch ON/OFF Test Screen 2

13. .

iVIZION Utility Tools

This portion provides information regarding each iVIZION Service Mode setting procedure. The following two (2) Tool setting types exist when using the iVIZION Utility Tools:

- CIS Image Views
- ICB Function Settings.

NOTE: Refer to Figure 6-1 and Figure 6-2 for the necessary Tools and Harness Connections and USB Cable Type Requirements respectively.

ICB/Image Setting Tool Requirements

NOTE: The ICB Function Status is initially Factory Set to "INHIBIT" as a standard function. Therefore, the iVIZION Unit's ICB must be first initialized using the USB Tool Suite Utility Options. Refer to the JCM ICB Installation Guide for exact programming descriptions and operational details.

ICB/Image Setting Change Preparation

Perform the following steps to set or reset the ICB Functions.

1. Turn the iVIZION Unit's Power Switch to **ON**.
2. Launch the "JCM Tool Suite Standard Edition" Application. The Figure 6-62 Screen will appear when the application becomes active.
3. Click on, and hold-down on the "Service Mode" selection Pull-Down Menu (Figure 6-62 a), and Slide-down select "Utility" from the Pull-Down Menu Sections (Figure 6-62 b).

The "iVIZION Utility Tool Version X.XX for Suite Edition" Application Menu selection Screen shown in Figure 6-63 will automatically appear.

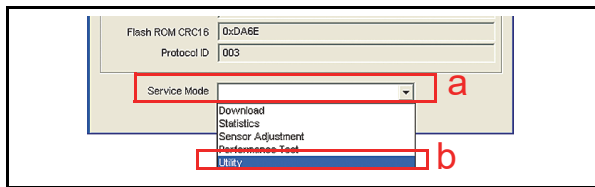


Figure 6-62 JCM Tool Suite Standard Edition

CIS Image Tool

The CIS Image Tool provides graphic views of the scanned Banknote images directly. This feature is available to confirm the last stacked Banknote denomination by presenting its scanned front and back images.

1. Click on the large "1) CIS IMAGE" Screen Button located on the "iVIZION Utility Tool" Screen (Figure 6-63 a).
2. Confirm that the "CIS Image" Screen shown in Figure 6-64 appears.

3. Click on the "Read" Screen Button (Figure 6-64 a) to see an image of the last scanned Banknote's upper and lower surface images on the Screen (Figure 6-65 b & c).
4. Click on the "File Save" Screen Button (Figure 6-64 b) if necessary to save the data.
5. Click on the "File Read" Screen Button (Figure 6-64 c) to retrieve the saved file data.

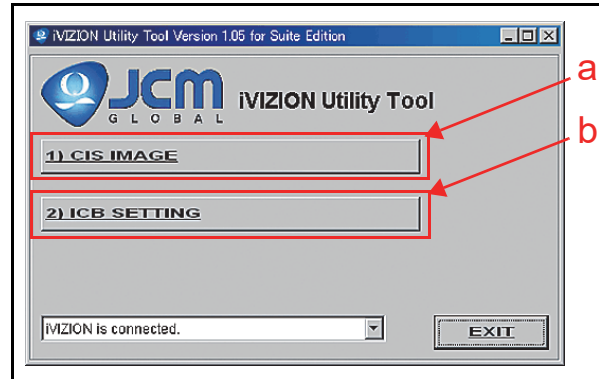


Figure 6-63 iVIZION Utility Tool Version X.XX for Suite Edition Screen 1



Figure 6-64 Empty CIS IMAGE Screen

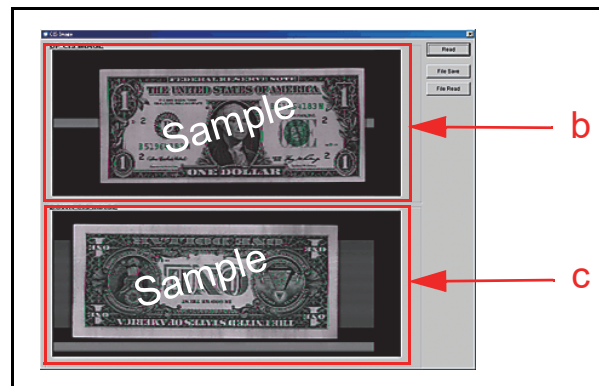


Figure 6-65 Last Acceptance CIS IMAGE Screen

NOTE: The CIS Image data will not be retained if the iVIZION's Power Supply is turned OFF after stacking the last Banknote!

ICB Function Setting

This portion provides information about each Screen Button located on the "ICB Function" Screen shown in Figure 6-67.

The following three (3) setting types are available for use with the ICB Functions:

- Setting the ICB Enable/Disable Function
- Setting the Machine Number
- Setting the ICB Inhibit Function.

Setting ICB Enable/Disable Functions

The following portion explains each ICB setting when activated:

1. Click on the large “**2) ICB SETTING**” Screen Button (Figure 6-66 a) located on the “iVIZION Utility Tool” Screen.

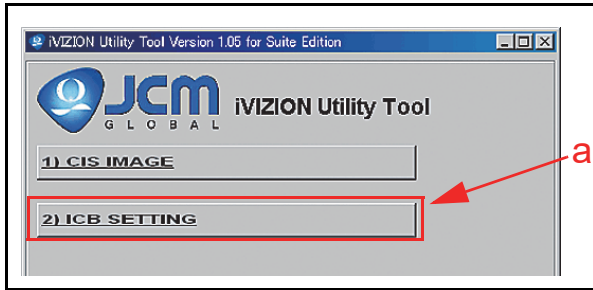


Figure 6-66 iVIZION Utility Tool Version X.XX for Suite Edition Screen 2

2. Confirm that the “ICB Function” Screen shown in Figure 6-67 appears. Seven (7) Screen Buttons exist on this Screen.

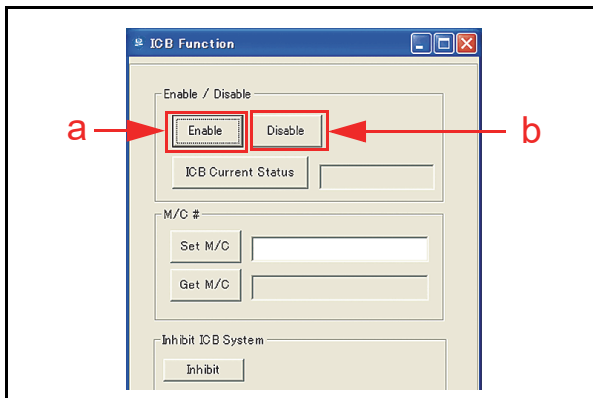




Figure 6-67 ICB Function Screen

Enabling the ICB Function

To set the ICB “Enable” Function when an RFID Circuit Board, is installed in the iVIZION Unit.

 **NOTE:** If the Cash Box is set to “System Inhibit” or if the RFID Circuit Board IS NOT installed, the Status LED will flash at a Blue Color rate to notify that an error exists (See Table 6-6 on page 6-19 of this Section to resolve this issue).

 **NOTE:** To set the Cash Box setting “Enable” from “System Inhibit”, the Read-Write Tool is required.

To set ICB Enable proceed as follows:

1. First, confirm that the Cash Box setting is set to “System Enable” (Figure 6-76 b).
2. Then click on the “Enable” Screen Button (Figure 6-67 a) to activate the ICB Function.
3. When the ICB Function is correctly enabled, the “**ICB Successfully Enabled.**” pop-up Dialog Message Window shown in Figure 6-68 will appear.
4. Click the “OK” Screen Button (Figure 6-68 a) to accept the reported message.



NOTE: Confirm “System Enable” condition by “Get ICB System Status” function (Figure 6-76 a).



NOTE: When ICB is Enabled, a Machine Code Number can be assigned. See “Setting the Machine Code Number (M/C #)” on page 6-18

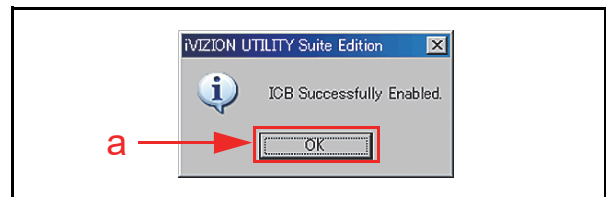


Figure 6-68 Enable Setting Completion

Disabling the ICB Function

The ICB “Disable” Function is used when an RFID Circuit Board IS NOT installed or the ICB Function is not being used.



NOTE: If the ICB Function is “Enable” when the RFID Circuit Board IS NOT installed, the Status LED will flash at a Blue Color rate to notify that an error exists (See Table 6-6 on page 6-19 of this Section to resolve this issue).

To set ICB Disable proceed as follows:



NOTE: If the RFID Circuit Board IS installed, set the Cash Box to “System Inhibit” (See Figure 6-74 on page 6-19).

1. Then click on the “Disable” Screen Button (Figure 6-67 b) to disable the ICB Function.
2. When the ICB Function is correctly disabled, the “**ICB Successfully Disabled**” pop-up Dialog Message Window shown in Figure 6-69 will appear.

3. Click the “OK” Screen Button (Figure 6-69 a to accept the reported message).

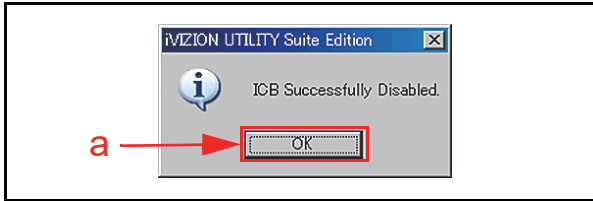


Figure 6-69 Disable Setting Completion

ICB Current Status Screen Button

To check the current ICB Enable/Disable Setting Status proceed as follows:

1. Click on the “ICB Current Status” Screen Button (Figure 6-70 a).
2. The Current ICB Enable/Disable Status will appear in a Field Window next to the “ICB Current Status” Screen Button (Figure 6-70 b).

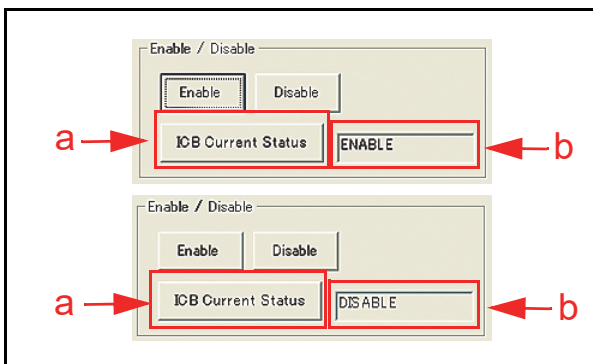


Figure 6-70 ICB Current Status Screen

Setting the Machine Code Number (M/C #)

This setting allows a unique fourteen (14) digit Machine Code Number to be entered into the iVIZION. The Machine Number helps to identify to which Game Machine the iVIZION belongs, and avoids the using of an assigned Cash Box in another Game Machine.

To enter and set a Machine Code Number, proceed as follows:

1. Type the fourteen (14) Machine Code Number in the Text Field Window located next to the “Set M/C” Screen (Figure 6-71 b).

2. Click on the “Set M/C” Screen Button (Figure 6-71 b) to set the Machine Number.

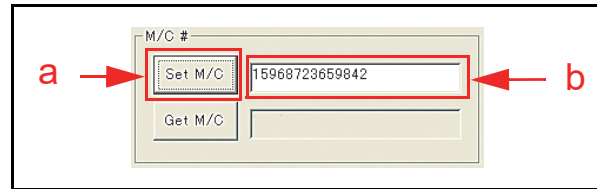


Figure 6-71 Machine Number Setting



NOTE: When the Machine Code Number is less than 14 digits, zeros will automatically be added, as leading characters, to create a recognizable 14 digit Machine number.

3. When the Machine Number is correctly set, the “M/C# Set Successfully” pop-up Dialog Message Window shown in Figure 6-72 will appear.
4. Click the “OK” Screen Button (Figure 6-72 a) to accept the reported message.

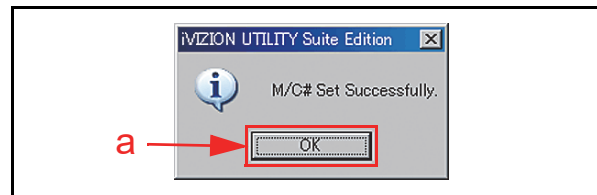


Figure 6-72 Machine Number Setting Completion

To retrieve the current Machine Code Number set in an iVIZION Unit proceed as follows:

1. Click on the “Get M/C” Screen Button (Figure 6-73 a).
2. The existing fourteen (14) Machine Code Number will appear in the Text Field Window located next to the “Get M/C” Screen Button (Figure 6-73 b).

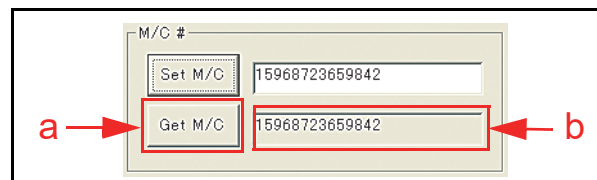


Figure 6-73 Machine Number Indication

Setting Inhibit ICB System

The Inhibit ICB System Function is used to get the status of the RFID Module in the Cash Box or disable the RFID Module in the Cash Box.

To set the Cash Box ICB Function to “Inhibit” when the RFID Circuit Board is installed proceed as follows:

1. Click on the “Inhibit” Screen Button (Figure 6-74 a).

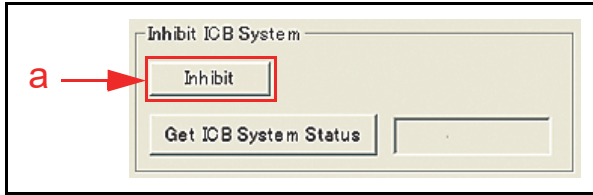


Figure 6-74 Inhibit Screen Button Location

 **NOTE:** The JCM Factory Default Setting is “Inhibit” (Table 6-6).

2. When the ICB Inhibit Function in a Cash Box is properly set, the “ICB Inhibition Successfully” pop-up Dialog Message Window shown in Figure 6-75 will appear.
3. Click on the “OK” Screen Button (Figure 6-75 a) to accept the reported message.

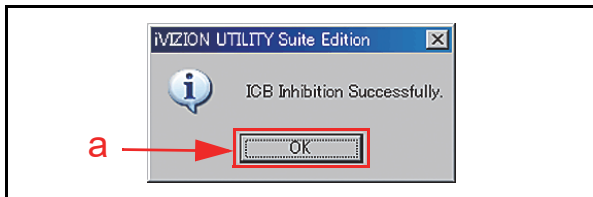



Figure 6-75 Inhibit Setting Completion

 **NOTE:** To “System Enable” a Cash Box, it must be place on a Read-Write Tool and be initialized.

To retrieve the current ICB Function Setting in a Cash Box proceed as follows:

1. Click on the “Get ICB System Status” Screen Button (Figure 6-76 a).
2. The existing ICB Inhibit Function set in the Cash Box will appear in the pop-up Dialog Message Window next to the “Get ICB System Status” Screen Button (Figure 6-76 b).

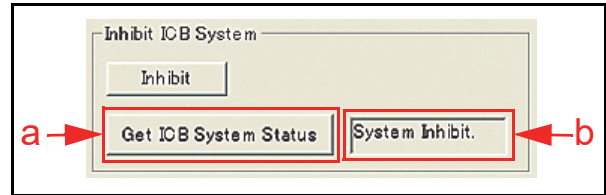


Figure 6-76 ICB System Status Indication

ICB Function Operational Condition

Table 6-6 lists various functional combinations available for the iVIZION Unit, RFID Board, Cash Box and ICB Function Settings (Refer to “Error, Jam and Reject Code Tables” on page A-2 of Appendix A in this Manual for more details concerning each error type).

Table 6-6 ICB Setting Function Operational Condition

iVIZION	RFID Board	Cash Box	Initialization Cash Box	Installed the same Machine	Installed another Machine	Read/Write Tool Data Correction	Checksum Errors
Enable	Installed	System Enable	OK	OK	Not Available	Not Available	Not Available
		System Inhibit	Not Available	Not Available	Not Available	Not Available	Not Available
	NOT Installed	-	Not Available	Not Available	Not Available	Not Available	Not Available
Disable	Installed	System Enable	Not Available	Not Available	Not Available	Not Available	Not Available
		System Inhibit	OK	OK	OK	OK	OK
	NOT Installed	-	OK	OK	OK	OK	OK

THIS PAGE INTENTIONALLY LEFT BLANK

iVIZION™ Series

Next-Generation Banknote Acceptor Unit

Section 7

7 EXPLODED VIEWS & PARTS LISTS

This section provides product exploded views and parts lists for the iVIZION™ Series Next-Generation Banknote Acceptor Unit (iVIZION). This section contains the following Unit's exploded view and part list information.



NOTE: When replacing parts, make sure that the parts are functionally the same as advised by JCM.



NOTE: Parts may be changed for improvement without notice.

- iVIZION Entire Unit
- iVIZION Acceptor Unit
- iVIZION Transport Unit
- iVIZION SS Version Frame Unit
- iVIZION Cash Box
- iVIZION Frame Unit
- iVIZION HC Cash Box
- iVIZION Option Parts

iVIZION Entire Unit View

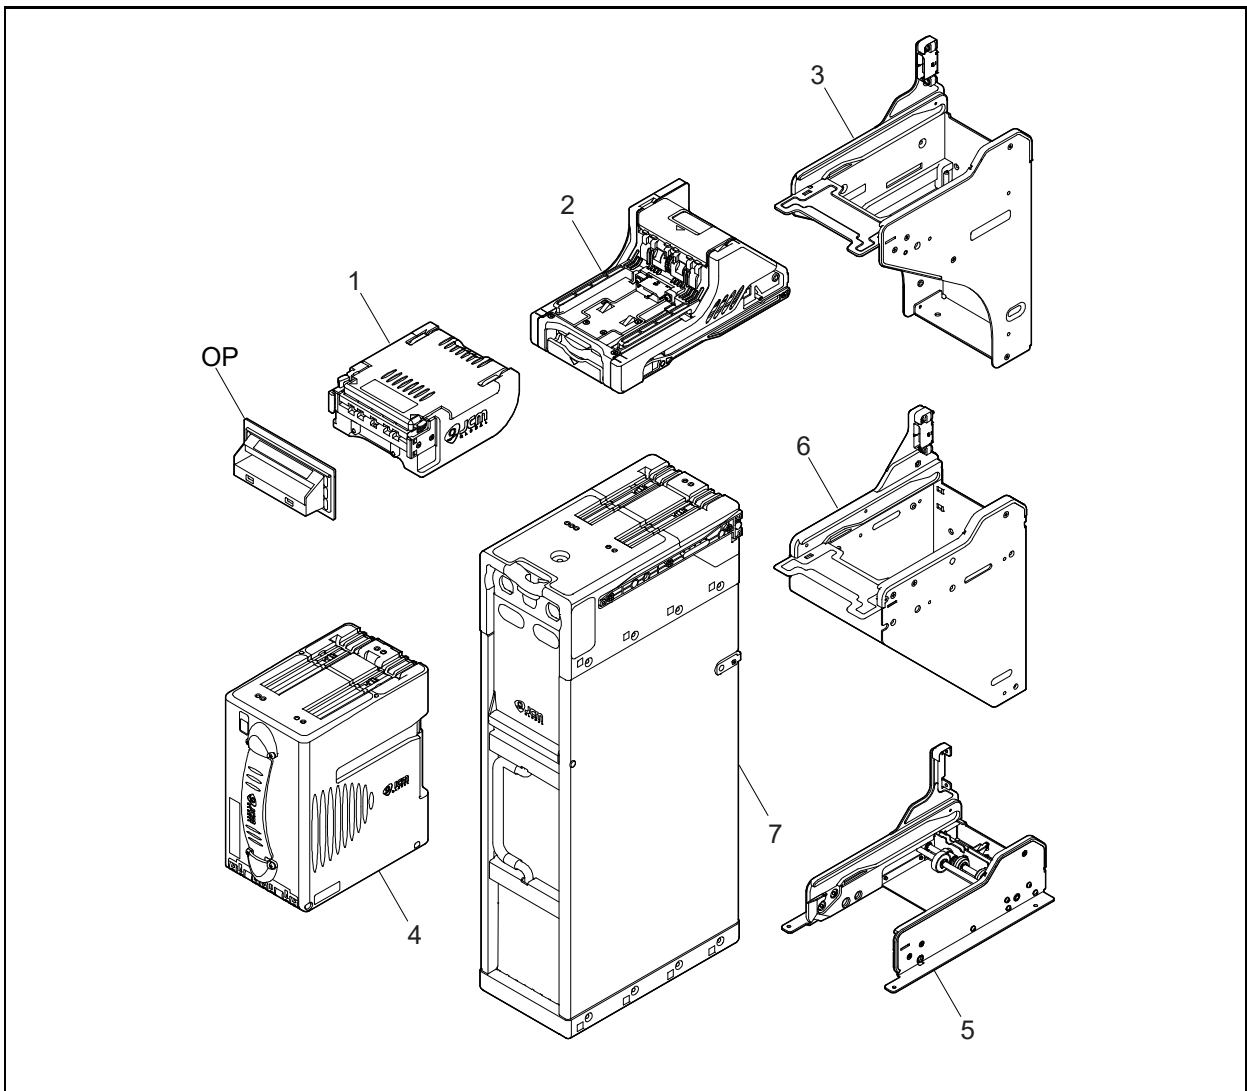


Figure 7-1 iVIZION Entire Unit View

iVIZION Entire Unit Parts List**Table 7-1** iVIZION Entire Unit Parts List

Ref No.	EDP No.	Description	Qty	Remark
1	252911	iVIZION Acceptor Unit	1	#148069 Validation Unit with a shipping container
	282688	iVIZION Validation Unit	1	No shipping container
2	252912	iVIZION Transport Unit	1	SS
	230495*	iVIZION SH Transport Unit	1	SH
	210454*	iVIZION LD Transport Unit	1	LD
3	149468*	iVIZION Frame Unit	1	
	219100*	iVIZION Frame Unit without Nut	1	
4	214104	iVIZION Cash Box S MP2	1	500 notes Standard Handle
	282689	iVIZION CASH BOX S MP2 72 PH	1	500 notes Standard Handle Japan OEM packing box
	224513	iVIZION Cash Box S MP2 2SS	1	500 notes Standard Handle Sorting Type
	248876	iVIZION Cash Box S MP2 RH	1	500 notes Red Handle
	214105	iVIZION Cash Box L MP2	1	900 notes Standard Handle
	224514	iVIZION Cash Box L MP2 2SS	1	900 notes Standard Handle Sorting Type
	248877	iVIZION Cash Box L MP2 RH	1	900 notes Red Handle
5	206387*	iVIZION LD Frame Unit	1	
6	226099*	iVIZION HC Frame Unit	1	
7	284842	iVIZION SH Box Unit PH	1	3000 notes A shipping container is not included.
OP	Refer to "iVIZION Optional Components - Bezel/Harness Parts List" on page 7-47 for optional Bezels.			

*. A packing box is not available. Contact your local JCM Representative for orders.

Table 7-2 Other Service Parts Available

EDP No.	Description	Qty	Remark
251870	iVIZION Acceptor Unit with Guide	1	iVIZION Acceptor Unit iVIZION Head Guide 72 1st Roller Canseller
253081	iVIZION Acceptor Unit + Transport Unit	1	iVIZION Acceptor Unit iVIZION Transport Unit
253082	iVIZION Acceptor Unit + Transport Unit with Guide	1	iVIZION Acceptor Unit iVIZION Transport Unit iVIZION Head Guide 72 1st Roller Canseller

iVIZION Acceptor Unit Exploded View

iVIZION Acceptor Unit 1 Exploded View

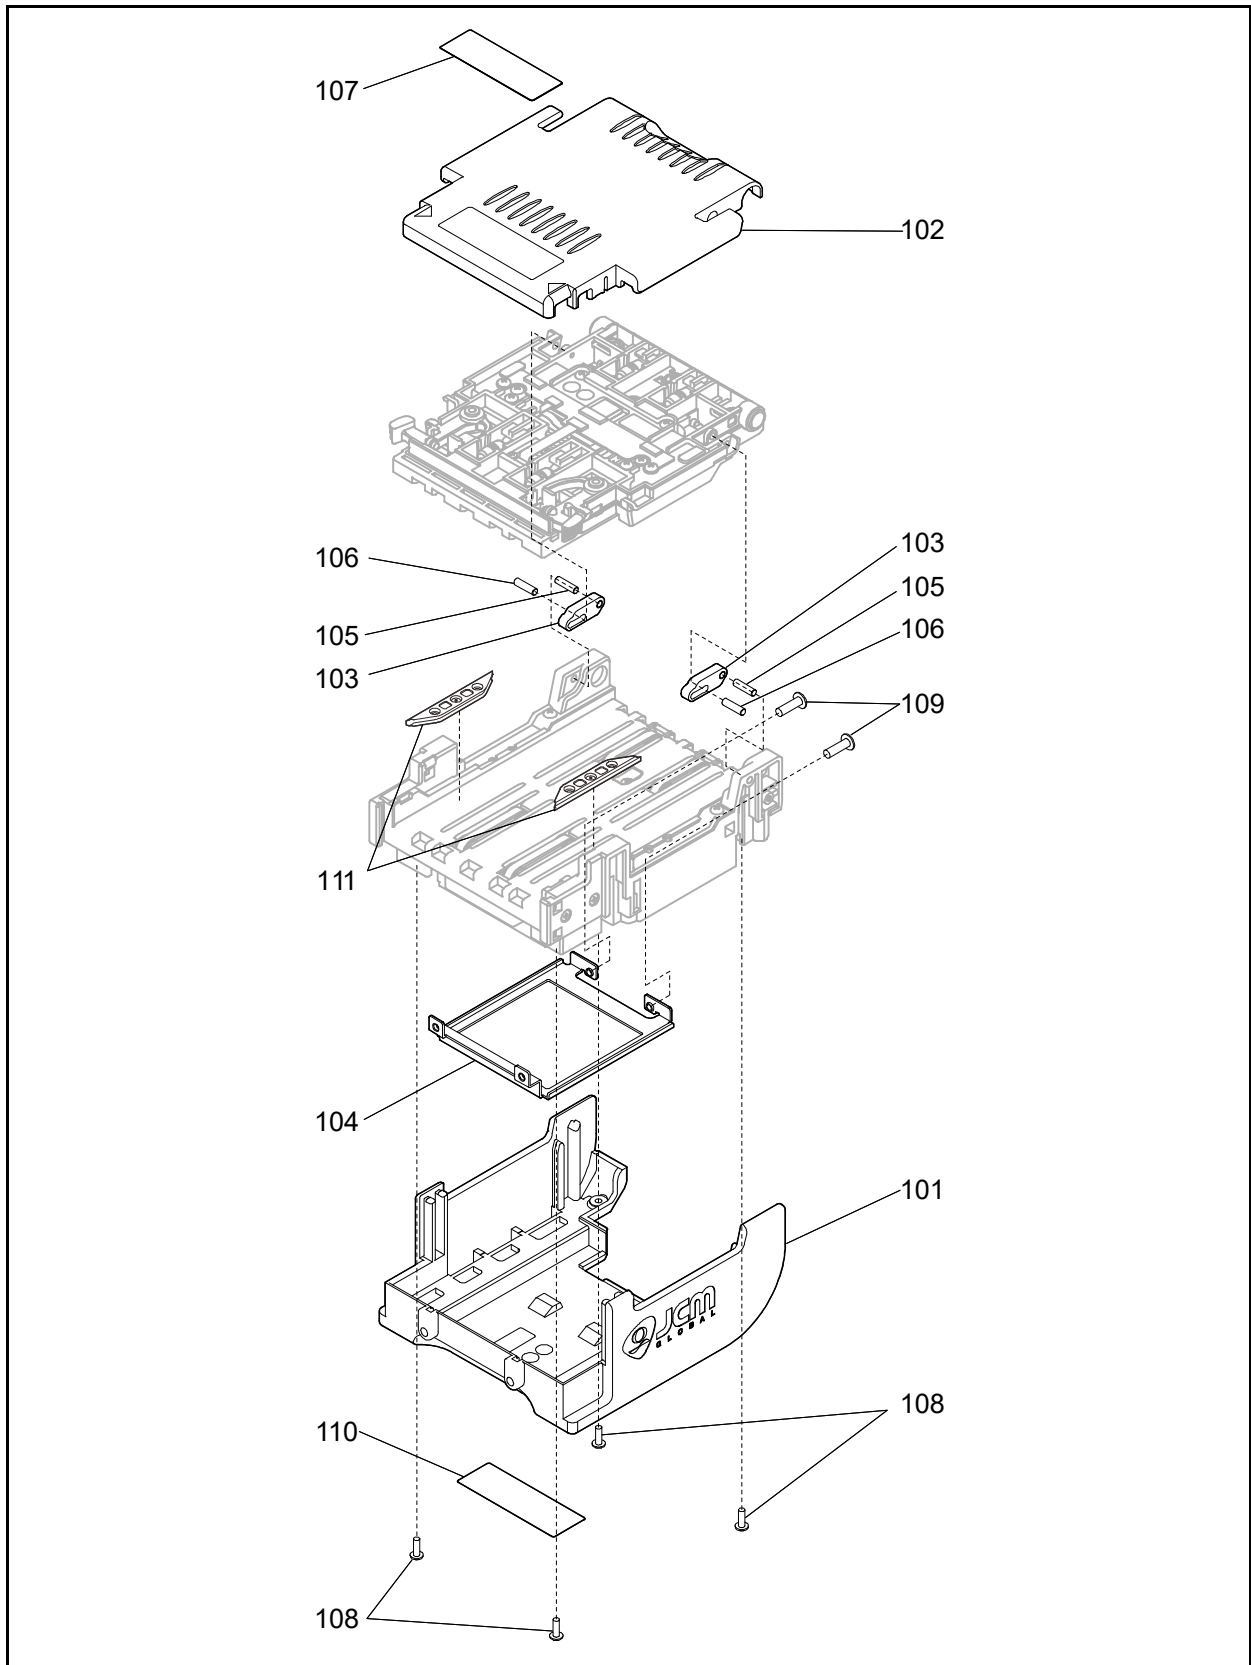


Figure 7-2 iVIZION Acceptor Unit 1 Exploded View

iVIZION Acceptor Unit 1 Parts List**Table 7-3** iVIZION Acceptor Unit 1 Parts List

Ref No.	EDP No.	Description	Qty	Remark
101	238813	iVIZION Head Cover A	1	
102	147805	iVIZION Head Cover B	1	
103	147828	Head Open Stopper	2	
104	147768	Grounding Plate A	1	
105	147972	Stopper Fulcrum Pin	2	
106	147973	Stopper Pin	2	
107	151783	iVIZION Sticker	1	
108	106002	2.6×8 Phillips, Self-Tapping, Binding Head Screw 3M (Black)*	4	
109	045969	M2.6×10 Pan Head Screw with W Washer 3M	2	
110	187255	Validation Serial Label	1	
111	214671	iVIZION Head Guide 72	2	North America units only (Production Install Only)

*. P-TITE is recommended.

iVIZION Acceptor Unit 2 Exploded View

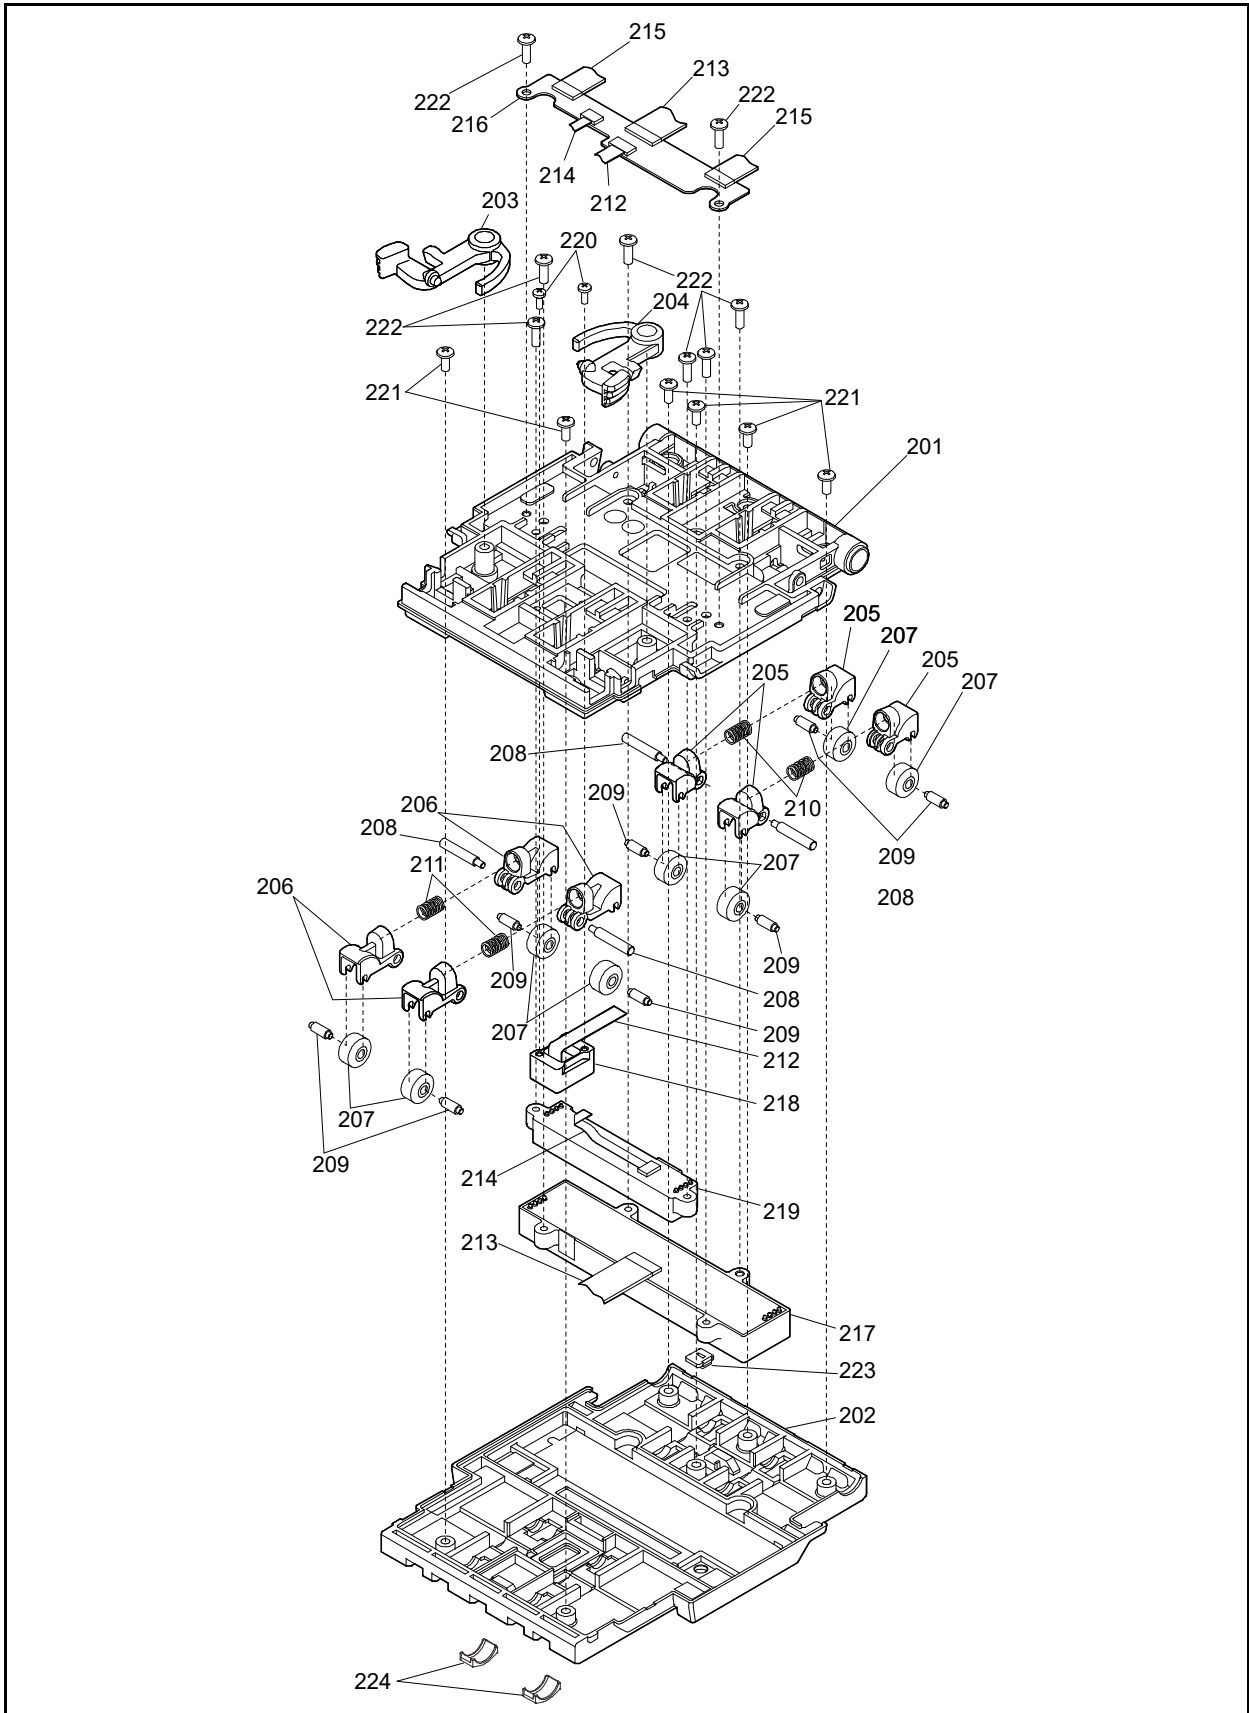


Figure 7-3 iVIZION Acceptor Unit 2 Exploded View

iVIZION Acceptor Unit 2 Parts List**Table 7-4** iVIZION Acceptor Unit 2 Parts List

Ref No.	EDP No.	Description	Qty	Remark
201	147803	iVIZION Head Frame B	1	
202	236142	iVIZION Head Bill Guide 85B (Upper Guide)	1	
203	147813	Head Open Latch A	1	
204	147823	Head Open Latch B	1	
205	147826	Roller Arm Front	4	
206	147827	Roller Arm Rear	4	
207	147929	iVIZION Head Roller	8	
208	147969	Roller Arm Shaft	4	
209	147970	Head Roller Shaft	8	
210	147734	Spring Arm Rear	2	
211	147746	Spring Arm Front	2	
212	142633	Upper UV FPC	1	
213	142635	Upper CIS FFC	1	
214	146755	Transmissive Light FFC	1	
215	146757	Validation Sensor FPC (Right)	2	
	193583	Validation Sensor FPC (Left)		
216	189841	4074-3380-06-06A-01	1	Sensor Relay Board Assy
217	146788	CIS	1	
218	247670	Upper UV Sensor	1	
219	146790	Transmissive Light	1	
220	149786	2×5 Phillips Strict, Self-Tapping, Binding Head Screw (Black) 3M*	2	
221	104010	2.6×6 Phillips, Self-Tapping, Binding Head Screw 3M*	6	
222	106002	2.6×8 Phillips, Self-Tapping, Binding Head Screw (Black) 3M*	8	
223	151781	CIS Partner	1	
224	213297	1st Roller Canseller	2	Support Parts for the Banknote Guide

* P-TITE is recommended.

iVIZION Acceptor Unit 3 Exploded View

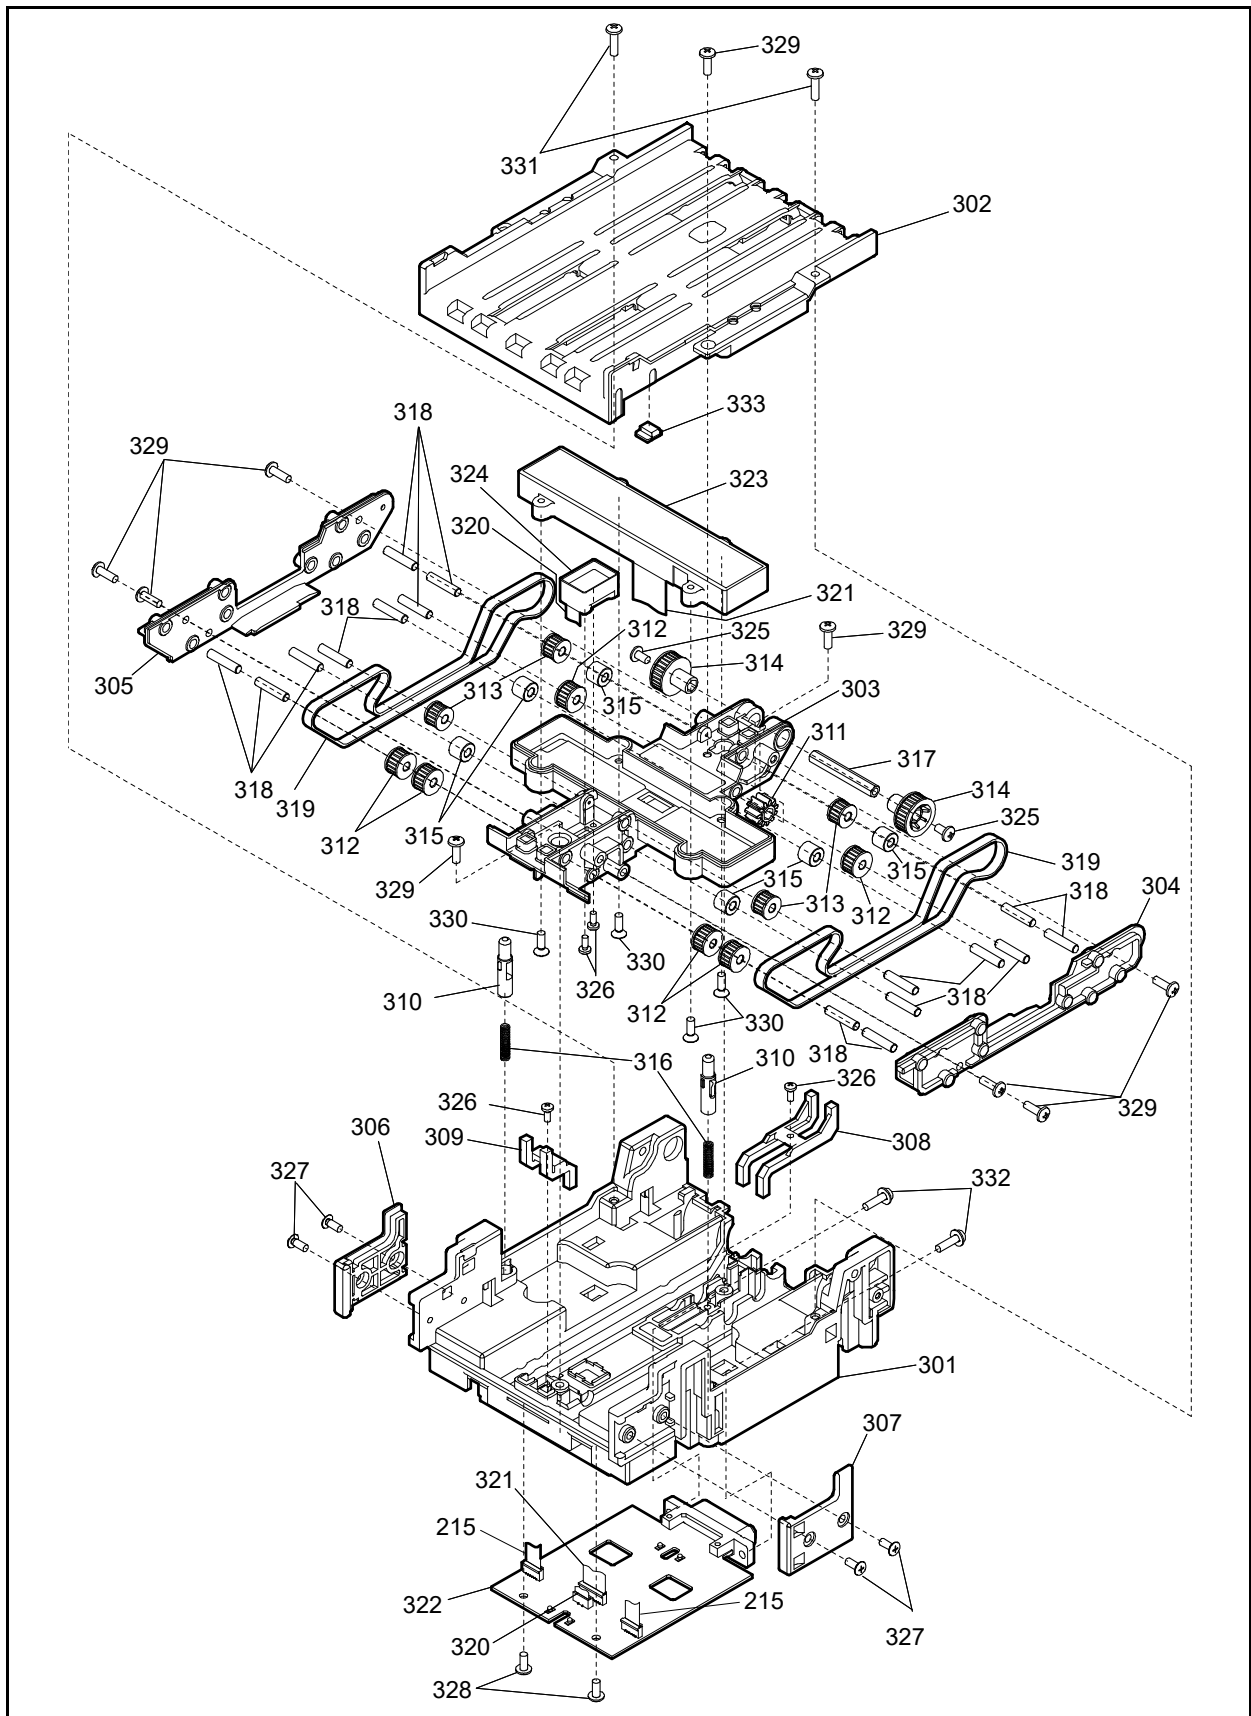


Figure 7-4 iVIZION Acceptor Unit 3 Exploded View

iVIZION Acceptor Unit 3 Parts List**Table 7-5** iVIZION Acceptor Unit 3 Parts List

Ref No.	EDP No.	Description	Qty	Remark
301	147802	iVIZION Head Frame A	1	
302	147806	iVIZION Head Bill Guide 85A (Lower Guide)	1	
303	292281	HEAD DRIVE FR	1	Head Drive Frame
304	292350	HEAD D-FR CVR A	1	Head D-Frame Cover A
305	292351	HEAD D-FR CVR B	1	Head D-Frame Cover B
306	147811	Bezel Hold Chips A	1	
307	147812	Bezel Hold Chips B	1	
308	147824	Exit Sensor Prism	1	
309	147825	Entrance Prism	1	
310	147829	Bill Guide Push Pin	2	
311	147914	Head Drive Gear	1	
312	147923	Pulley Head Idler 1	6	
313	147924	Pulley Head Idler 2	4	
314	147925	Pulley Head Drive	2	
315	147930	iVIZION Head Roller 2	6	
316	147747	Spring Bill Guide Push Pin	2	
317	147968	Head Drive Shaft	1	
318	147971	Head Pulley Pin	16	
319	148034	Timing Belt (Eco Specifications)	2	
320	146761	Lower UV FFC	1	
321	146764	Lower CIS FFC	1	
322	231079	4074-3380-06-03C-01C	1	Validation Sensor Board Assy.
323	146788	CIS	1	
324	247671	Lower UV Sensor	1	
325	148574	M2.6×5 Phillips, Binding Head Screw with Nyloc 3M	2	
326	149786	2×5 Phillips Strict, Self-Tapping, Binding Head Screw (Black) 3M*	4	
327	149787	2.6×6 Phillips Strict, Self-Tapping, Rammimate Screw M3 II (TORX)*	4	
328	104010	2.6×6 Phillips, Self-Tapping, Binding Head Screw 3M*	2	
329	106002	2.6×8 Phillips, Self-Tapping, Binding Head Screw (Black) 3M*	9	
330	101782	M2.6×8 Flathead, Phillips, Self-Tapping Screw 3M*	4	
331	104011	2.6×10 Phillips, Self-Tapping Screw (Blue) 3M*	2	
332	045969	2.6×10 Pan Head Screw with W Washer 3M	2	
333	151781	CIS Partner	1	

*. P-TITE is recommended.

iVIZION Transport Unit Exploded View

iVIZION Transport Unit 1 Exploded View

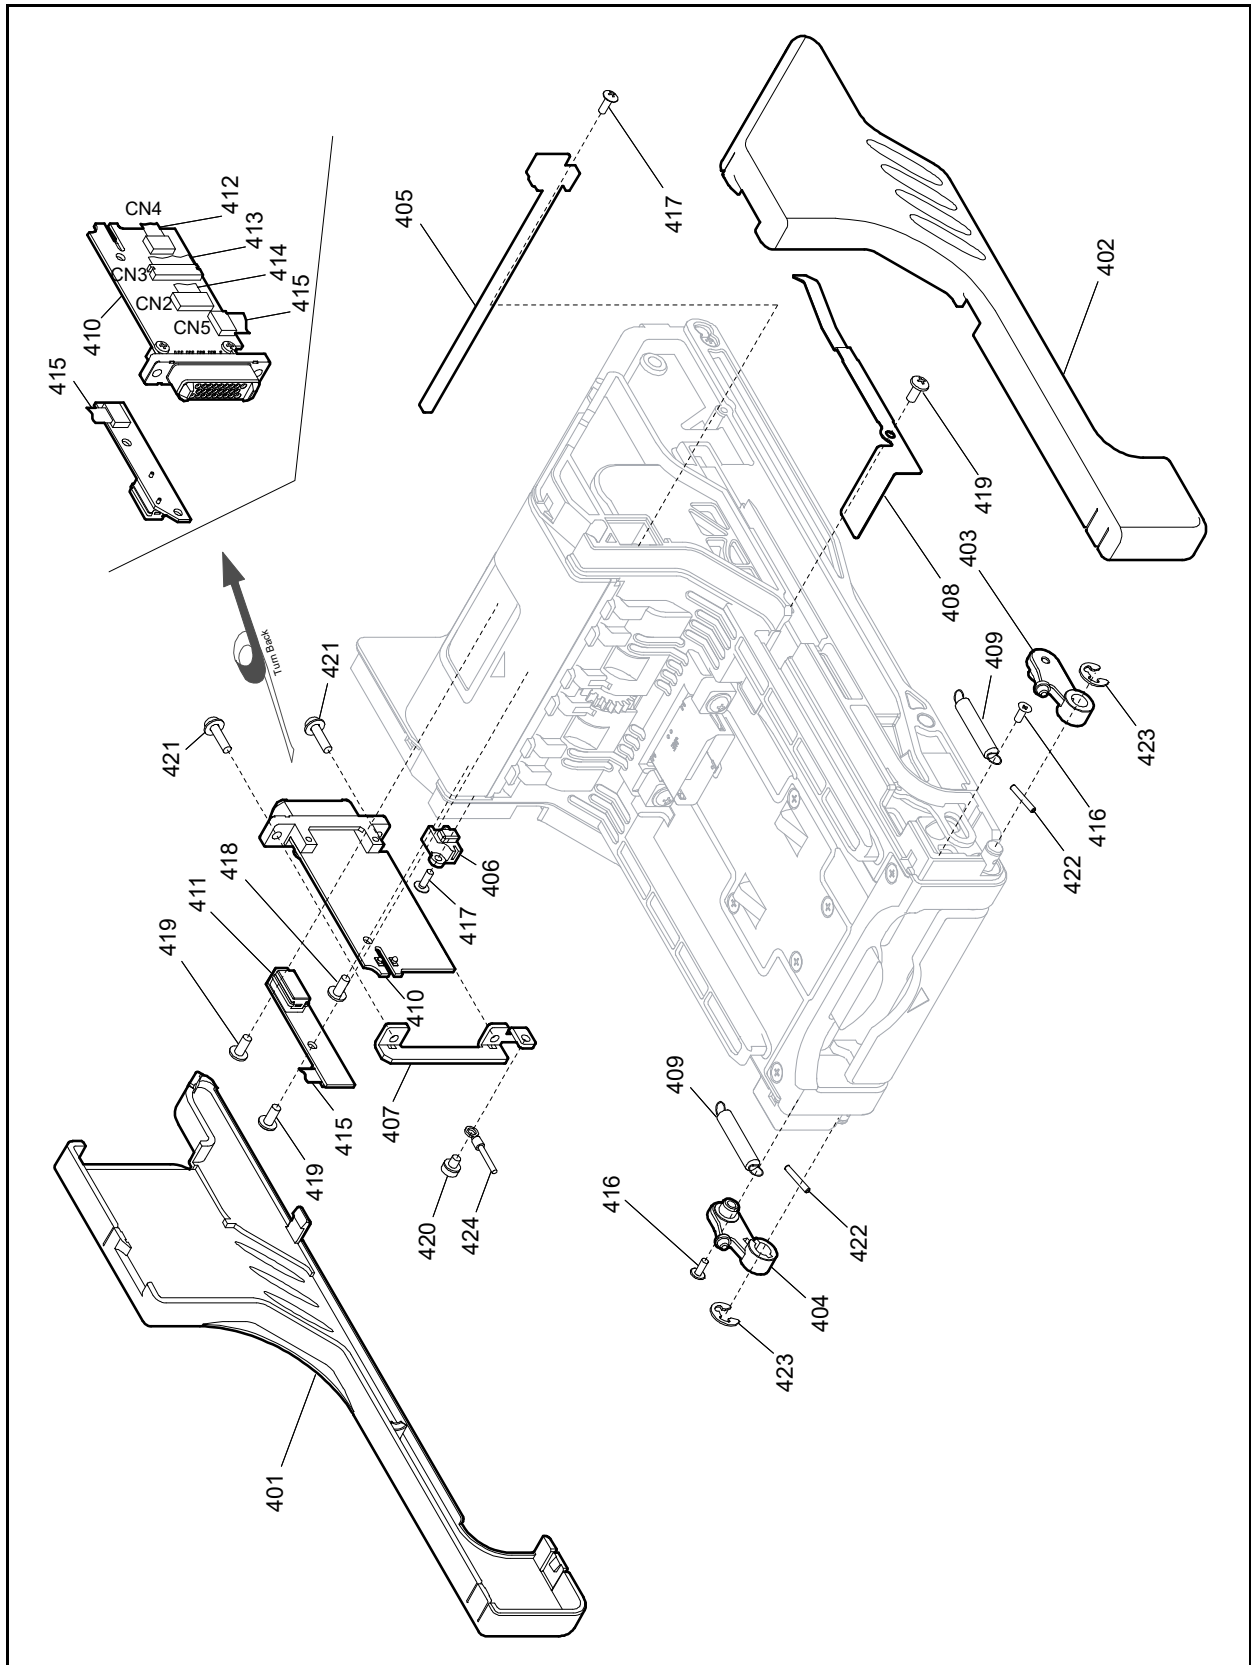


Figure 7-5 iVIZION Transport Unit 1 Exploded View

iVIZION Transport Unit 1 Parts List**Table 7-6** iVIZION Transport Unit 1 Parts List

Ref No.	EDP No.	Description	Qty	Remark
401	147831	Transport Side Cover A	1	
402	147832	Transport Side Cover B	1	
403	147841	Transport Removal Arm A	1	
404	147842	Transport Removal Arm B	1	
405	147850	Side Sensor Cover	1	
406	147851	Side Sensor Prism	1	
407	147771	Connector Plate	1	
408	147772	Transport GND Plate	1	
409	147988	Spring Transport Latch	2	
410	231080	4074-3380-06-07C-01A	1	Interface Connector Board Assy
411	148059	4074-3380-06-09-01	1	Home Position Sensor Board Assy
412	142636	USB FPC	1	
413	146805	Interface FPC	1	
414	146754	Power Supply FPC	1	
415	146810	Home Position Sensor FFC	1	
416	149788	2×5 Phillips, Self-Tapping, Binding Head Screw 3M (Black)*	2	
417	148572	2×6 Phillips, Self-Tapping, Truss Head Screw 3M*	2	
418	082040	2.6×6 Phillips, Self-Tapping, Pan Head Screw 3M*	1	
419	104010	2.6×6 Phillips, Self-Tapping, Binding Head Screw 3M*	3	
420	023755	M2.6×4 Pan Head Screw with W Washer 3M (Small)	1	
421	045969	M2.6×10 Pan Head Screw with W Washer 3M (Small)	2	
422	137787	Φ1.6×10 Parallel Pin Sustainer (Hard)	2	
423	093074	Φ4 E-Ring SUS TAIYO	2	

*. P-TITE is recommended.

iVIZION Transport Unit 2 Exploded View

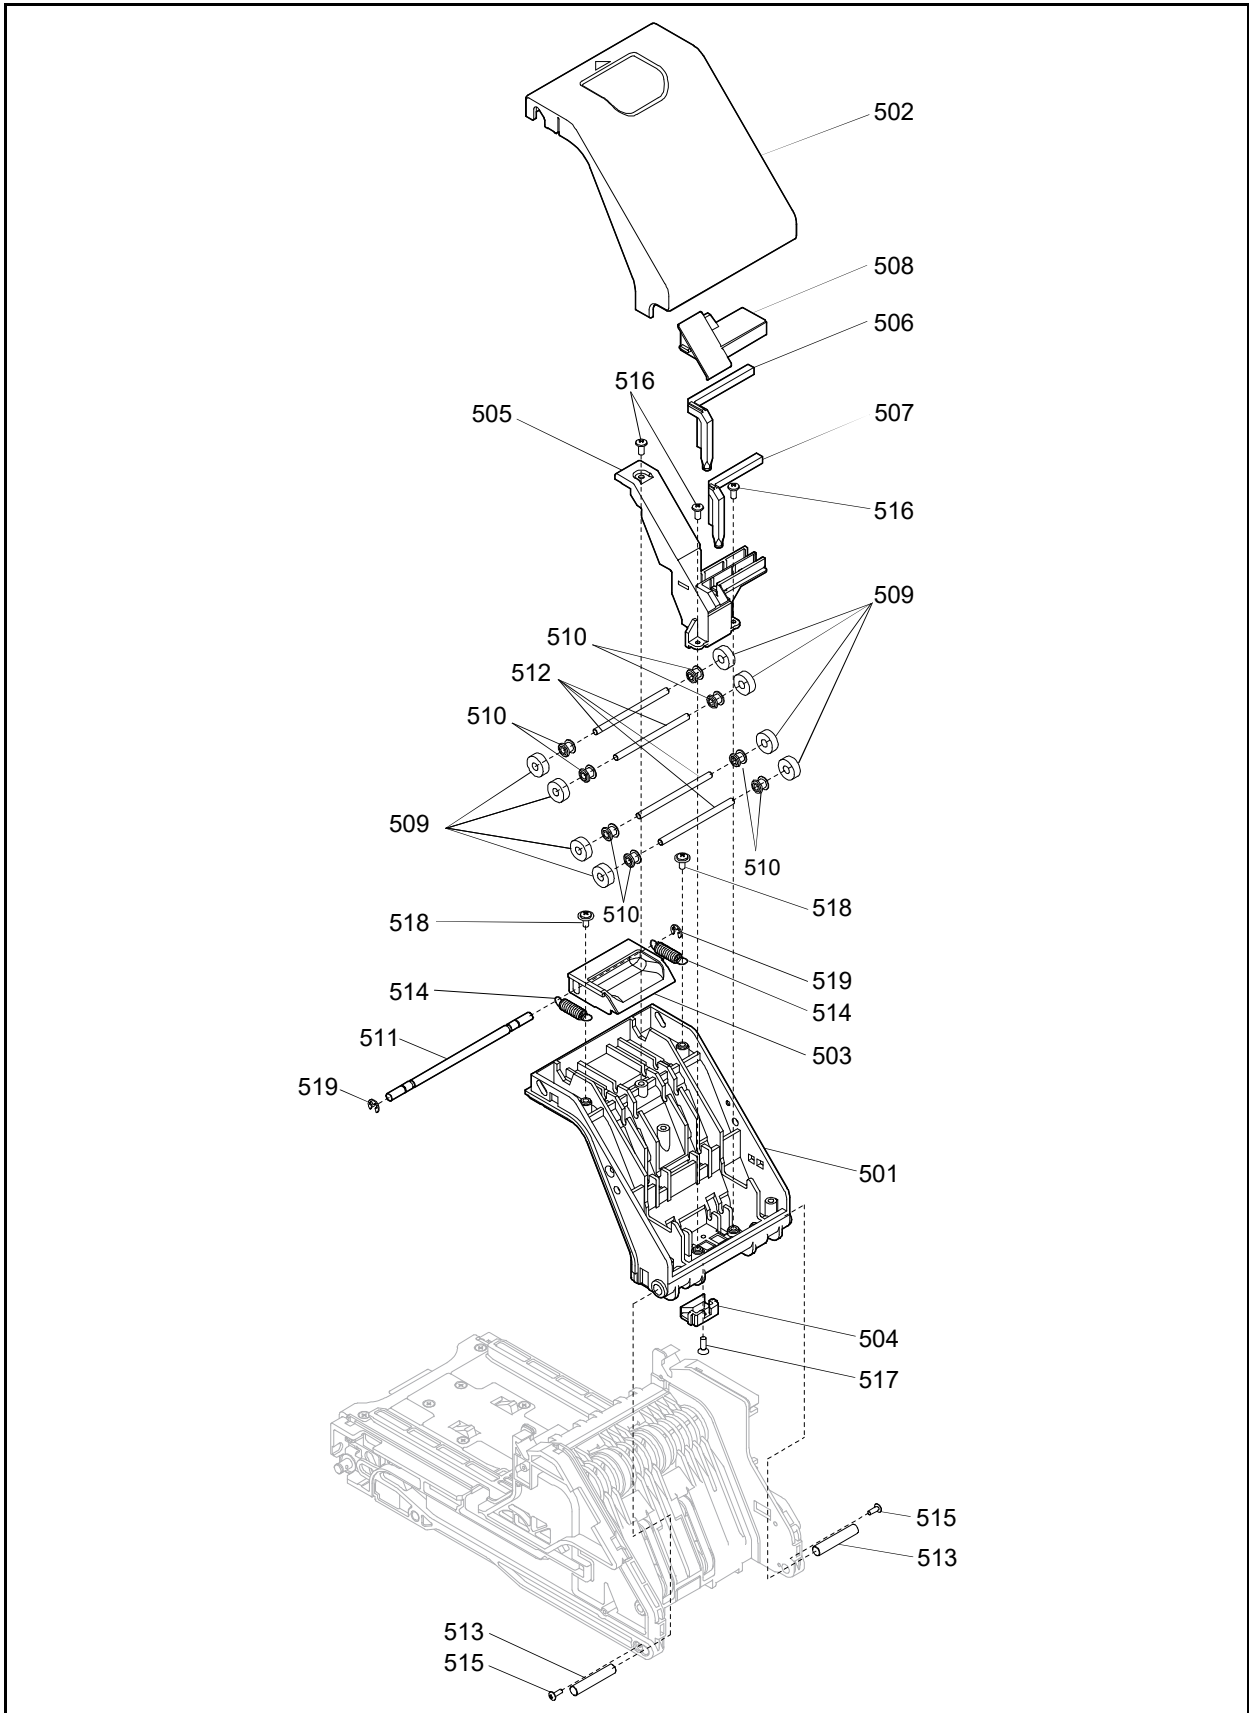


Figure 7-6 iVIZION Transport Unit 2 Exploded View

iVIZION Transport Unit 2 Parts List**Table 7-7** iVIZION Transport Unit 2 Parts List

Ref No.	EDP No.	Description	Qty	Remark
501	147833	Transport UP Frame	1	
502	147834	Transport UP-Bill Guide Cover	1	
503	147843	Bill Guide Open-Close Lever	1	
504	236362	Transport Light Guide D	1	
505	147881	Fixer Roller Shaft	1	
506	147882	Transport Light Guide F	1	
507	147883	Transport Light Guide G	1	
508	147887	Cover Prism Home Position	1	
509	147767	Sponge Roller	8	
510	147966	Transport Roller Core	8	
511	147976	Bill Guide Open-Close Shaft	1	
512	147984	UP-Bill Guide Roller Shaft	4	
513	147985	Bill Guide Fulcrum Pin	2	
514	147987	Spring Bill Guide Open-Close	2	
515	148572	2×6 Phillips, Self-Tapping, Truss Head Screw 3M*	2	
516	104010	2.6×6 Phillips, Self-Tapping, Binding Head Screw 3M*	3	
517	110949	2.6×8 Phillips, Self-Tapping, Flat Head Screw 3M (Black)*	1	
518	278873	2.6×6 Washer Head Screw P-type FE3CM (PTTN D7.5 MC3)	2	
519	091516	Φ3 E-Ring SUS TAIYO	2	

*. P-TITE is recommended.

iVIZION Transport Unit 3 Exploded View

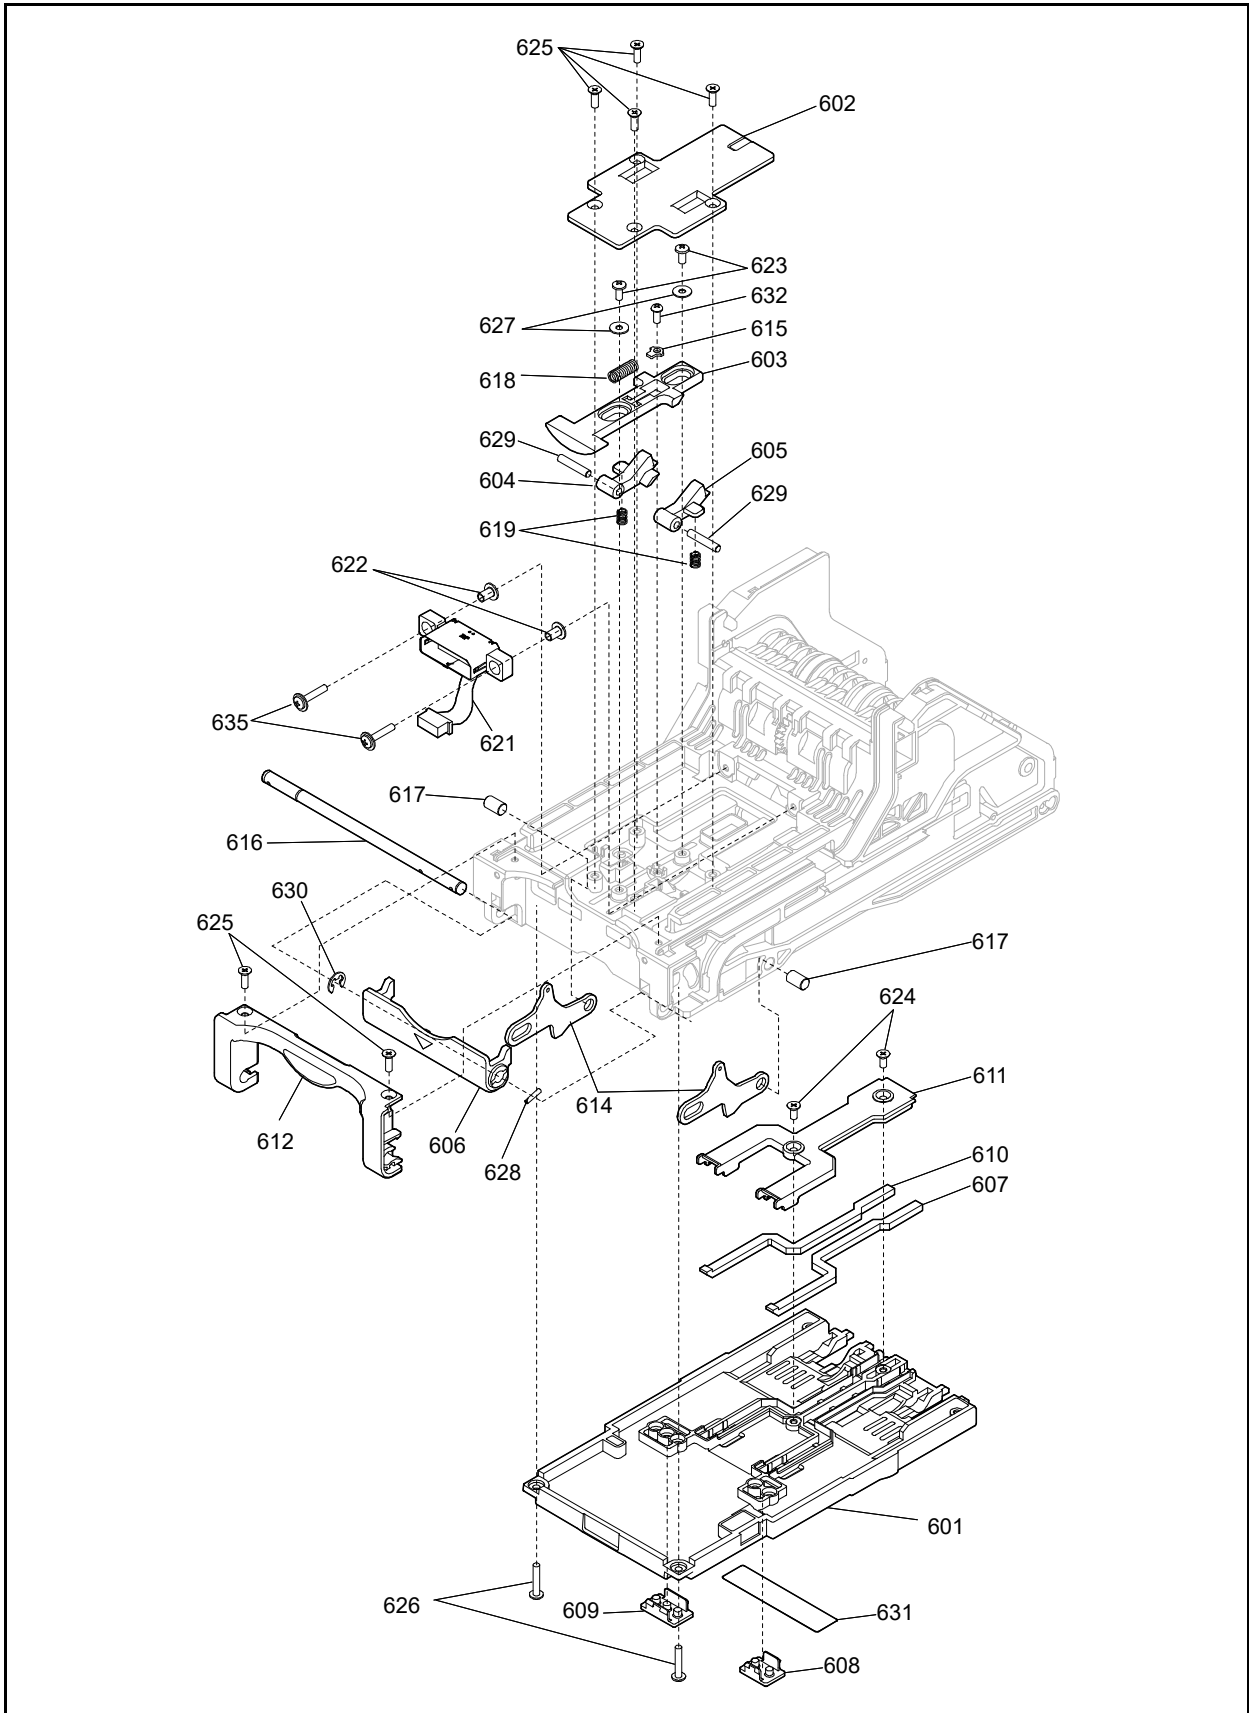


Figure 7-7 iVIZION Transport Unit 3 Exploded View

iVIZION Transport Unit 3 Parts List**Table 7-8** iVIZION Transport Unit 3 Parts List

Ref No.	EDP No.	Description	Qty	Remark
601	147835	Transport Bottom Cover	1	
602	147836	Head Latch Cover	1	
603	147837	Head Latch Button	1	
604	238814	Head Removal Latch A	1	
605	238815	Head Removal Latch B	1	
606	147840	Transport Removal Lever	1	
607	147844	Transport Light Guide A (Light Pipe, Right)	1	
608	147845	Transport Light Guide B	1	
609	147846	Transport Light Guide C	1	
610	147890	Transport Light Guide H (Light Pipe, Left)	1	
611	147893	Prism Cover Feed Out Sensor	1	
612	147897	Front Mask Transport	1	
613		REMOVED		
614	147770	Transport Removal Latch	2	
615	147773	Fixer Head Latch Spring	1	
616	147974	Head Removal Shaft	1	
617	147986	Transport Unit Latch Fulcrum Pin	2	
618	147748	Spring Head Button	1	
619	238816	Spring Head Latch	2	
620		REMOVED		
621	147158	Validation Unit Harness	1	
622	148610	Floating Collar	2	
623	104010	2.6×6 Phillips, Self-Tapping, Binding Head Screw 3M*	2	
624	052564	2.6×6 Flathead, Phillips, Self-Tapping Screw 3M*	2	
625	110949	2.6×8 Flathead, Phillips, Self-Tapping Screw (Black) 3M*	6	
626	148573	2.6×14 Phillips, Self-Tapping, Binding Head Screw (Black) 3M*	2	
627	000666	Φ2.6×7.5×0.5 Plain Washer	2	
628	091515	Φ1.6×8 Parallel Pin Sustainer (Hard)	1	
629	109658	Φ3×16 Parallel Pin Sustainer (Hard)	2	
630	091516	Φ3 E-Ring SUS TAIYO	1	
631	187257	Transport Serial Label	1	
632	082040	2.6×6 Phillips, Self-Tapping, Pan Head Screw 3M*	1	
633	192747	2 x 5 Ramimate with Nyloc 3M	2	
634	195550	Bar Code Label	1	
635	278874	2.6×14 Washer Head Screw P-type FE3CM (PTTN D7.5 MC3)	2	

* P-TITE is recommended.

iVIZION Transport Unit 4 Exploded View

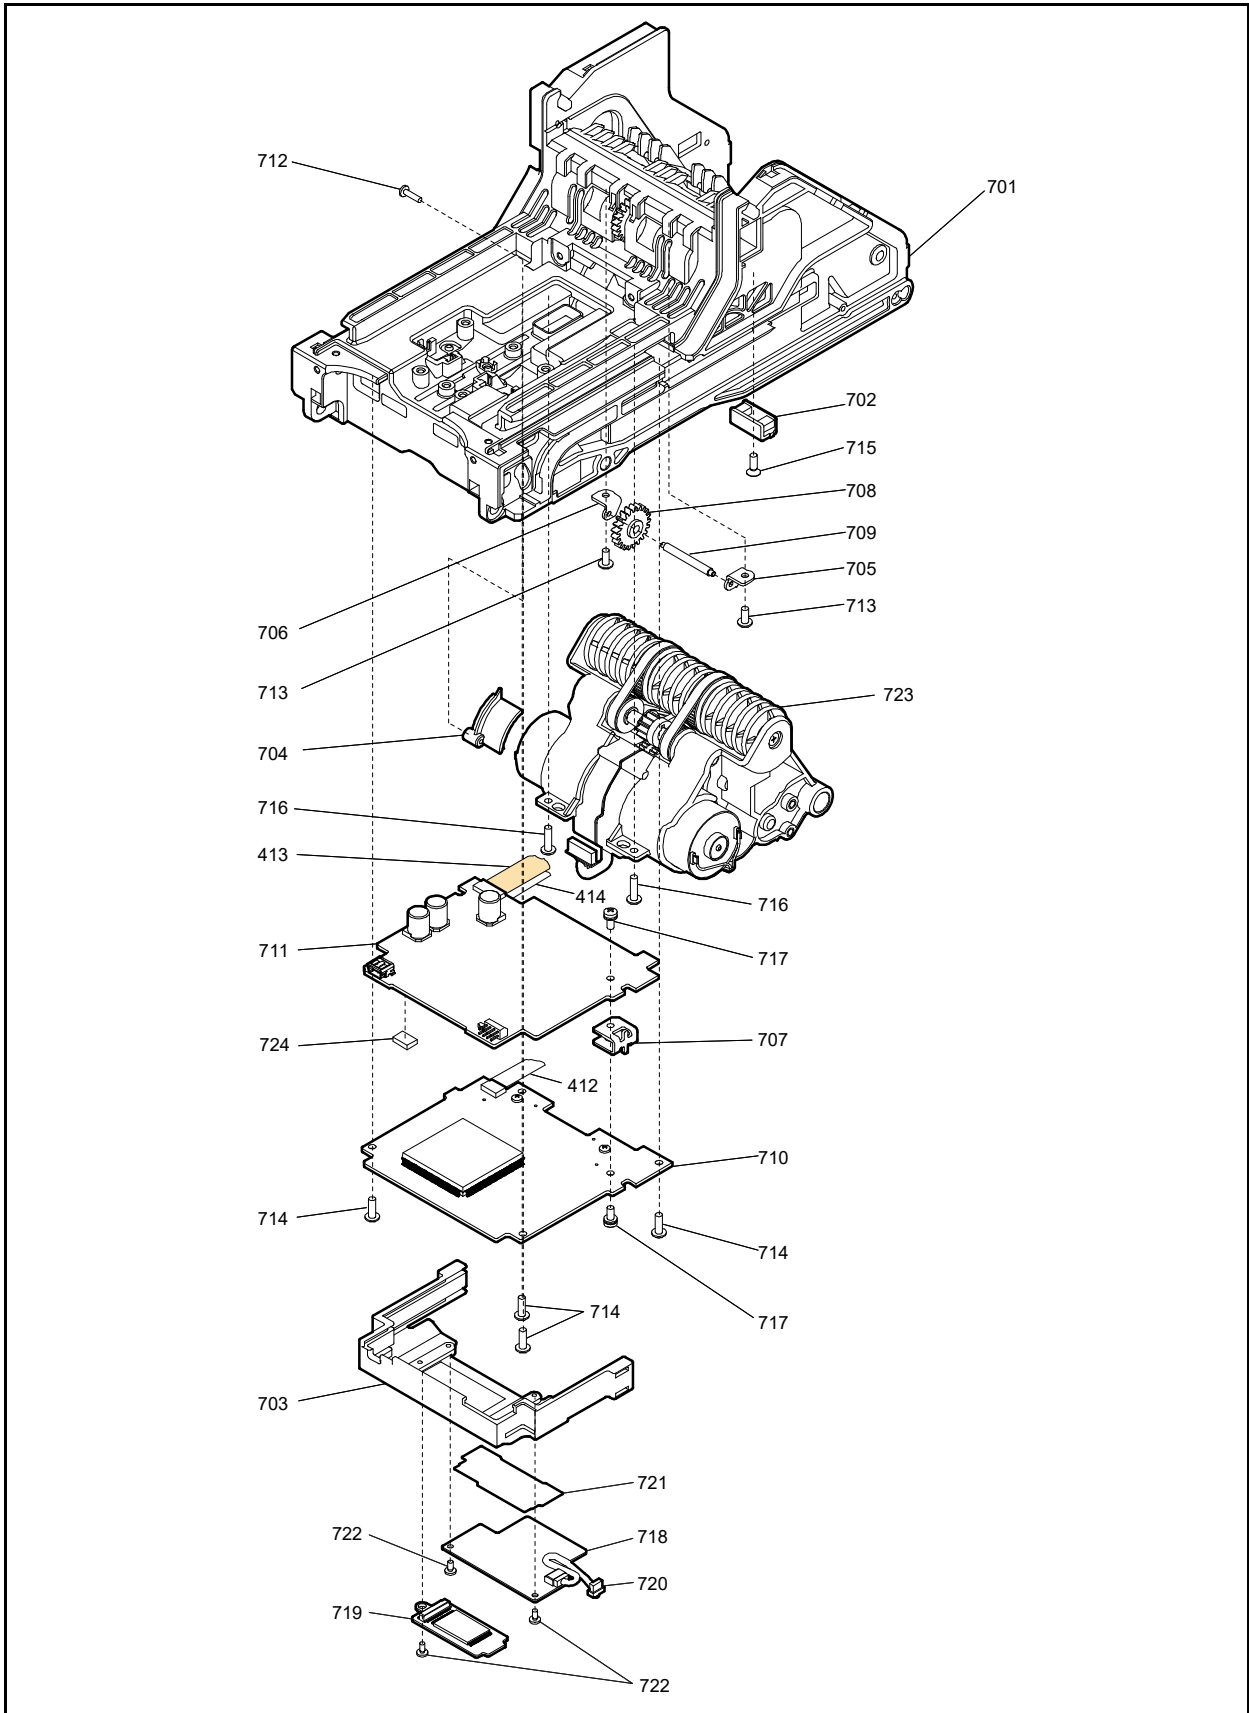


Figure 7-8 iVIZION Transport Unit 4 Exploded View

iVIZION Transport Unit 4 Parts List**Table 7-9** iVIZION Transport Unit 4 Parts List

Ref No.	EDP No.	Description	Qty	Remark
701	147830	Transport Main Frame	1	
702	236363	Transport Light Guide E	1	
703	147885	PCB Supporter	1	
704	147895	FPC Cover	1	
705	147774	Fixer Gear Shaft A	1	
706	147775	Fixer Gear Shaft B	1	
707	185199	SG Plate	1	
708	252661	Gear Head Connection 2	1	
709	147979	Head Connection Shaft	1	
710	231077	4074-3380-06-01C-01B	1	Validation CPU Board
711	231078	4074-3380-06-02E-01B	1	Control CPU Board
712	098267	2×8 Phillips, Self-Tapping, Binding Head Screw (Black) 3M*	1	
713	104010	2.6×6 Phillips, Self-Tapping, Binding Head Screw 3M*	2	
714	144840	2.6×8 Phillips, Self-Tapping, Binding Head Screw (Black) 3M*	4	
715	148186	2.6×6 Phillips, Self-Tapping, Flat Head Screw 3M (Black)*	1	
716	104011	2.6×10 Phillips, Self-Tapping, Binding Head Screw (Blue) 3M*	2	
717	005555	M2.6×6 Pan Head Screw with W Washer 3M (Small)	2	
718	146783	RFID Module	1	SS and SH only
719	146713	4074-3380-06-10-01 NJ Memory	1	Extended Memory Board Assy 64M bit (total 128M bit)
720	146816	RFID Harness	1	SS and SH only
721	185749	RFID Insulating Sheet	1	
722	104415	2×4 Phillips, Self-Tapping, Binding Head Screw 3M*	3	
			1	LD only
723	248500	Motor and Gear Unit	1	SS only
	†	SH Motor and Gear Unit	1	SH only
724	274136	Gasket (E02S050020RT-10H)	1	

* P-TITE is recommended.

† A packing box is not available. Contact your local JCM Representative for orders.

iVIZION Transport Unit 5 Exploded View

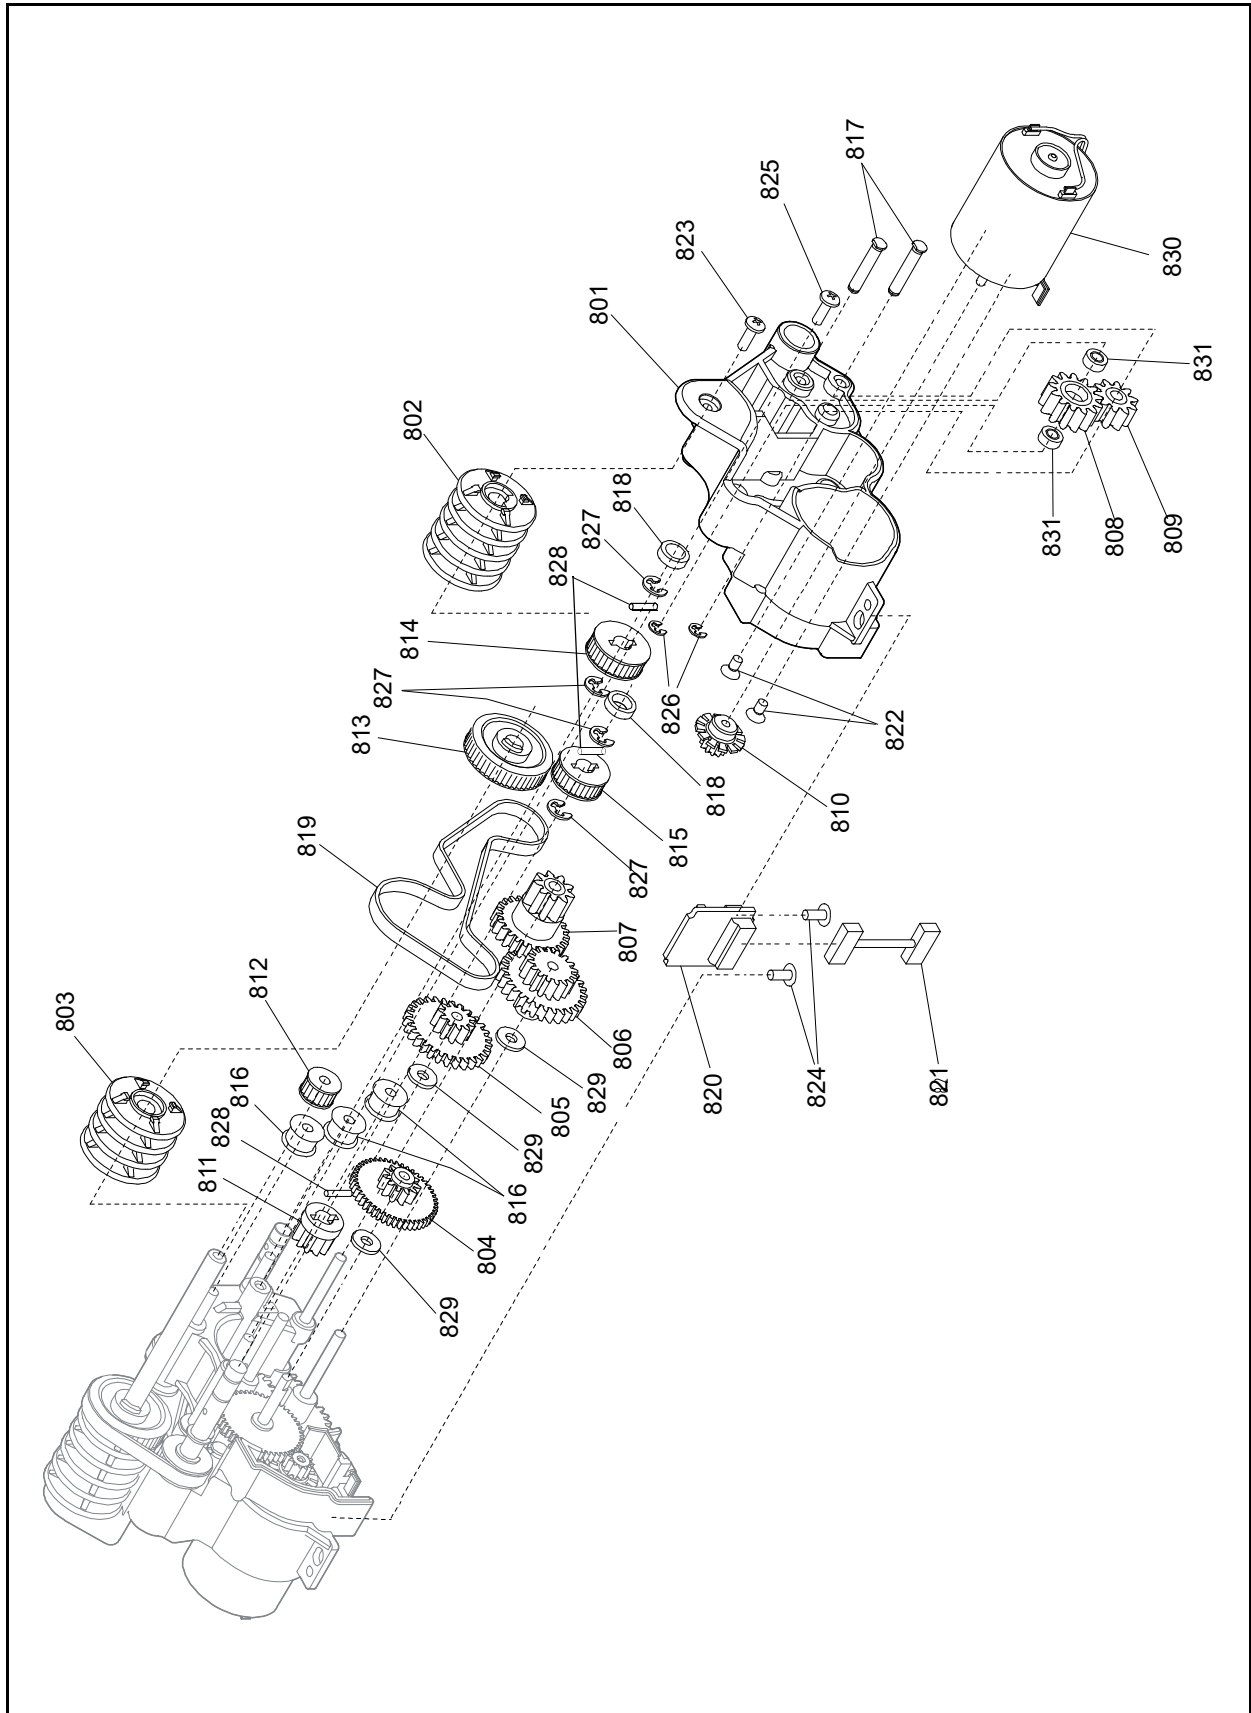


Figure 7-9 iVIZION Transport Unit 5 Exploded View

iVIZION Transport Unit 5 Parts List**Table 7-10** iVIZION Transport Unit 5 Parts List

Ref No.	EDP No.	Description	Qty	Remark
801	147852	Drive Module Frame A	1	
802	147879	iVIZION Reel A	1	
803	147880	iVIZION Reel B	1	
804	147752	Gear Stack 2	1	
805	147753	Gear Stack 3	1	
806	147754	Gear Stack 4	1	
807	235788	Gear Transport-Stacking 1	1	
	230485		1	SH only
808	147756	Gear Transport-Stacking 2	1	
	230483	Gear Transport-Stacking 2 (SH)	1	SH only
809	147757	Gear Box Connection	1	
810	238034	Gear Transport-Stacking Motor	1	
811	147763	Gear Head Connection 1	1	
812	147923	Pulley Head Idler 1	1	
813	147799	Pulley Reel	1	
814	238975	Pulley Transport Drive	1	
815	238976	Pulley Head Connection	1	
816	147967	Pulley Idler 2	3	
817	147980	Outside Gear Shaft	2	
818	148032	Bearing	2	
819	148035	Timing Belt (Eco Specification)	1	
820	148058	4074-3380-06-04-01	1	Interrupter Board Assy
821	146782	Interrupter Harness	1	
822	081564	M2.6×5 Phillips, Flat Head Screw with Nyloc 3M	2	
823	104007	M2.6×8 Phillips, Binding Head Screw (Blue) with F-Lock 3M	1	
824	149789	2.6×6 Phillips, Self-Tapping, Truss Head Screw 3M*	2	
825	144840	2.6×8 Phillips, Self-Tapping, Binding Head Screw (Black) 3M*	1	
826	091517	Φ2 E-Ring SUS TAIYO	2	
827	091516	Φ3 E-Ring SUS TAIYO	4	
828	091515	Φ1.6x8 Parallel Pin Sustainer (Hard)	3	
829	148030	Φ3.1x6x1.0 Poly Vinyl Slider	3	
830	287225	Motor Assy	1	
831	230484	Bearing	2	SH only
-	238787	SH TR Label	1	To identify SH

*. P-TITE is recommended.

iVIZION Transport Unit 6 Exploded View

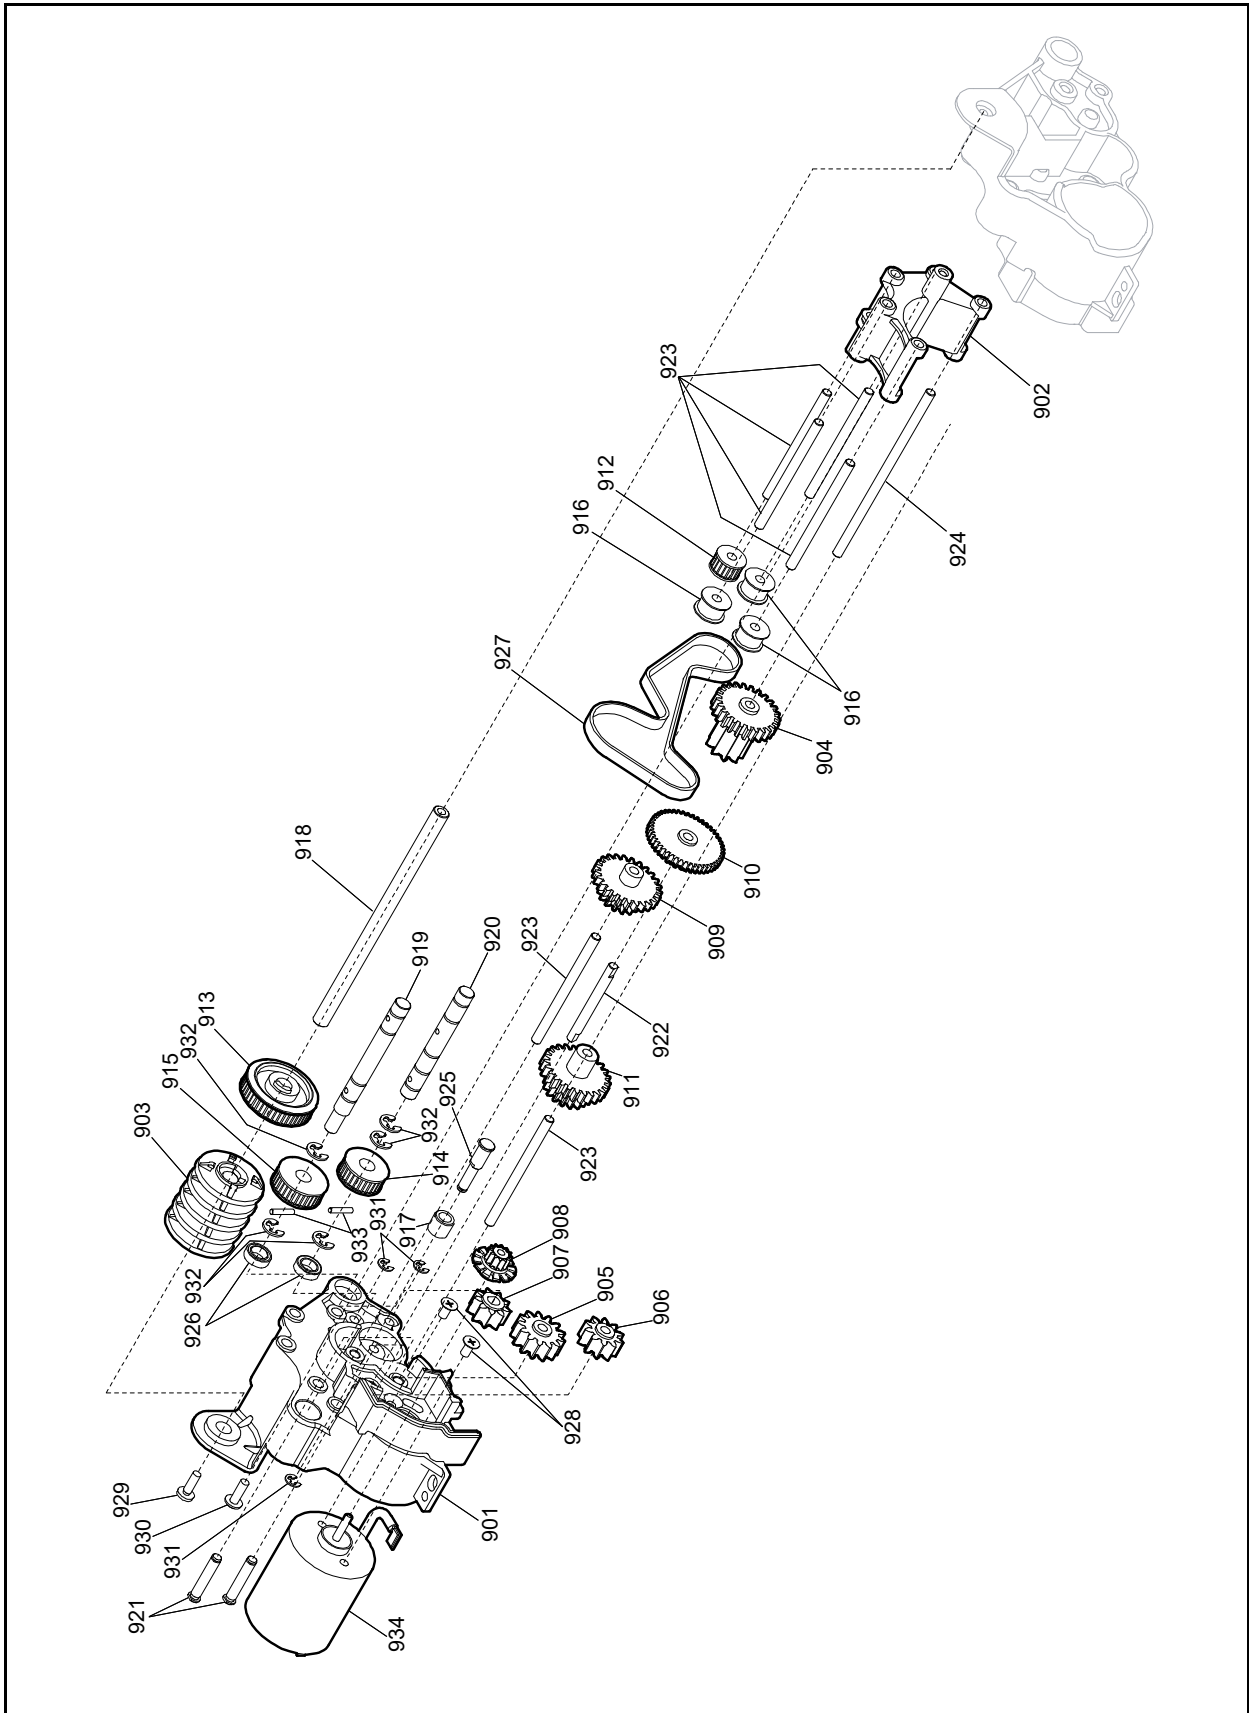


Figure 7-10 iVIZION Transport Unit 6 Exploded View

iVIZION Transport Unit 6 Parts List**Table 7-11** iVIZION Transport Unit 6 Parts List

Ref No.	EDP No.	Description	Qty	Remark
901	147853	Drive Module Frame B	1	
902	147854	Transport Gear Stabilizer	1	
903	147879	iVIZION Reel A	1	
904	235788	Gear Transport-Stacking 1	1	
	230485		1	SH only
905	147756	Gear Transport-Stacking 2	1	
906	147757	Gear Box Connection	1	
907	147758	Gear Pulley Drive	1	
908	238034	Gear Transport-Stacking Motor	1	
909	147761	Gear Transport 3	1	
910	147760	Gear Transport 2	1	
911	147762	Gear Transport 4	1	
912	147923	Pulley Head Idler 1	1	
913	147799	Pulley Reel	1	
914	238975	Pulley Transport Drive	1	
915	238976	Pulley Head Connection	1	
916	147967	Pulley Idler 2	3	
917	185195	Roller Belt Stopper	1	
918	242733	Reel Shaft	1	
919	238977	Transport Drive Shaft	1	
920	238978	Head Connection Shaft 1	1	
921	147980	Outside Gear Shaft	2	
922	147981	Gear Module Shaft 1	1	
923	147982	Gear Module Shaft 2	6	
924	147983	Gear Module Shaft 3	1	
925	185200	Belt Stopper Roller Pin	1	
926	148032	Bearing	2	
927	148035	Timing Belt (Eco Specifications)	1	
928	081564	M2.6×5 Phillips, Flat Head Screw with Nyloc 3M	2	
929	104007	M2.6×8 Phillips, Binding Head Screw with Nyloc 3M (Blue)	1	
930	144840	2.6×8 Phillips, Self-Tapping, Binding Head Screw 3M (Black)*	1	
931	091517	Φ2 E-Ring SUS TAIYO	3	
932	091516	Φ3 E-Ring SUS TAIYO	5	
933	091515	Φ1.6×8 Parallel Pin Sustainer (Hard)	2	
934	287225	Motor Assy	1	

*. P-TITE is recommended.

iVIZION SS Version Frame Unit Exploded View

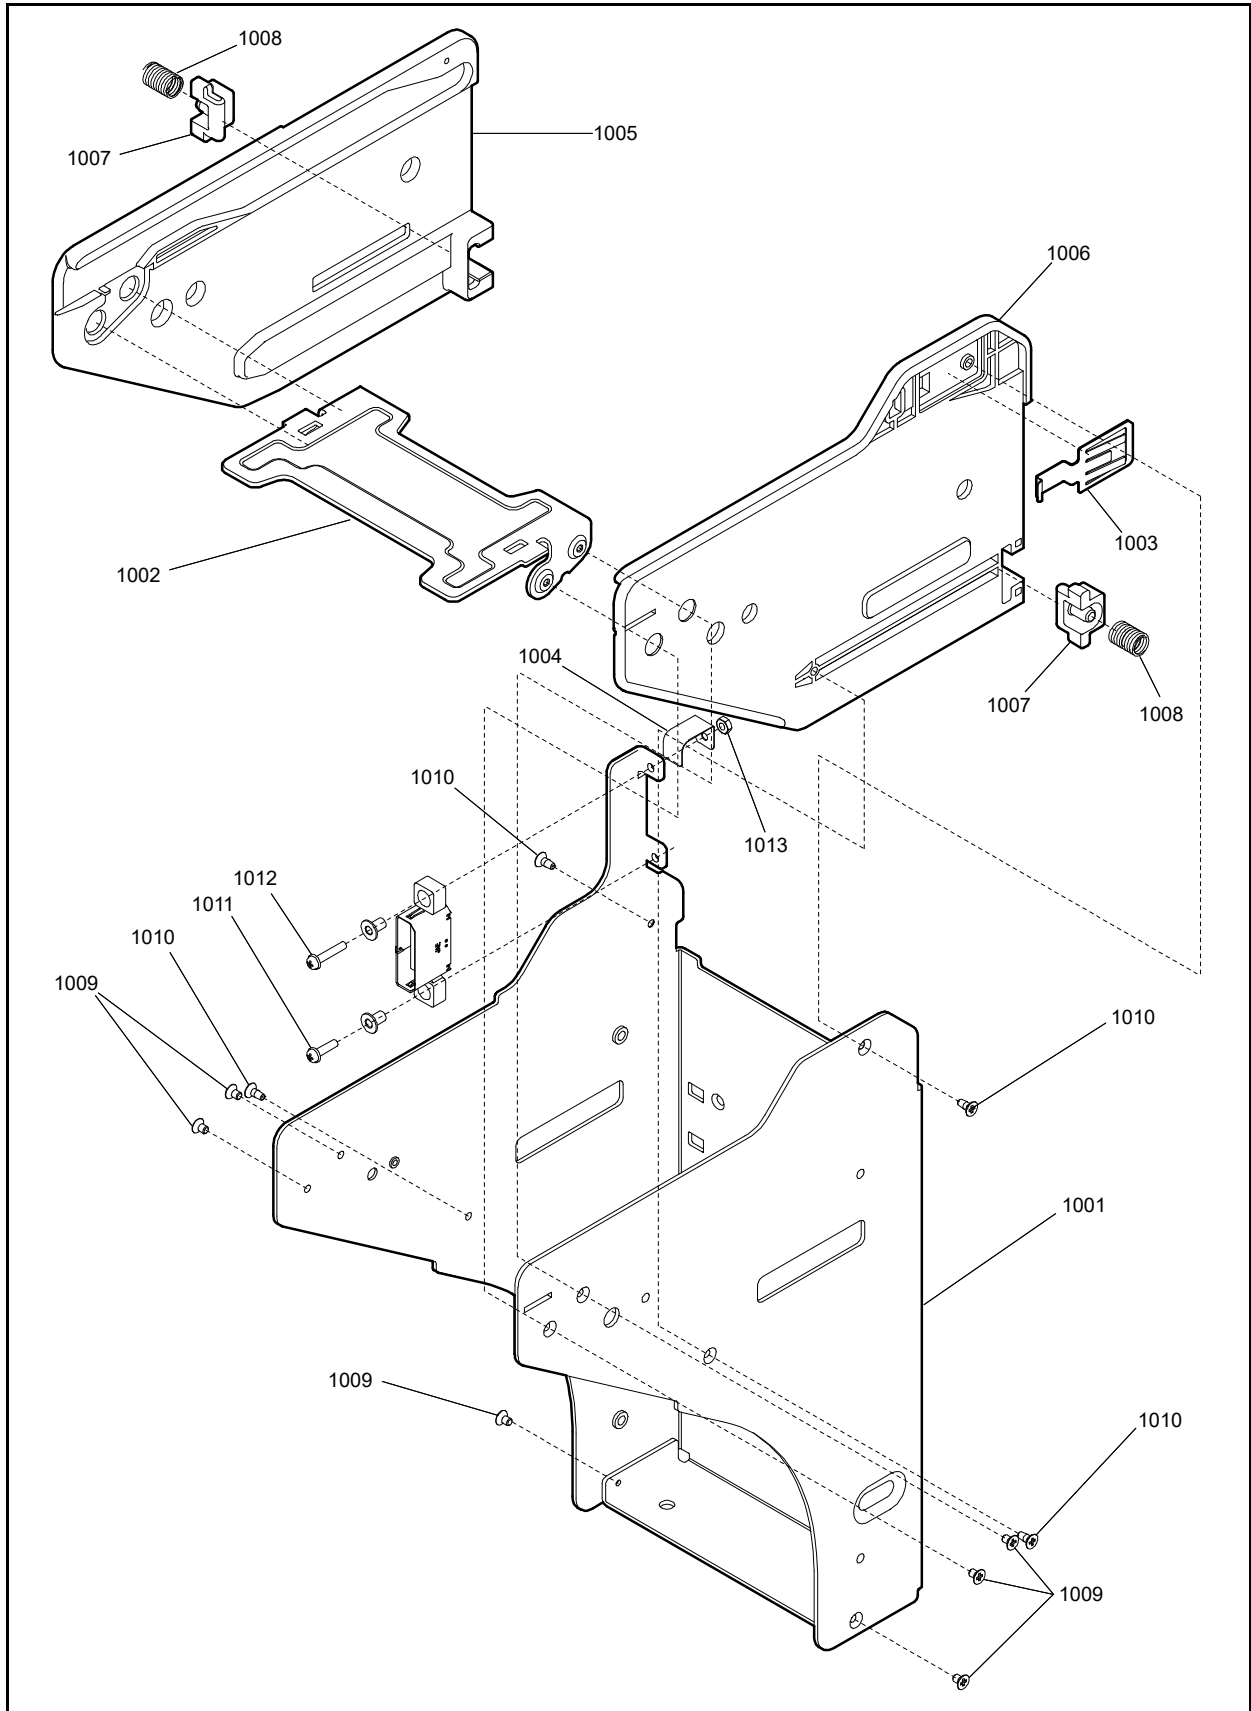


Figure 7-11 iVIZION SS Version Frame Unit Exploded View

iVIZION SS Version Frame Unit Parts List**Table 7-12** iVIZION SS Version Frame Unit Parts List

Ref No.	EDP No.	Description	Qty	Remark
1001	147777	Frame Base	1	
1002	147778	Frame Base Guide	1	
1003	147793	Frame Spring Plate	1	
1004	151784	Frame FG Plate	1	
1005	147904	Frame Guide L	1	
1006	147905	Frame Guide R	1	
1007	229918	Frame Latch	2	
1008	147750	Frame Compression Spring 01	2	
1009	006021	M2.6×4 Phillips, Flat Head Screw 3M	6	
1010	052564	2.6×6 Phillips, Self-Tapping, Flat Head Screw 3M*	4	
1011	045969	2.6x10 Pan Head W Washer (Small)	1	
1012	104280	2.6x12 W Washer (Small)	1	
1013	149426	Nylon Nut	1	

*. P-TITE is recommended.

iVIZION Cash Box Unit Exploded View

iVIZION Cash Box Unit 1 Exploded View

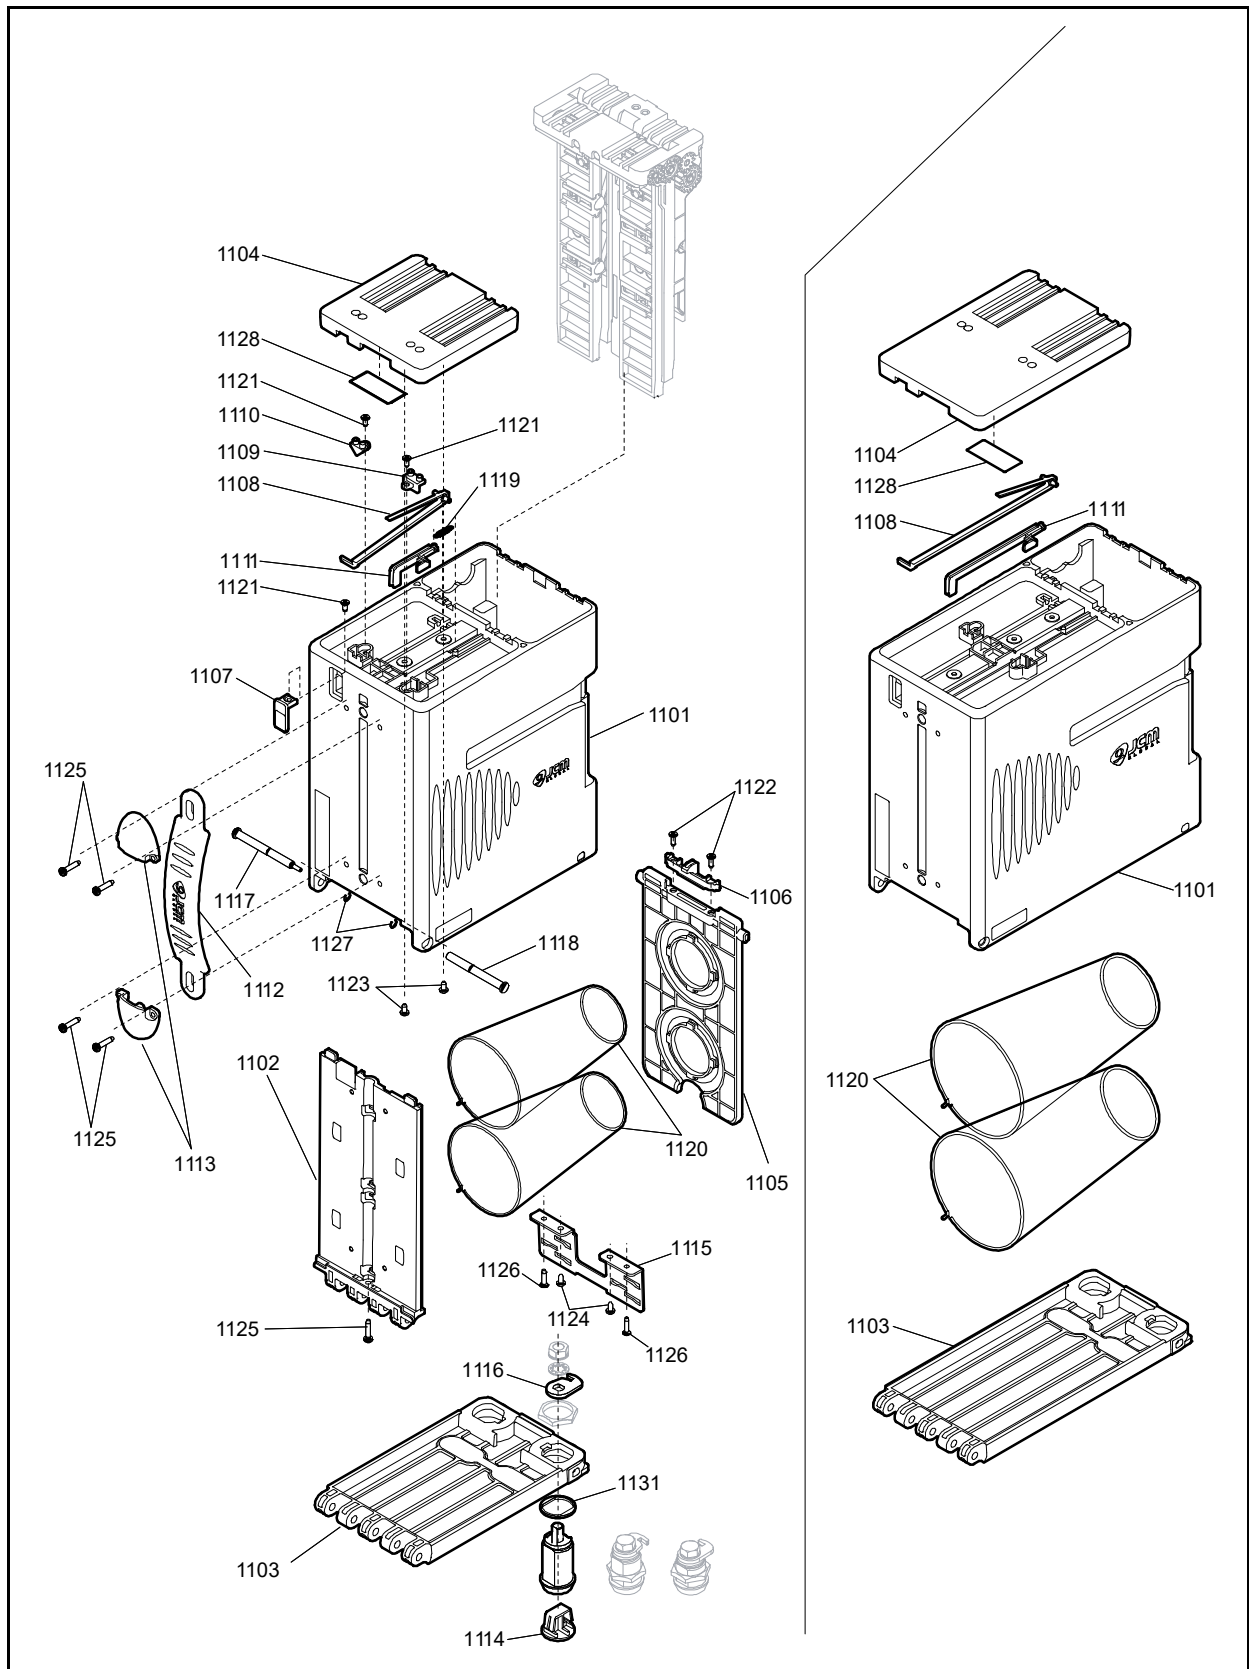


Figure 7-12 iVIZION Cash Box Unit 1 Exploded View

iVIZION Cash Box Unit 1 Parts List**Table 7-13** iVIZION Cash Box Unit 1 Parts List

Ref No.	EDP No.	Description	Qty	Remark
1101	214098	Box (S)	1	
	214100	Box (L)		
1102	147908	Box Base Plate	1	
1103	214099	Box Door (S)	1	
	214101	Box Door (L)		
1104	147910	Box Cover (S)	1	
	148783	Box Cover (L)		
1105	225095	Pressure Plate	1	
1106	147912	Plate Stopper	1	
1107	147941	Indicator Window	1	
1108	147942	Indicator Arm (S)	1	
	148785	Indicator Arm (L)		
1109	147943	Box Prism (Near-Full)	1	
1110	147944	Box Prism (State)	1	
1111	147945	Lever Nearly Full (S)	1	
	148784	Lever Nearly Full (L)		
1112	147946	Handle	1	Standard
	248873	Handle (Red)	1	Red
1113	147947	Handle Cover	2	
1114	148472	Key Cover	1	
1115	147794	Lock Bracket	1	
1116	147795	Lock Plate	2	
1117	147934	Box Shaft (1)	1	
1118	147935	Box Shaft (2)	1	
1119	147990	Home Position Lever Spring	1	
1120	114526	Cash Stock Spring	2	
	127714	IQ P-Box Spring		
1121	104418	2.6x6 Phillips, Self-Tapping, Binding Head Screw (Black) 3M*	3	
1122	056165	2.6x8 Phillips, Self-Tapping, Binding Head Screw 3M*	2	
1123	203554	3x6 Pan NONSERT Head Screw	2	
1124	060794	3x12 Flathead, Phillips, Self-Tapping Screw 3M*	2	
1125	185201	3x14 Phillips, Self-Tapping, Pan Head Screw 3M (Black)*	5	
1126	006037	M3 x 12 Pan Head Screw with W Washer 3M (Small)	2	
1127	003718	Crescent Snap Ring	2	
1128	272590	MB89R119B1-3417	1	RFID Tag
1129	192745	Indicator Cover (S)	1	
	192746	Indicator Cover (L)	1	
1130	140958	2.6x5 Ramimate Screw 3M	5	
			9	
1131	059086	Key Spacer	2	

* P-TITE is recommended.

iVIZION Cash Box Unit 2 Exploded View

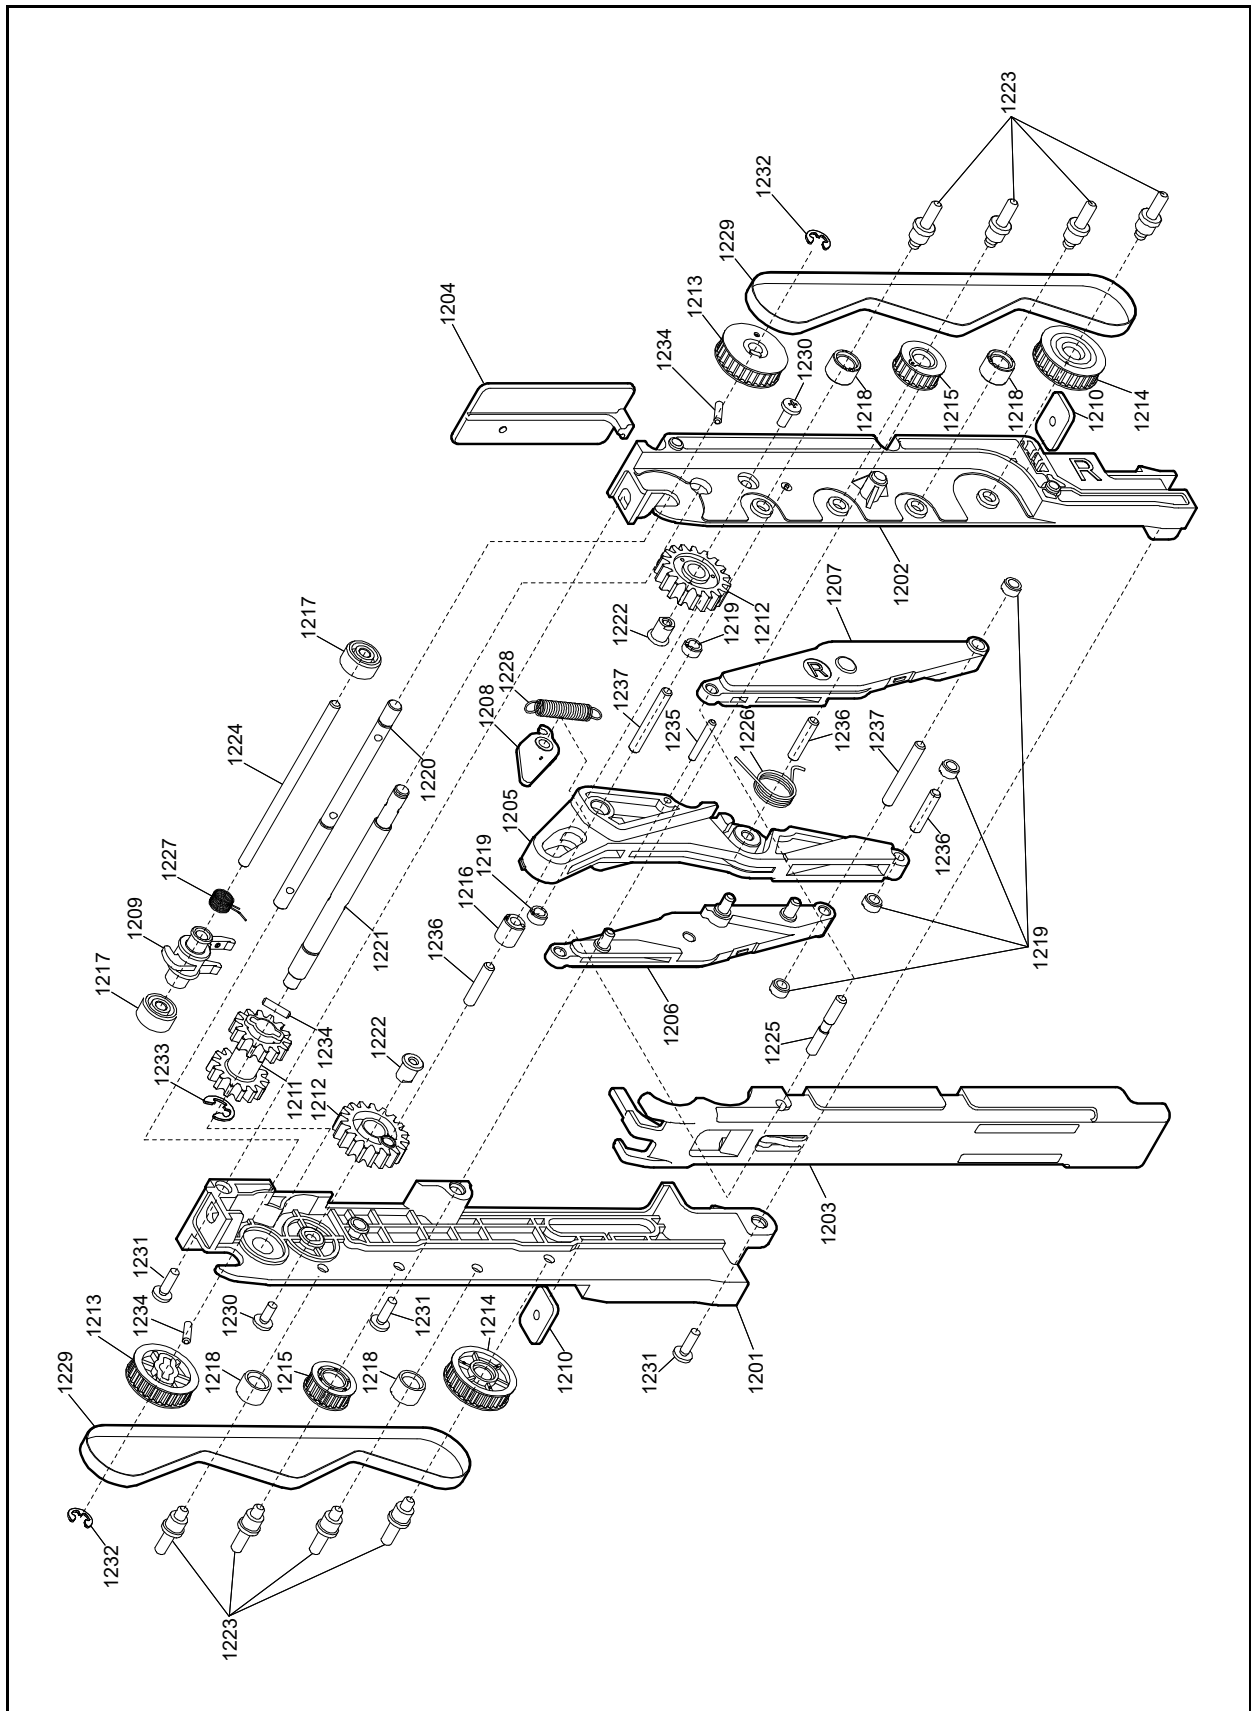


Figure 7-13 iVIZION Cash Box Unit 2 Exploded View

iVIZION Cash Box Unit 2 Parts List**Table 7-14** iVIZION Cash Box Unit 2 Parts List

Ref No.	EDP No.	Description	Qty	Remark
1201	147953	Frame Inner L	1	
1202	147954	Frame Inner R	1	
1203	239381	Arm Pusher	1	
1204	147956	Arm Slide Lever	1	
1205	147958	Arm Center	1	
1206	147959	Arm Left	1	
1207	147960	Arm Right	1	
1208	147961	Home Position Lever	1	
1209	147963	Stack Guide	1	
1210	147796	Plate Nut	2	
1211	147918	Arm Drive Gear	1	
1212	147919	Arm Link Gear	2	
1213	147926	Feed Drive Pulley	2	
1214	147927	Feed Driven Pulley	2	
1215	147928	Feed Idol Pulley	2	
1216	147931	Link Roller	1	
1217	147932	Feed Roller	2	
1218	147933	Feed Idol Roller	4	
1219	185197	Arm Slide Roller	6	
1220	147937	Feed Shaft	1	
1221	147938	Stack Shaft	1	
1222	147939	Arm Link Shaft	2	
1223	147821	Feed Pulley Shaft	8	
1224	147940	Pin 0360	1	
1225	147822	Arm Link Pin	1	
1226	147765	Arm Spring	1	
1227	232818	Stack Guide Spring	1	
1228	147990	Home Position Lever Spring	1	
1229	148033	Timing Belt (Eco Specifications)	2	
1230	003598	M2.6×6 Pan Head Screw with Washer 3M	2	
1231	056165	2.6×8 Phillips, Self-Tapping Binding Head Screw 3M*	3	
1232	091516	Φ3 E-Ring SUS TAIYO	2	
1233	093074	Φ4 E-Ring SUS TAIYO	1	
1234	037880	Φ2x8 Parallel Pin SUS (Hard) TAIYO	3	
1235	064863	Φ2x14 Parallel Pin Sustainer	1	
1236	066091	Φ3x14 Parallel Pin Sustainer	3	
1237	061317	Φ3x22 Parallel Pin Sustainer	2	

*. P-TITE is recommended.

iVIZION Cash Box Unit 3 Exploded View

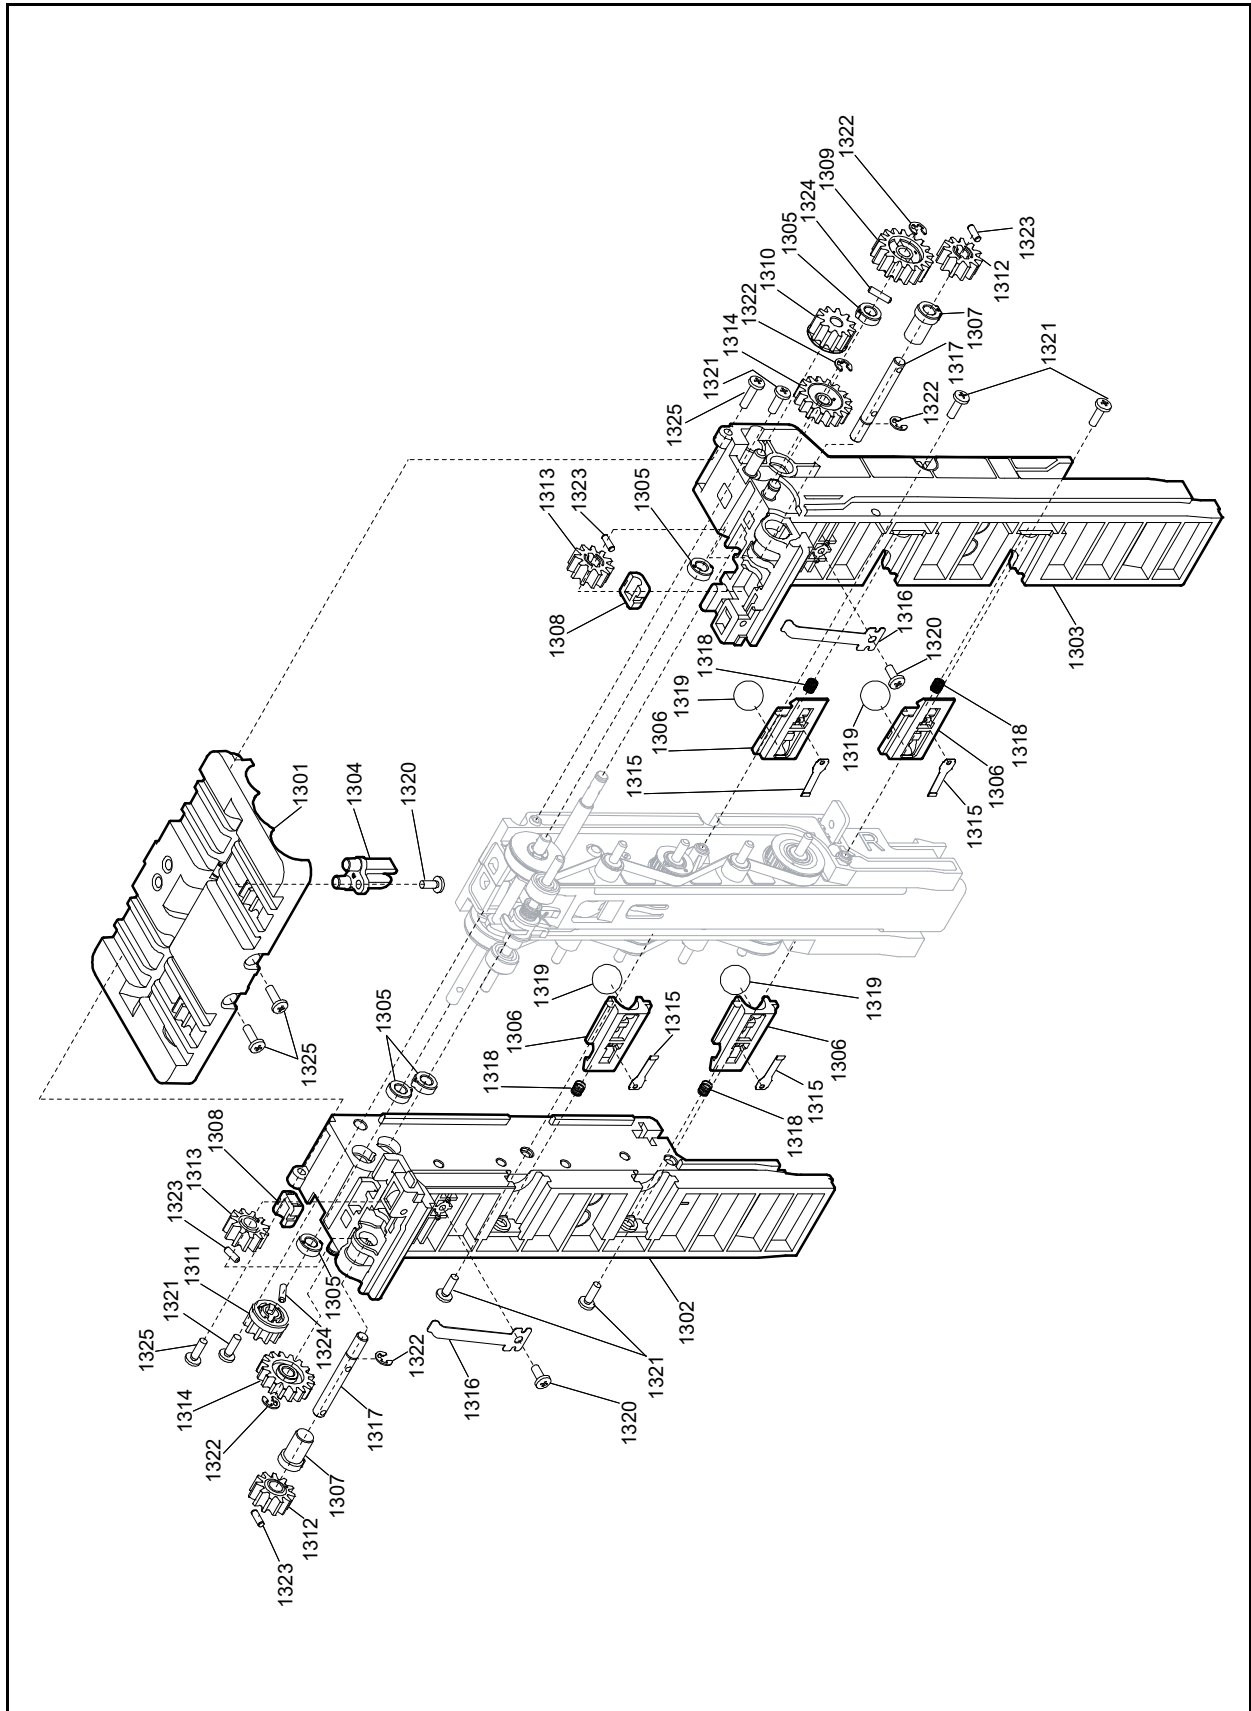


Figure 7-14 iVIZION Cash Box Unit 3 Exploded View

iVIZION Cash Box Unit 3 Parts List**Table 7-15** iVIZION Cash Box Unit 3 Parts List

Ref No.	EDP No.	Description	Qty	Remark
1301	255509	Unit Cover	1	
1302	147951	Frame Outer L	1	
1303	147952	Frame Outer R	1	
1304	147957	Home Position Prism	1	
1305	147962	Bearing 0804	5	
1306	147964	Ball Guide Spring	4	
1307	148536	Bearing Connect	2	
1308	185198	Frame Bush	2	
1309	147915	Stack Gear	1	
1310	147916	Stack Idol Gear	1	
1311	147917	Feed Gear	1	
1312	147920	Drive Gear	2	
1313	147921	Connect Gear	2	
1314	185196	Idol Gear	2	
1315	147797	Ball Spring	4	
1316	147798	Feed Roller Spring	2	
1317	147936	Connect Gear Shaft	2	
1318	147751	Ball Guide Spring	4	
1319	148029	Poly Acetal Ball 3/8 inch High Level	4	
1320	104418	2.6x6 Phillips, Self-Tapping, Binding Head Screw (Black) 3M*	3	
1321	056165	2.6x8 Phillips, Self-Tapping, Binding Head Screw 3M*	8	
1322	003706	Φ2.5 E-Ring	5	
1323	104288	Φ2x6 Parallel Pin Sustainer	4	
1324	037880	Φ2x8 Parallel Pin SUS (Hard) TAIYO	2	
1325	071182	2.6x10 Phillips, Self-Tapping, Binding Head Screw (Blue) 3M*	2	

*. P-TITE is recommended.

iVIZION Frame Exploded View
iVIZION LD Frame Exploded View

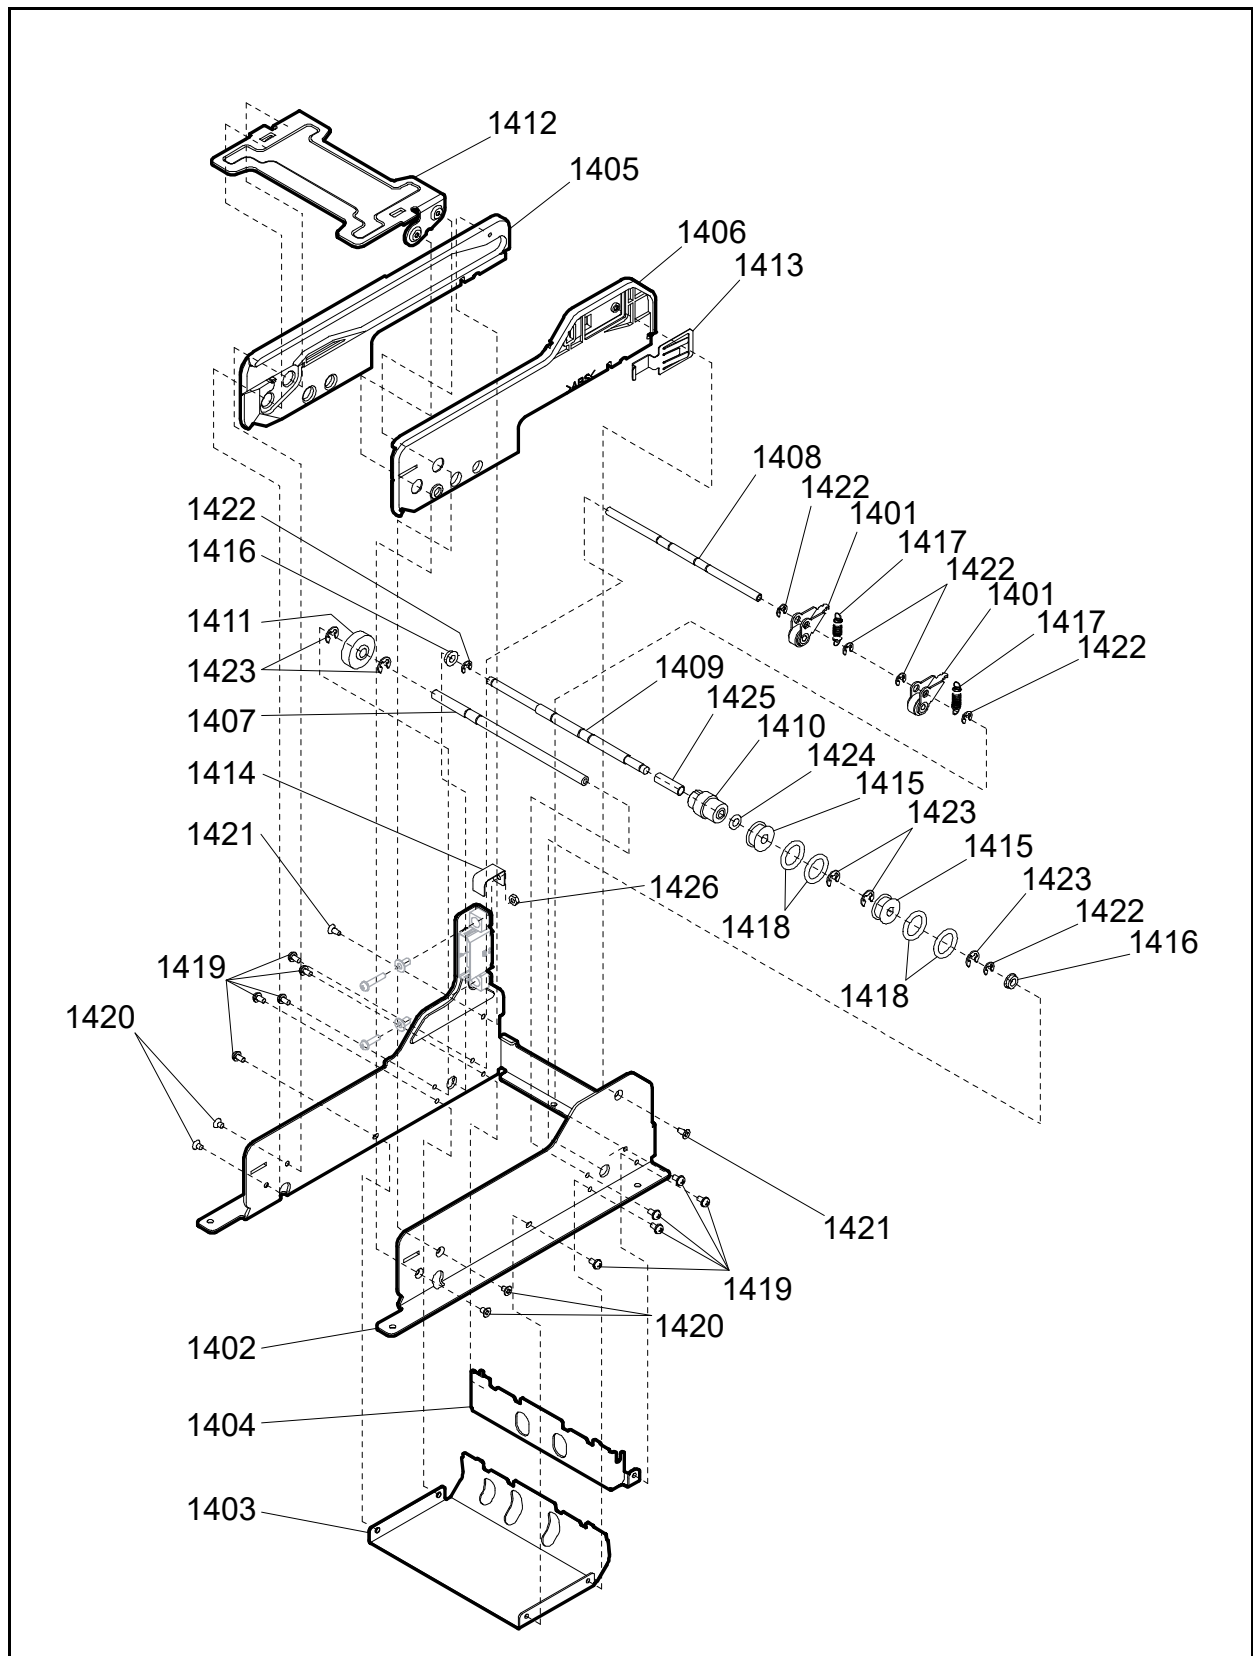


Figure 7-15 iVIZION LD Version Frame Exploded View

iVIZION LD Frame Parts List**Table 7-16** iVIZION LD Frame Parts List

Ref No.	EDP No.	Description	Qty	Remark
1401	206386	LD Roller Arm Assy.	2	
1402	206378	LD Frame Base	1	
1403	206377	LD Banknote Front Guide	1	
1404	206376	LD Banknote Rear Guide	1	
1405	206379	LD Frame Guide Left	1	
1406	206380	LD Frame Guide Right	1	
1407	206381	LD Idler Beam	1	
1408	206382	LD Roller Arm Beam	1	
1409	206383	LD Roller Shaft	1	
1410	206384	LD One Way Gear	1	
1411	206385	LD Idler Gear	1	
1412	147778	Frame Base Guide	1	
1413	147793	Frame Spring Plate	1	
1414	151784	Frame Ground Plate	1	
1415	052509	OL Roller	2	
1416	034270	Ball Bearing (F674ZZ)	2	
1417	035276	Spring	2	
1418	081620	O-Ring	4	
1419	003596	M2.6x5 Washer	10	
1420	006021	M2.6x4 Flat Screw	4	
1421	052564	Φ2.6x6 Phillips, Self-Tapping, Flat Screw*	2	
1422	003707	Φ3 E-Ring	6	
1423	003708	Φ4 E-Ring	5	
1424	206374	Φ4 Plain Washer (Wave Shape)	1	
1425	206375	Φ4x17 Reel Bushing	1	
1426	149426	M2.6 Nylon Nut	1	

*. P-TITE is recommended.

iVIZION HC Frame Exploded View

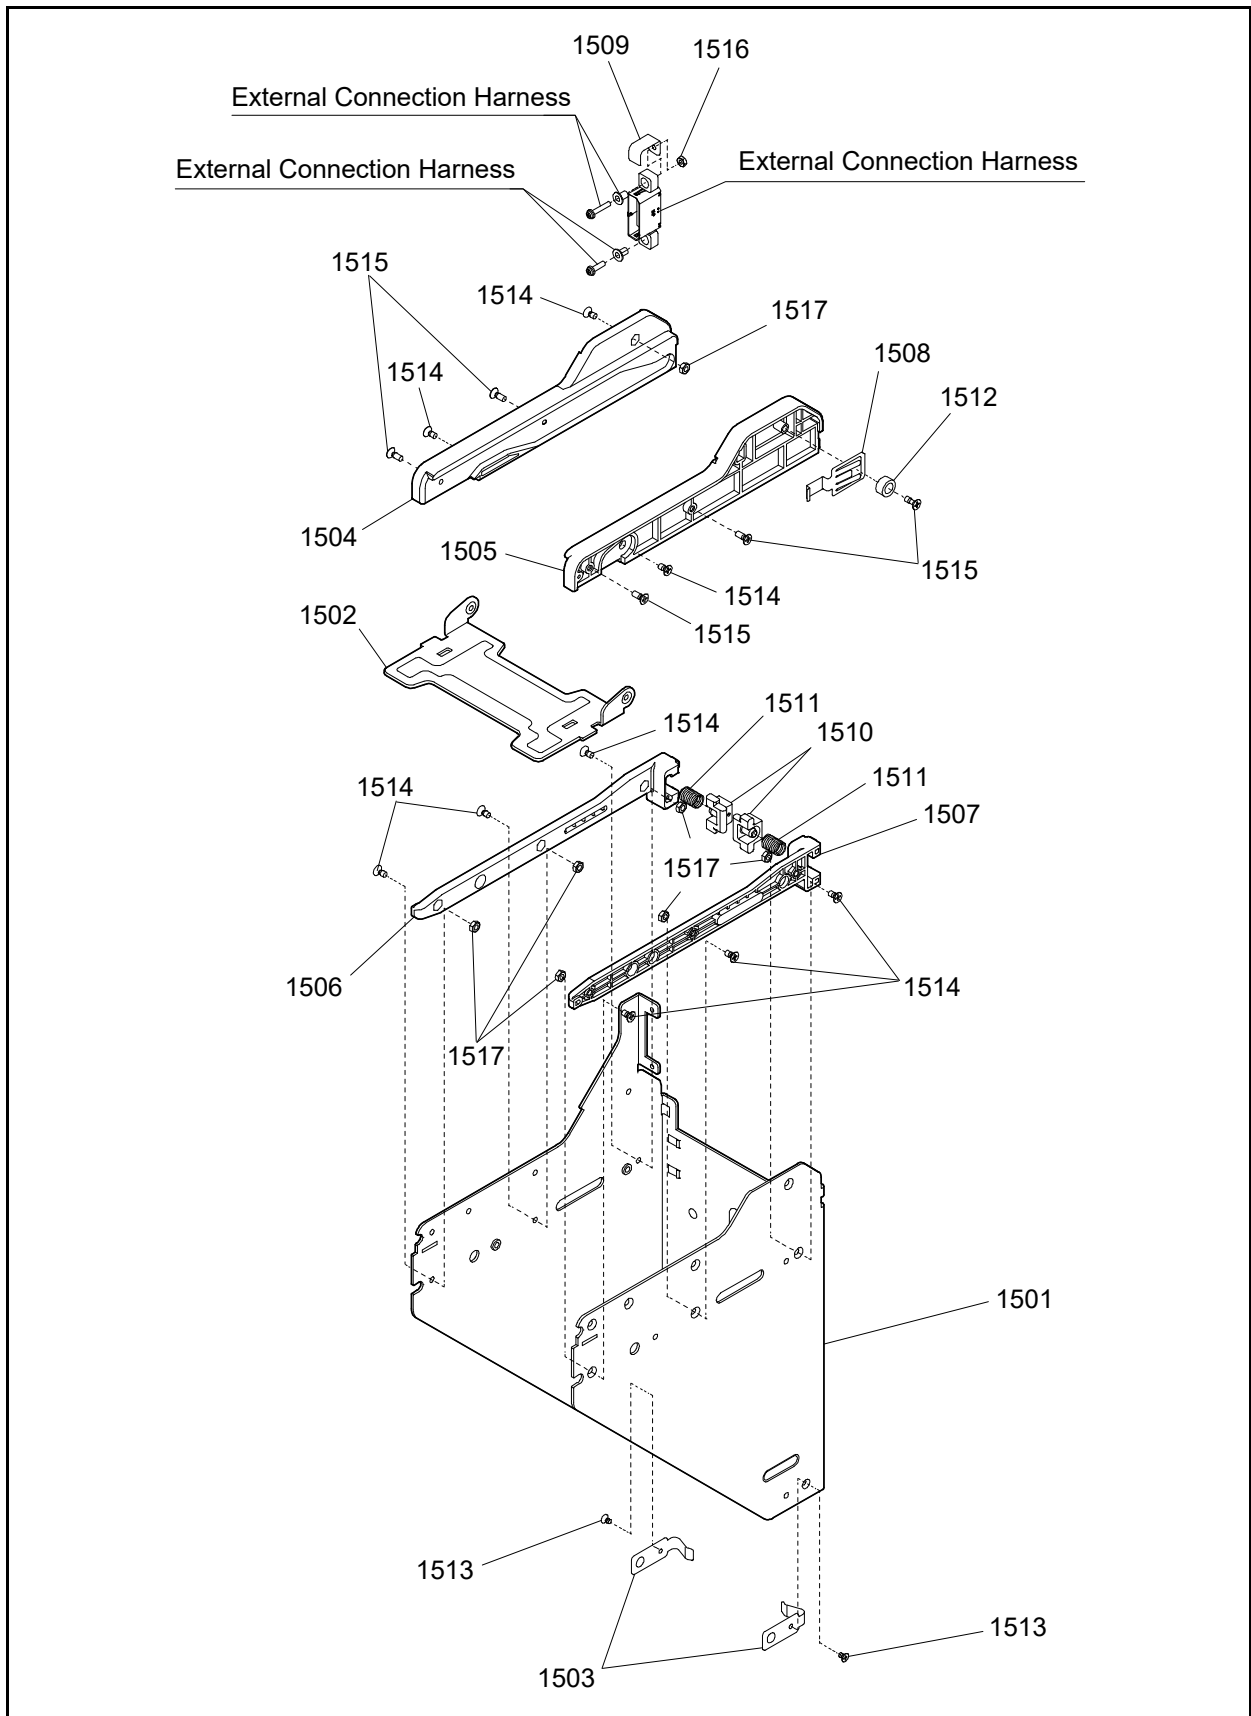


Figure 7-16 iVIZION HC Frame Exploded View

iVIZION HC Frame Parts List**Table 7-17** iVIZION HC Frame Parts List

Ref No.	EDP No.	Description	Qty	Remark
1501	226031	HC Frame Base	1	
1502	226032	HC Frame Base Guide	1	
1503	226033	REAR FG PLT	2	
1504	226034	Frame Transport Guide L	1	
1505	226035	Frame Transport Guide R	1	
1506	226036	Frame Box Guide L	1	
1507	226037	Frame Box Guide R	1	
1508	147793	Frame Spring Plate	1	
1509	151784	Frame Ground Plate	1	
1510	147906	Frame Latch	2	
1511	227687	Hold Spring	2	
1512	226038	Juracon Spacer	1	
1513	006021	M2.6x4 Flat Screw	2	
1514	005769	M3x6 Flat Screw	9	
1515	092229	3x8 Self-tapping Flat Screw*	5	
1516	149426	M2.6 Nylon Nut	1	
1517	003675	M3 Hex Nut	7	

*. P-TITE is recommended.

iVIZION HC Cash Box Exploded View
iVIZION HC Box Assembly Exploded View

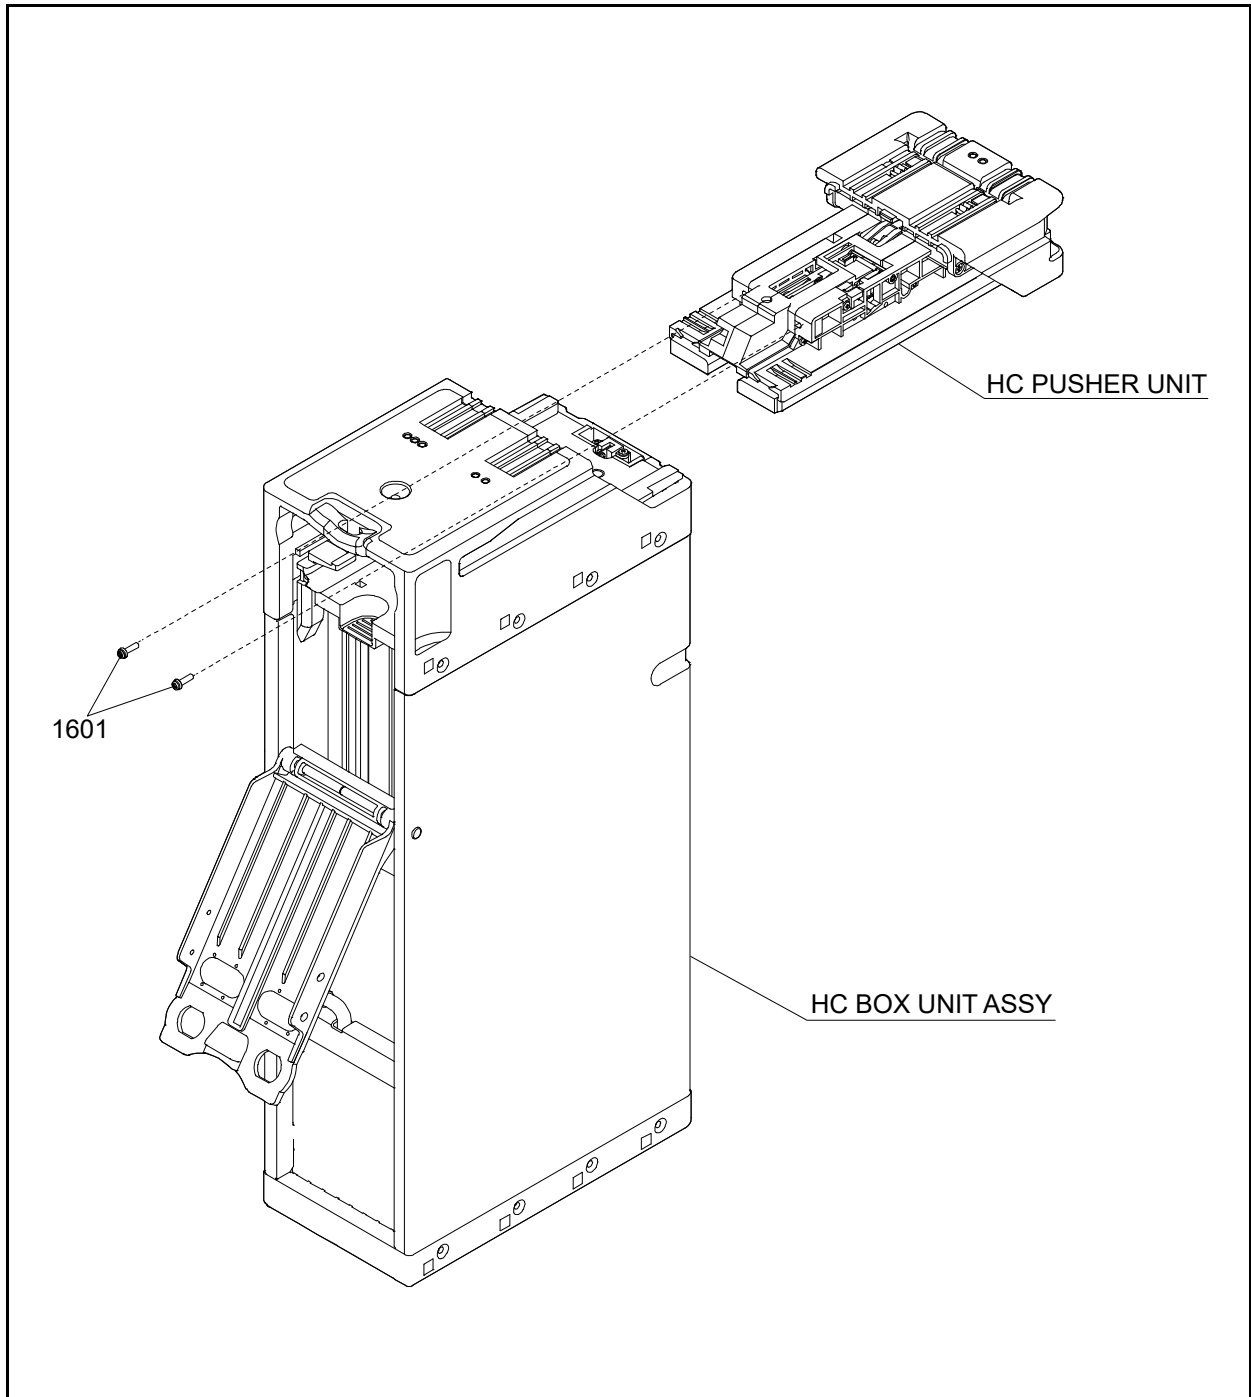


Figure 7-17 iVIZION HC Box Assembly Exploded View

iVIZION HC Box Assembly Parts List

Table 7-18 iVIZION HC Box Assembly Parts List

Ref No.	EDP No.	Description	Qty	Remark
1601	006037	M3x12 W Washer (Small)	2	

iVIZION HC Box Unit Exploded View

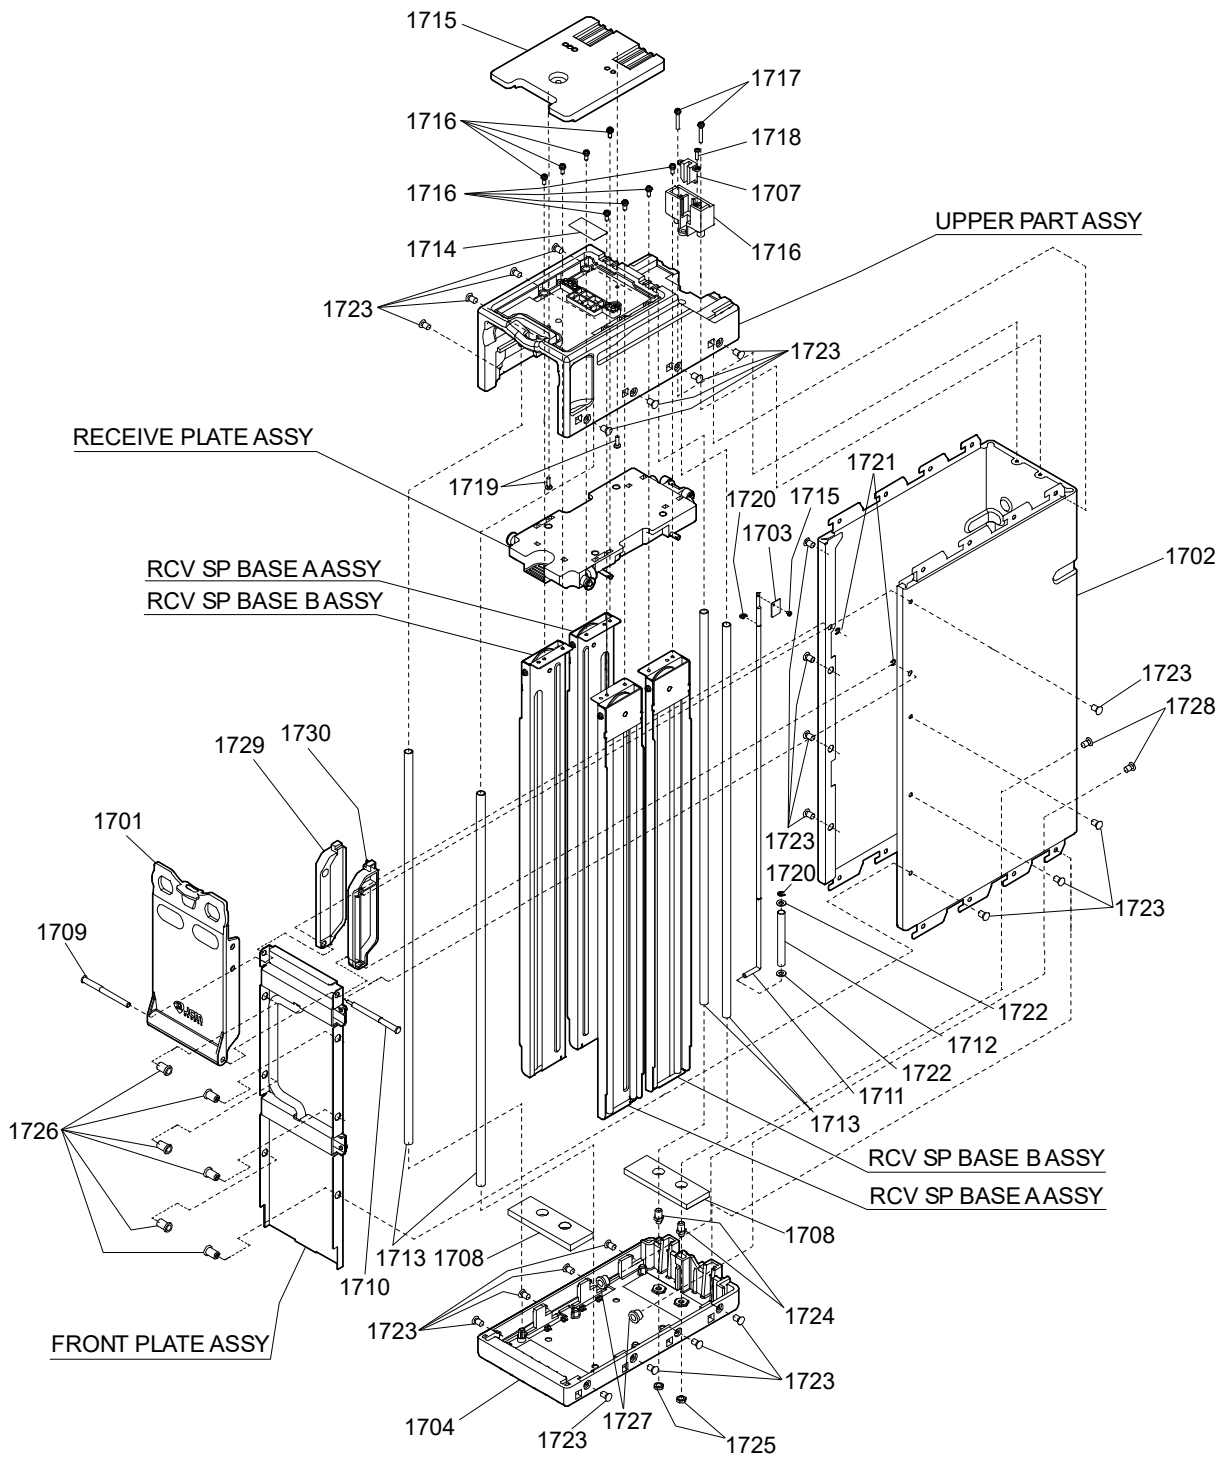


Figure 7-18 iVIZION HC Box Unit Exploded View

iVIZION HC Box Unit Parts List**Table 7-19** iVIZION HC Box Unit Parts List

Ref No.	EDP No.	Description	Qty	Remark
1701	226039	HC Box Door Assy	1	
1702	271305	HC Box Main Plate	1	See Footnote*
1703	226051	Interrupt Plate	1	
1704	271304	HC Box Lower Part	1	See Footnote*
1705	226042	HC Box Top Cover	1	
1706	226043	HC Box Near Full Case	1	
1707	288623	Near Full Prism B	1	
1708	226067	Bottom Sponge Sheet	2	
1709	226058	HC Door Hinge A	1	
1710	226059	HC Door Hinge B	1	
1711	226060	Near Full Shaft A	1	
1712	226056	Near Full Spring	1	
1713	226069	Receive Plate Guide	4	
1714	278233	RFID Tag	1	
1715	047278	M2x3 Washer	1	
1716	003611	M3x8 W Washer (Small)	8	
1717	006482	M3x20 W Washer (Small)	2	
1718	071182	2.6x10 Self-tapping Binding Screw†	1	
1719	107111	3x10 Self-tapping Binding Screw†	2	
1720	091516	φ3 E-Ring	2	
1721	003718	Crescent Stopper	2	
1722	052669	φ4 Plain Washer (Large Washer)	2	
1723	230489	AD-52 Shield Rivet	24	
1724	230650	Pipe Holder ST	2	
1725	230651	M5 Hexagon Thin Nut	2	
1726	230488	Front Plate Mounting Pin	6	
1727	271306	Rivet Spacer	2	
1728	271307	AD-54 Shield Rivet	2	
1729	230644	HC Box Door Grommet Left	1	
1730	230645	HC Box Door Grommet Right	1	

*. This part requires specific tools to assemble and individual parts are not available.

†. P-TITE is recommended.

iVIZION HC Upper Part Exploded View

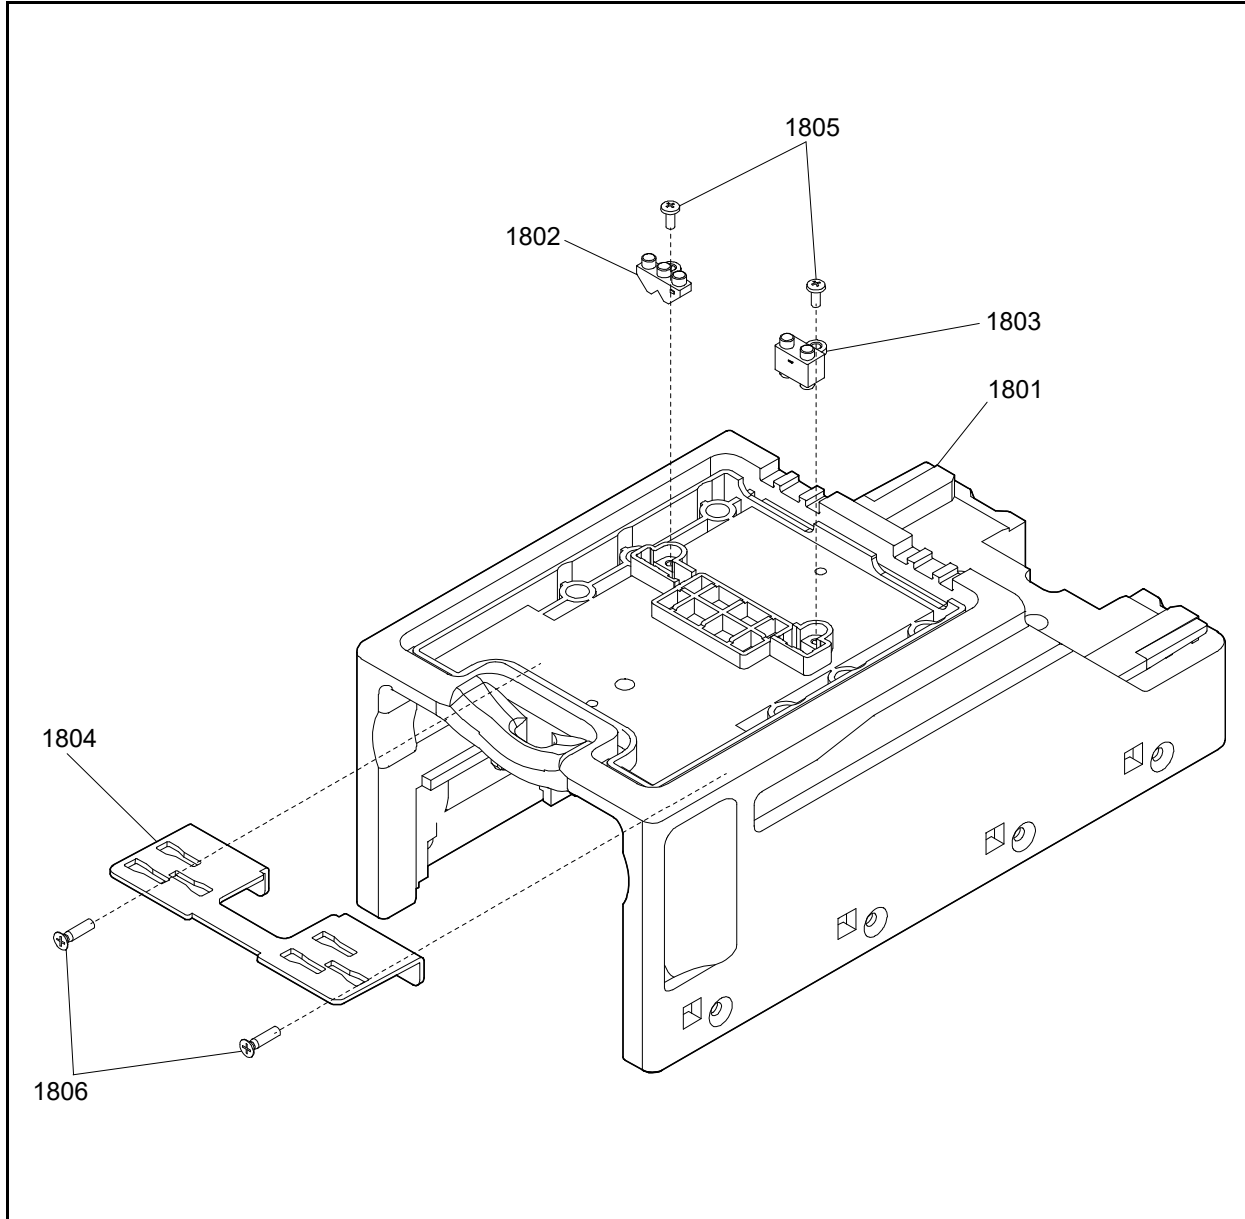



Figure 7-19 iVIZION HC Upper Part Exploded View

iVIZION HC Upper Part Parts List

Table 7-20 iVIZION Upper Part Parts List

Ref No.	EDP No.	Description	Qty	Remark
1801	288620	2500Box Upper Part	1	
1802	288621	Box Detection Prism	1	
1803	288622	ST Home Prism A	1	Stud Home Prism A
1804	147794	Lock Bracket	1	
1805	063250	2.6x6 Phillips, Self-tapping, Binding Head Screw*	2	
1806	190874	3x12 Phillips, Self-tapping, Flat Head Screw*	2	

*. P-TITE is recommended.

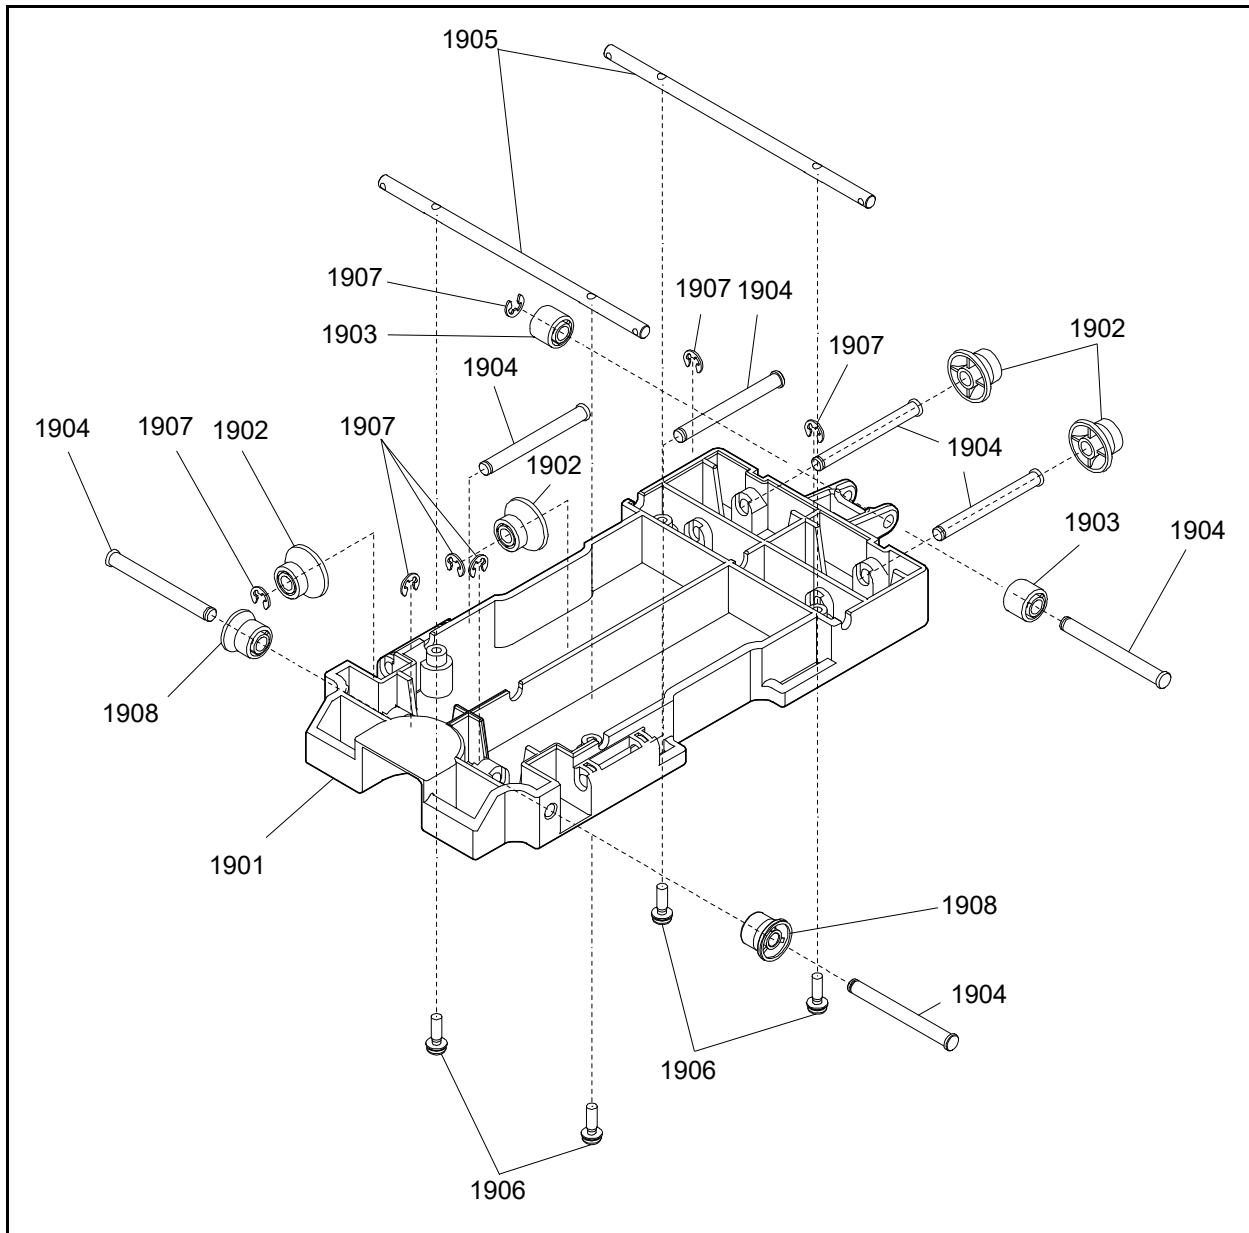iVIZION HC Receive Plate Assembly Exploded View**Figure 7-20** iVIZION HC Receive Plate Assembly Exploded View**iVIZION HC Receive Plate Assembly Parts List****Table 7-21** iVIZION HC Receive Plate Assembly Parts List

Ref No.	EDP No.	Description	Qty	Remark
1901	226047	Receive Plate	1	
1902	226064	Receive Roller A	4	
1903	226065	Receive Roller B	2	
1904	226061	Receive Plate Shaft A	7	
1905	226062	Receive Plate Shaft B	2	
1906	013536	M3x10 Pan Head W Washer (Small)	4	
1907	091516	φ3 E-Ring	7	
1908	230490	Receive Roller C	2	

iVIZION HC Receive Spring Base Assembly Exploded View

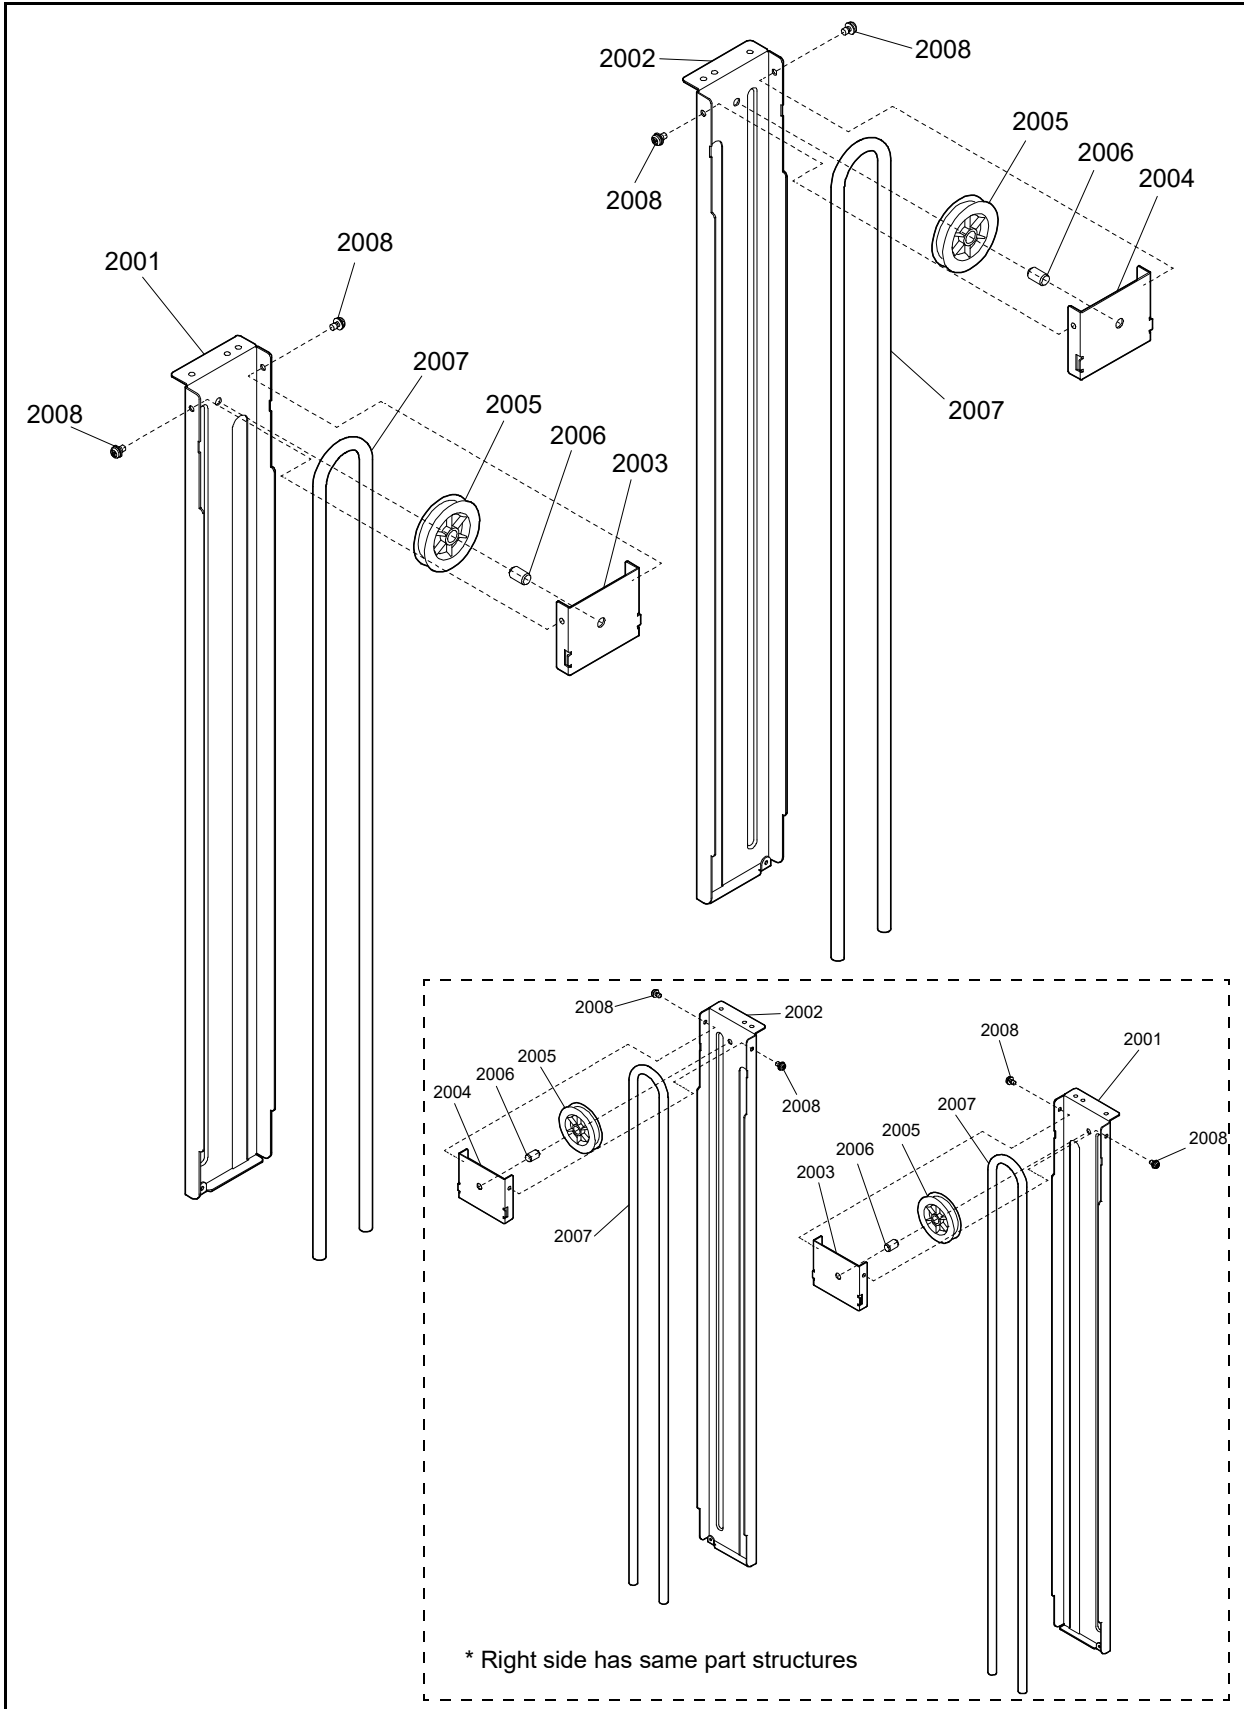


Figure 7-21 iVIZION HC Receive Spring Base Assembly Exploded View

iVIZION HC Receive Spring Base Assembly Parts List**Table 7-22** iVIZION HC Receive Spring Base Assembly Parts List

Ref No.	EDP No.	Description	Qty	Remark
2001	226052	Receive Spring Base B	2	
2002	226053	Receive Spring Base A	2	
2003	226054	Receive Spring Cover A	2	
2004	226055	Receive Spring Cover B	2	
2005	226066	Receive Spring Pulley	4	
2006	226063	Receive Plate Shaft C	4	
2007	226057	Receive Plate Spring	4	
2008	001767	M3x5 W Washer (Small)	8	

iVIZION HC Front Plate Assembly Exploded View

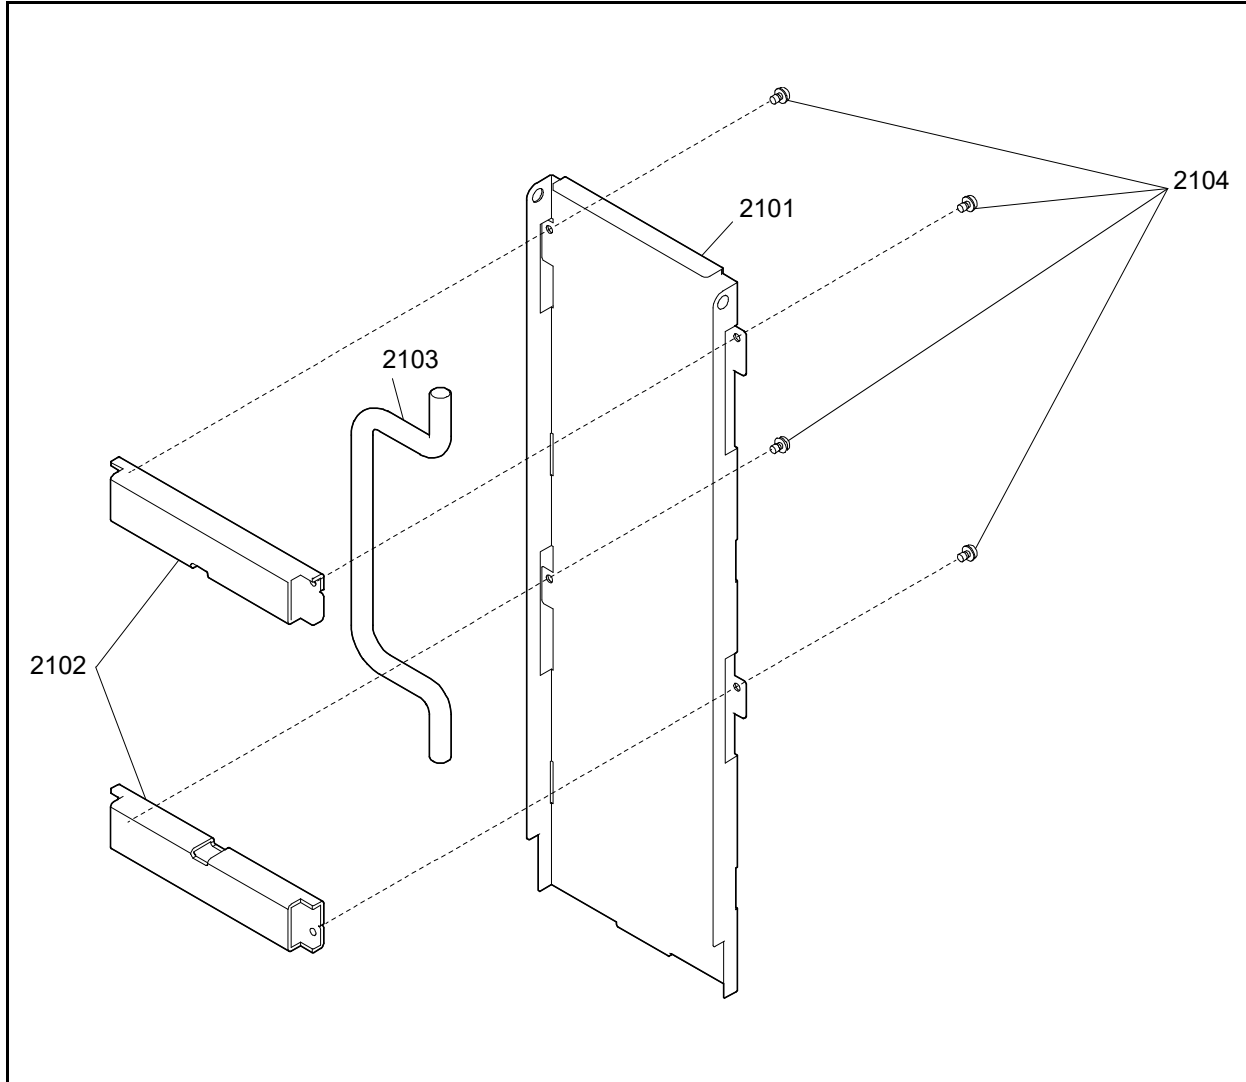


Figure 7-22 iVIZION HC Front Plate Assembly Exploded View

iVIZION HC Front Plate Assembly Parts List

Table 7-23 iVIZION HC Front Plate Assembly Parts List

Ref No.	EDP No.	Description	Qty	Remark
2101	226049	HC Box Front Plate	1	
2102	226050	HC Box Handle Hinge	2	
2103	226068	HC Box Handle	1	
2104	001767	M3x5 W Washer (Small)	4	

iVIZION HC Pusher Unit Exploded View

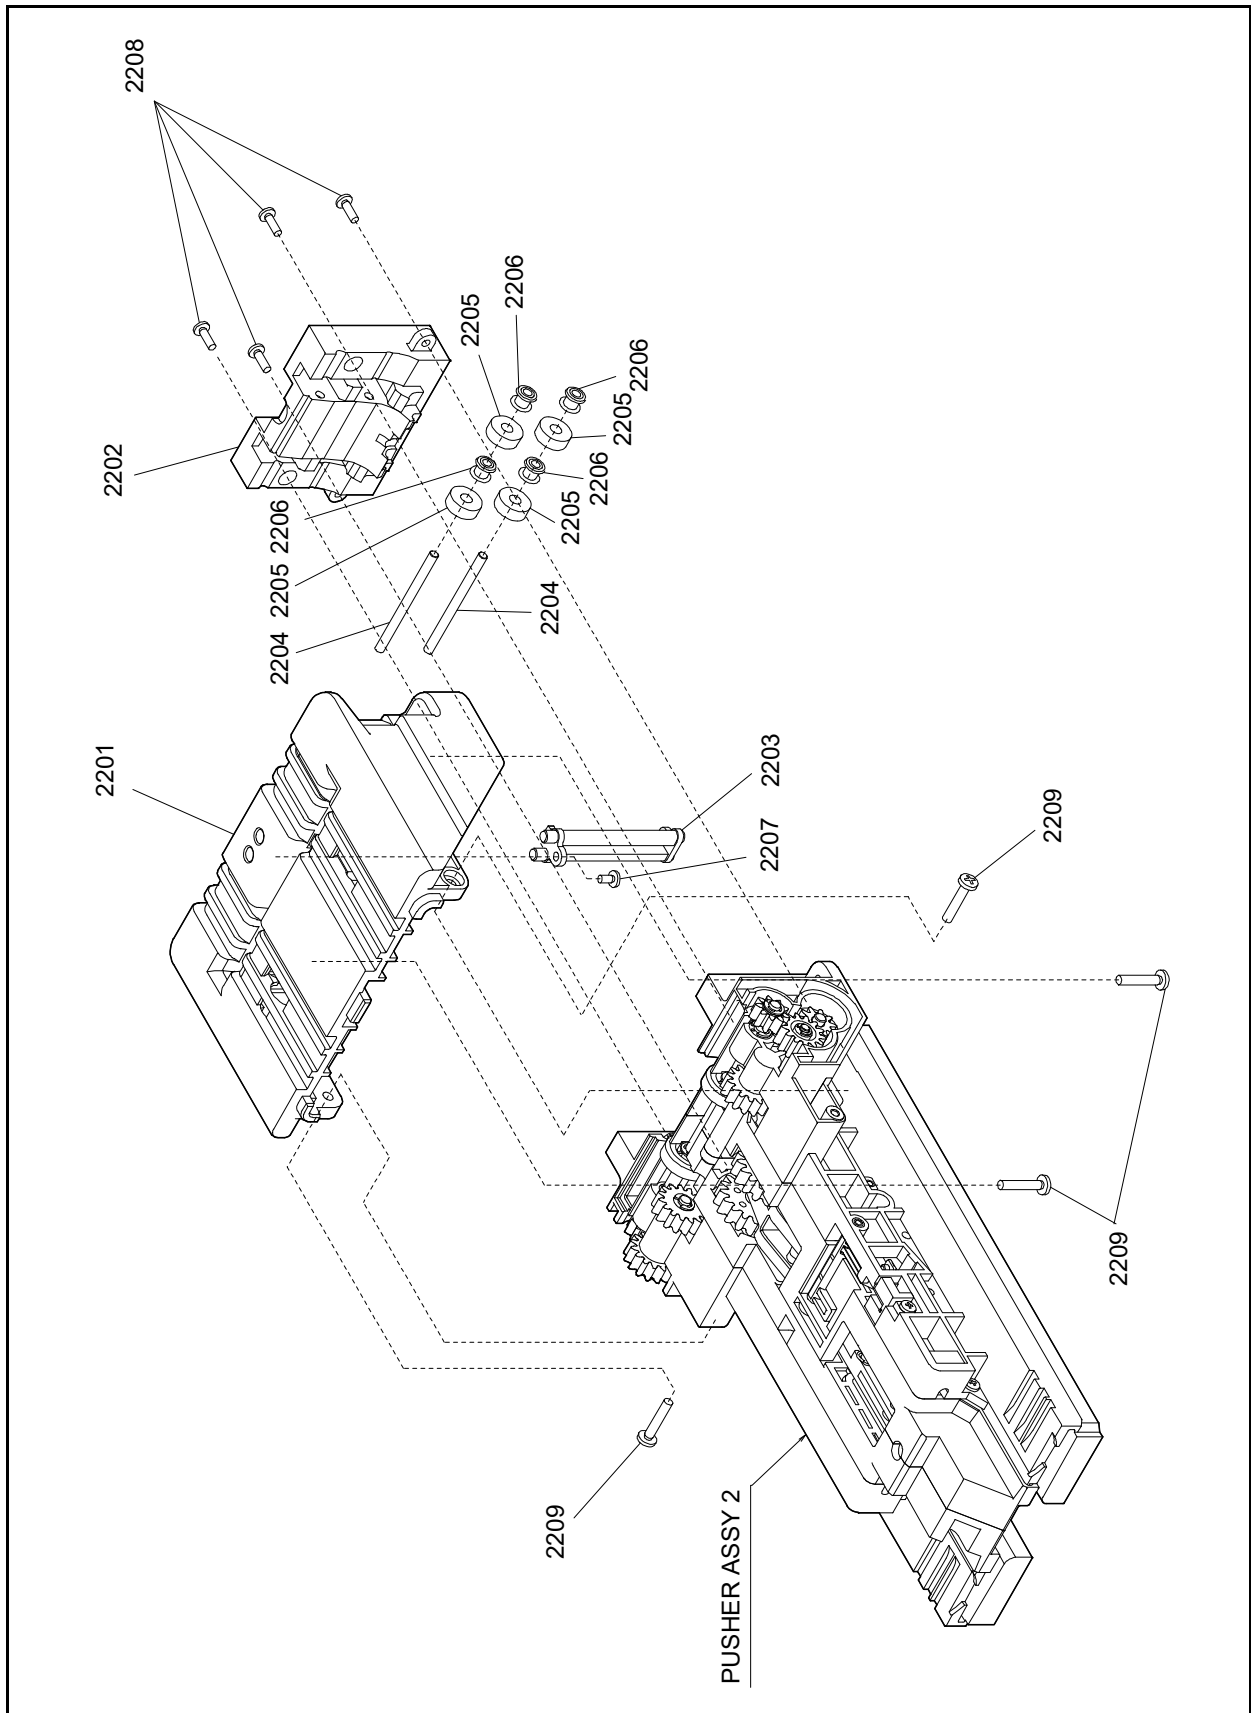


Figure 7-23 iVIZION HC Pusher Unit Assembly Exploded View

iVIZION HC Pusher Unit Parts List**Table 7-24** iVIZION HC Pusher Unit Parts List

Ref No.	EDP No.	Description	Qty	Remark
2201	226072	HC Box Stacker Base	1	
2202	226076	Centering Guide	1	
2203	288625	Near Full Prism A	1	
2204	226085	Stacker Transport Shaft D	2	
2205	230643	SH Sponge Roller	4	
2206	147966	Transport Roller Core	4	
2207	058274	2.6x5 Self-tapping Binding Screw*	1	
2208	056165	2.6x8 Self-tapping Binding Screw*	4	
2209	226104	3x18 Self-tapping Binding Head Screw*	4	

*. P-TITE is recommended.

iVIZION HC Pusher Assembly 1 Exploded View

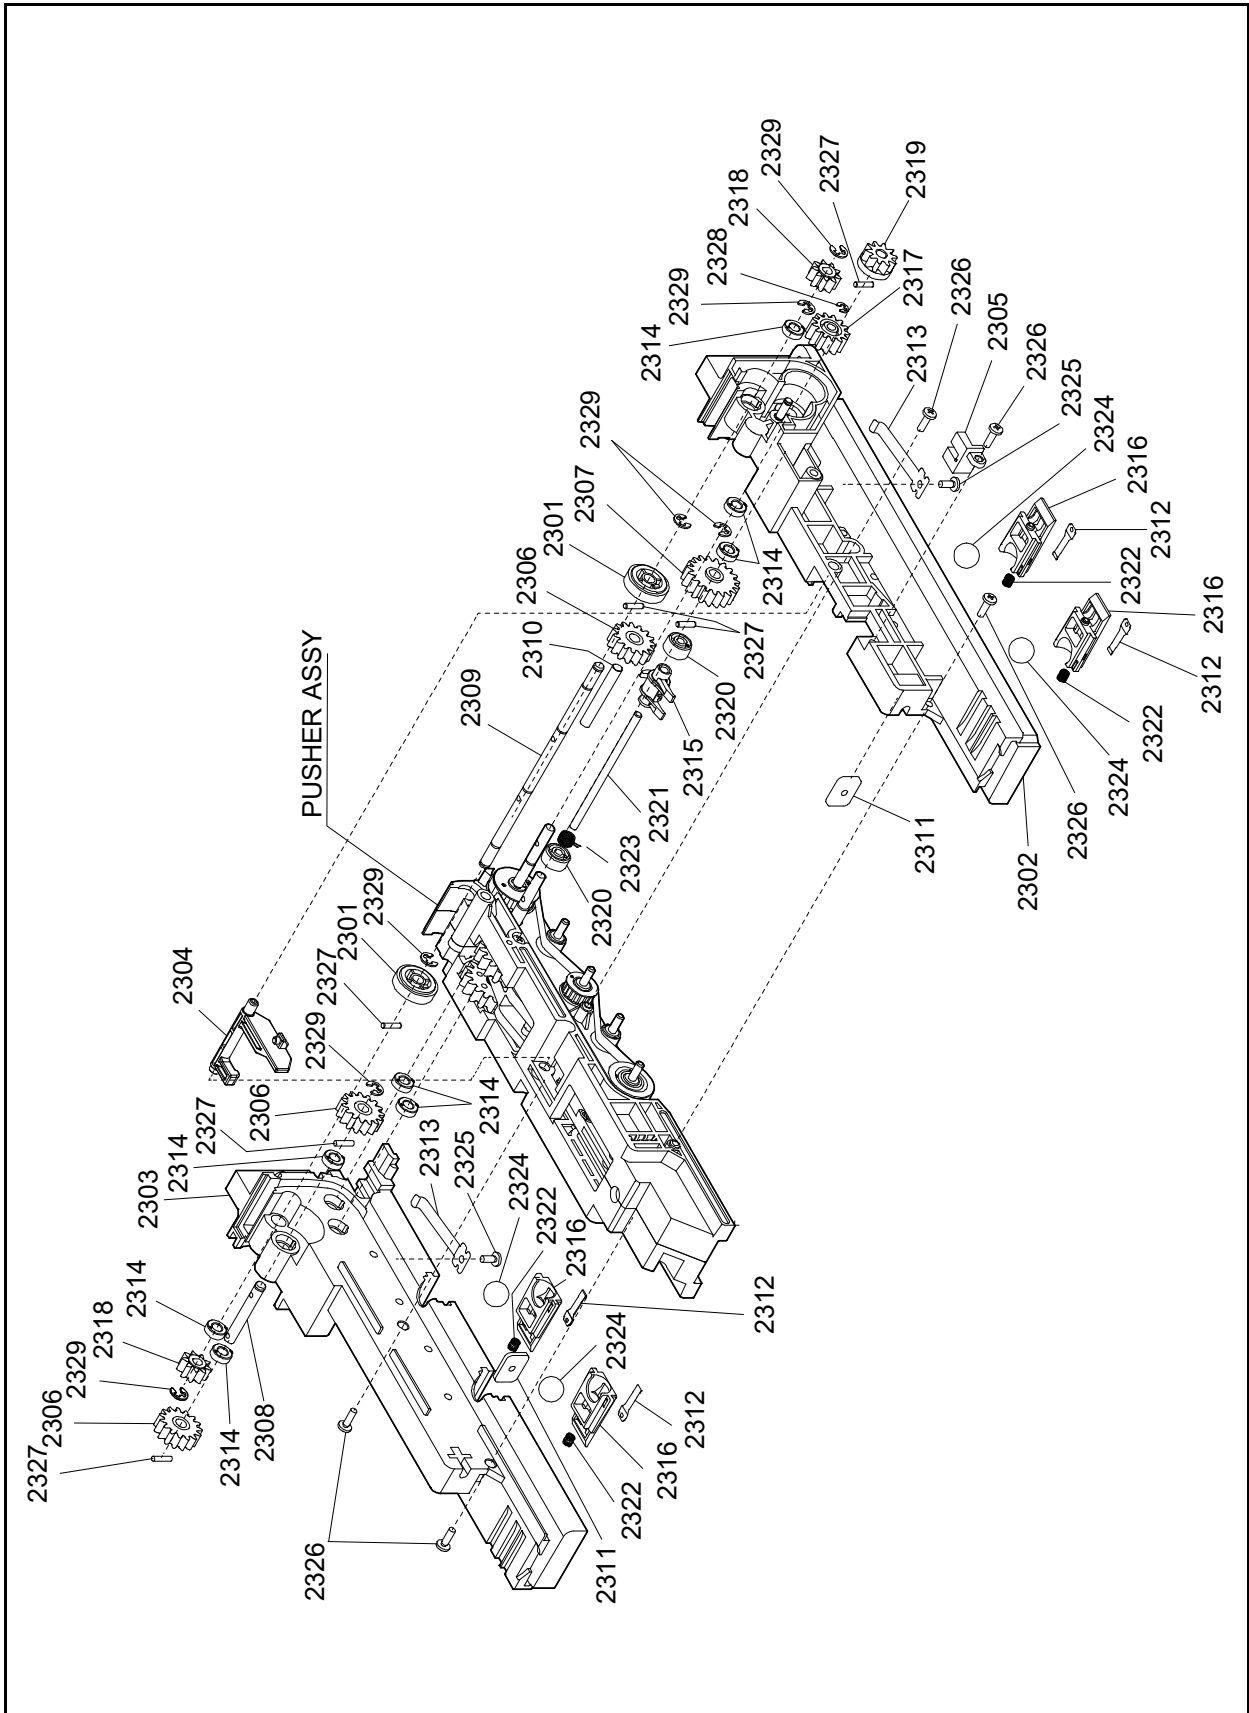


Figure 7-24 iVIZION HC Pusher Assembly 1 Exploded View

iVIZION HC Pusher Assembly 1 Parts List**Table 7-25** iVIZION HC Pusher Assembly 1 Parts List

Ref No.	EDP No.	Description	Qty	Remark
2301	226070	Transport Feed Roller Assy	2	
2302	226071	Outside Guide R Assy	1	
2303	226075	Outside Guide L Assy	1	
2304	226078	Stud Home Lever	1	
2305	288624	ST Home Prism B	1	Stud Home Prism B
2306	226092	Connecting Gear	3	
2307	226093	Gear Stack A	1	
2308	226082	Stacker Transport Shaft A	1	
2309	226083	Stacker Transport Shaft B	1	
2310	226086	Stacker Stud Shaft A	1	
2311	147796	Plate Nut	2	
2312	147797	Ball Spring	4	
2313	147798	Feed Roller Spring	2	
2314	147962	Bearing 0804	8	
2315	147963	Stack Guide	1	
2316	147964	Ball Guide	4	
2317	147756	Gear Transport-Stacking 2	1	
2318	147758	Gear Pulley Drive	2	
2319	147917	Feed Gear	1	
2320	147932	Feed Roller	2	
2321	147940	Pin 0360	1	
2322	147751	Ball Guide Spring	4	
2323	227688	HC Box Stack Guide Spring	1	
2324	148029	POM 3/8 inch	4	
2325	104418	2.6x6 Self-tapping Binding Screw*	2	
2326	056165	2.6x8 Self-tapping Binding Screw*	5	
2327	037880	2x8 Parallel Pin SUS (Hard) TAIYO	6	
2328	091517	φ2 E-Ring	1	
2329	091516	φ3 E-Ring	7	

* P-TITE is recommended.

iVIZION HC Pusher Assembly 2 Exploded View

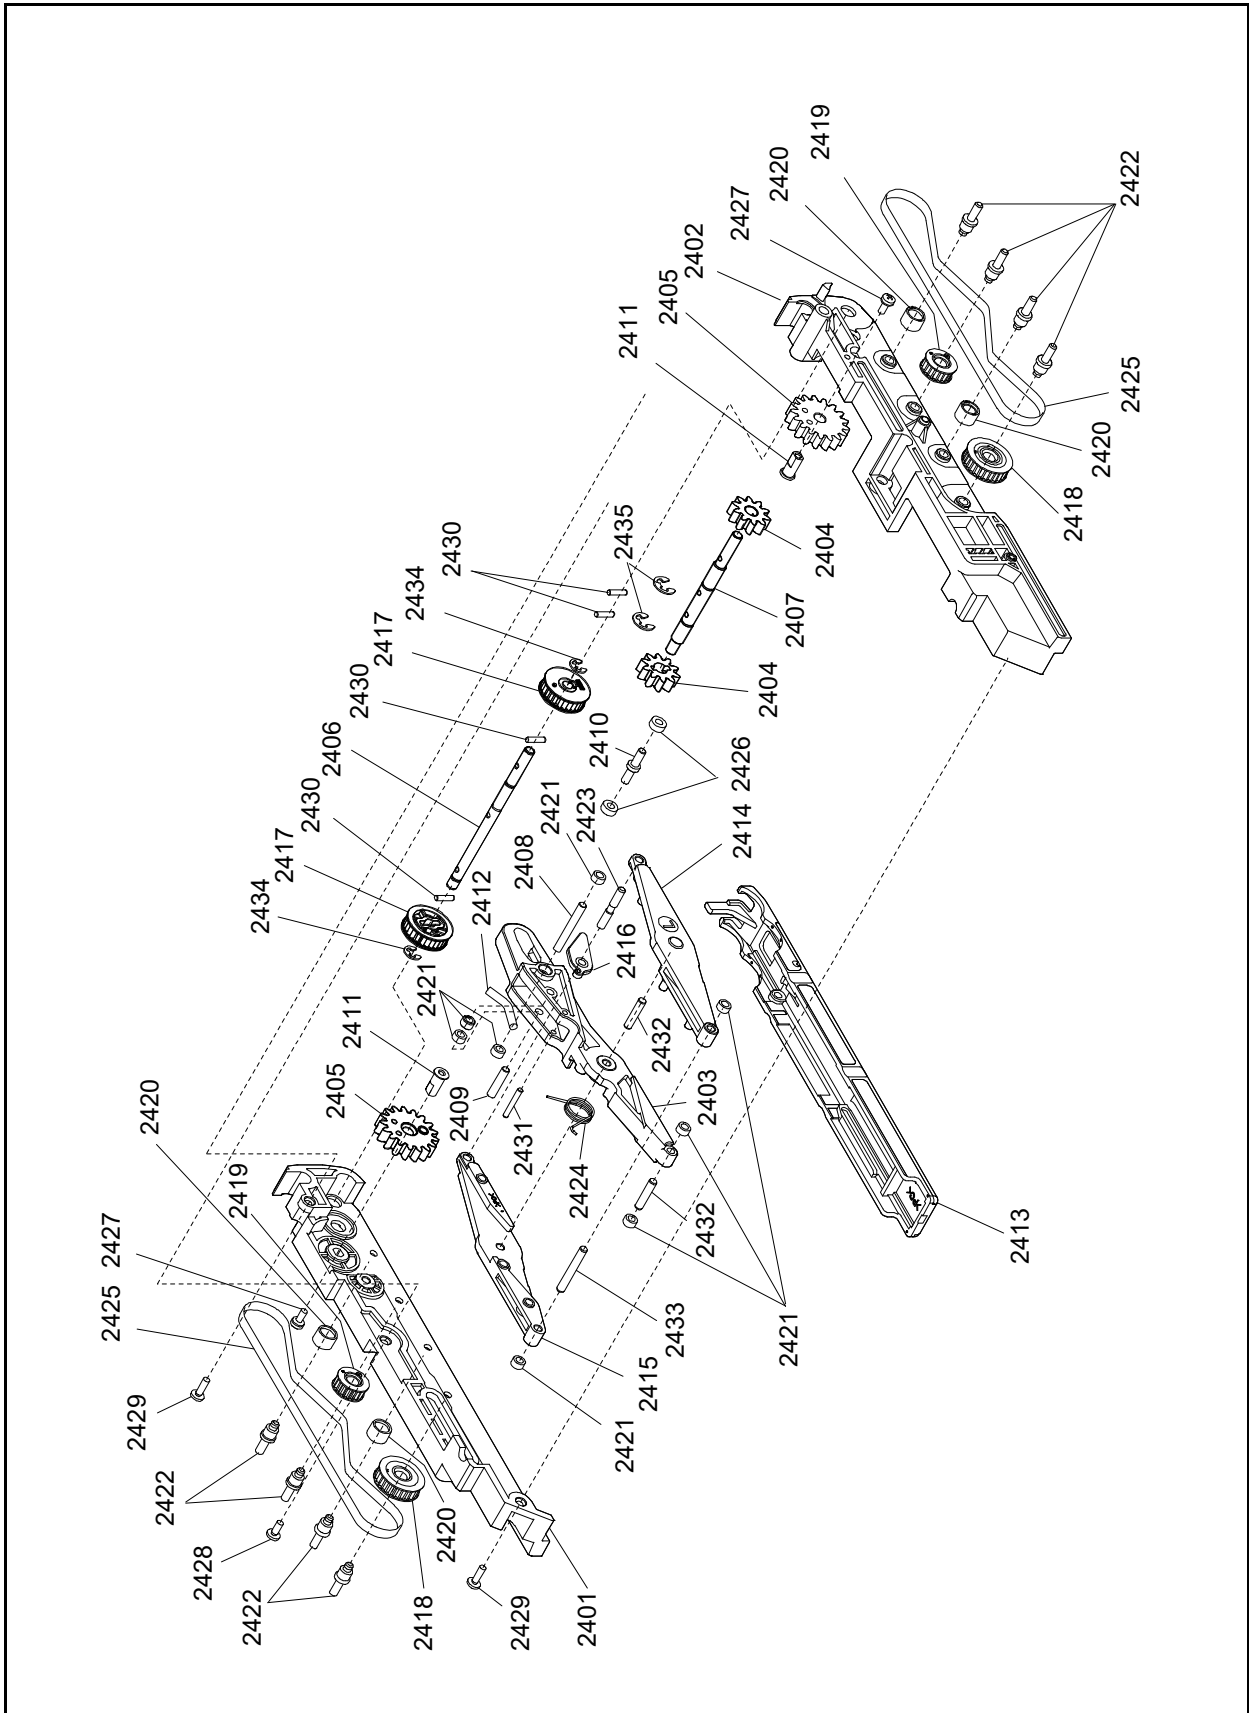


Figure 7-25 iVIZION HC Pusher Assembly 2 Exploded View

iVIZION HC Pusher Assembly 2 Parts List**Table 7-26** iVIZION HC Pusher Assembly 2 Parts List

Ref No.	EDP No.	Description	Qty	Remark
2401	226073	Inside Guide L	1	
2402	226074	Inside Guide R	1	
2403	226077	Arm Pusher	1	
2404	226094	Gear Stack B	2	
2405	226095	Gear Stack C	2	
2406	226084	Stacker Transport Shaft C	1	
2407	226087	Stacker Stud Shaft B	1	
2408	226088	Stacker Stud Shaft C	1	
2409	226089	Stacker Stud Shaft D	1	
2410	226090	Stacker Stud Shaft E	1	
2411	226091	Stacker Stud	2	
2412	226081	Stacker Arm Spring	1	
2413	239381	Arm Pusher	1	
2414	147959	Arm Left	1	
2415	147960	Arm Right	1	
2416	147961	Home Position Lever	1	
2417	147926	Feed Drive Pulley	2	
2418	147927	Feed Driven Pulley	2	
2419	147928	Feed Idol Pulley	2	
2420	147933	Feed Idol Roller	4	
2421	185197	Arm Slide Roller	8	
2422	147821	Feed Pulley Shaft	8	
2423	147822	Arm Link Pin	1	
2424	147765	Arm Spring	1	
2425	148033	Timing Belt	2	
2426	226096	Bearing	2	
2427	005555	2.6x6 Pan Head W Washer (Small)	2	
2428	104418	2.6x6 Self-tapping Binding Screw *	1	
2429	056165	2.6x8 Self-tapping Binding Screw *	2	
2430	037880	2x8 Parallel Pin SUS (Hard) TAIYO	4	
2431	064863	2x14 Parallel Pin (Hard)	1	
2432	066091	3x14 Parallel Pin (Hard)	2	
2433	061317	3x22 Parallel Pin (Hard)	1	
2434	091516	φ3 E-Ring	2	
2435	104036	φ4 E-Ring	2	

* P-TITE is recommended.

iVIZION Optional Components Exploded View Bezel/Harness Exploded Views

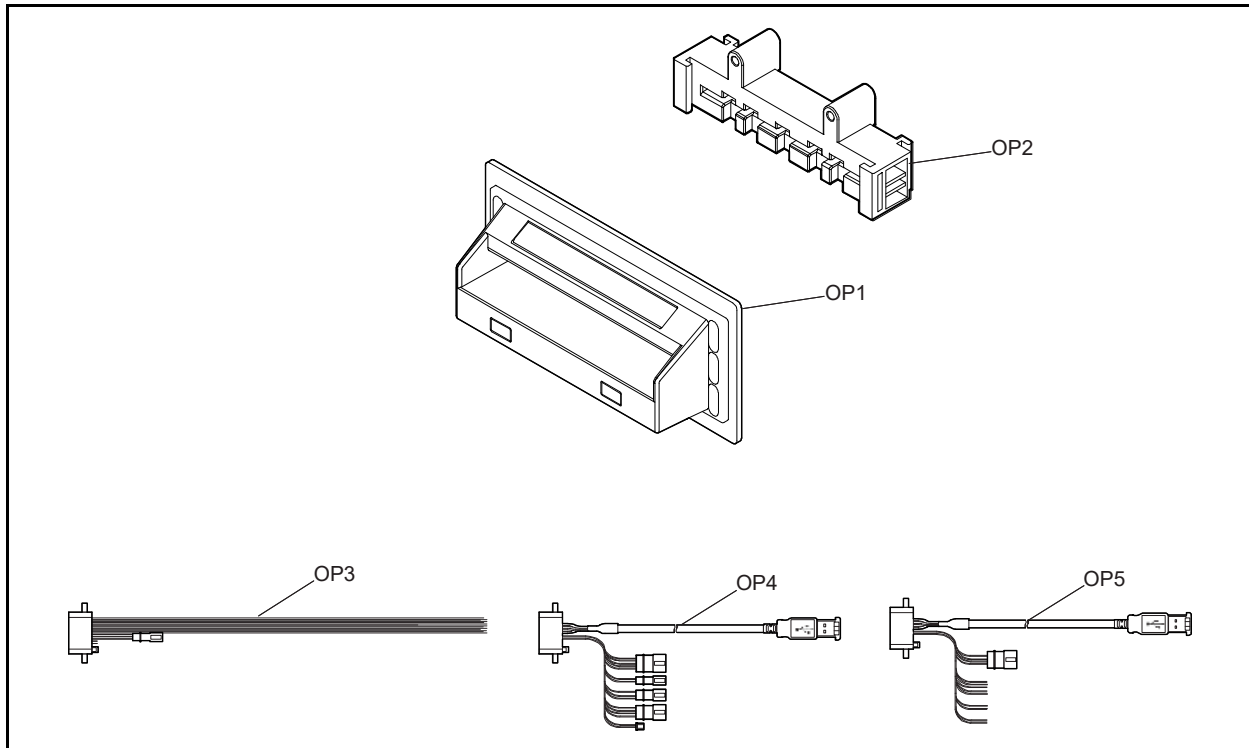


Figure 7-26 iVIZION Optional Components - Bezel/Harness Exploded Views

iVIZION Optional Components - Bezel/Harness Parts List

Table 7-27 iVIZION Optional Components - Bezel/Harness Parts List

Ref No.	EDP No.	Description	Qty	Remark
OP1	196590	iVIZION Bezel SS Type 1 RoHS	1	SS type, Black Bezel, Green LED
	196591	iVIZION Bezel SS Type 2 RoHS	1	SS type, Light Blue Bezel, Blue/Blue LED (2 lines)
	196592	iVIZION Bezel SS Type 3 RoHS	1	SS type, Light Green Bezel, Green/Green LED (2 lines)
	199827*	iVIZION Bezel Type 7 R Metal	1	SS type, Silver Metal Bezel, Green LED
	199828*	iVIZION Bezel Type 8 R Metal	1	SS type, Silver Metal Bezel, Blue LED
	212985	iVIZION Bezel Type 7 Metal T	1	SS type, Gold Metal Bezel, Green LED
	212986	iVIZION Bezel Type 8 Metal T	1	SS type, Gold Metal Bezel, Blue LED
	206714	iVIZION Bezel SU Type 1	1	SU type, Light Blue Bezel, Blue/Blue LED (2 lines)
	206715	iVIZION Bezel SU Type 4	1	SU type, Black Bezel, Green LED
	212989*	iVIZION Bezel Type 7 Metal N	1	SS type, Bronze Silver Metal Bezel, Green LED
	212990*	iVIZION Bezel Type 8 Metal N	1	SS type, Bronze Silver Metal Bezel, Blue LED
OP2	198102	Bezel Spacer	1	
OP3	185884	Interface Harness (3381-05-01†)	1	External Harness Type = 1 SU Standard Harness (One side cut, without USB I/F)
	210442	Interface Harness (3381-05-04†)	1	External Harness Type = 4 SS/SH Harness (One side cut, without USB I/F)
OP4	193582	Interface Harness (3381-05-02†)	1	External Harness Type = 3 SU Harness with USB cable 2 (with Connector and USB I/F)
	210991	Interface Harness (3381-05-05†)	1	External Harness Type = 5 SS/SH Harness 2 (with Connector and USB I/F Cable)
OP5	228287	Interface Harness (3381-05-06†)	1	External Harness Type = 6 SU Harness (1m one side cut, with USB I/F Cable and JPL Connector)

*. A packing box is not available. Contact your local JCM Representative for orders.

†. An alphabetic character that represents the part's version is added at the end.

Wave Rubber Exploded Views

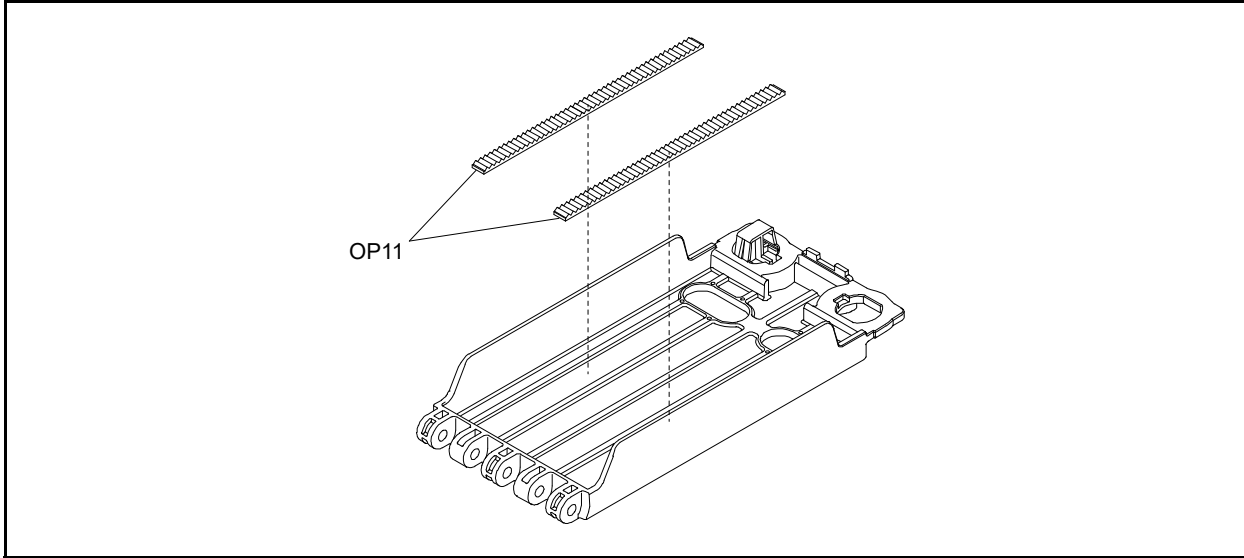


Figure 7-27 iVIZION Optional Components - Wave Rubber Exploded Views

iVIZION Optional Components - Wave Rubber Parts List

Table 7-28 iVIZION Optional Components - Wave Rubber Parts List

Ref No.	EDP No.	Description	Qty	Remark
OP11	247574	Wave Rubber (for Box (L))	1	For Polymer Note Use Markets

Sorting Pusher Unit Exploded Views

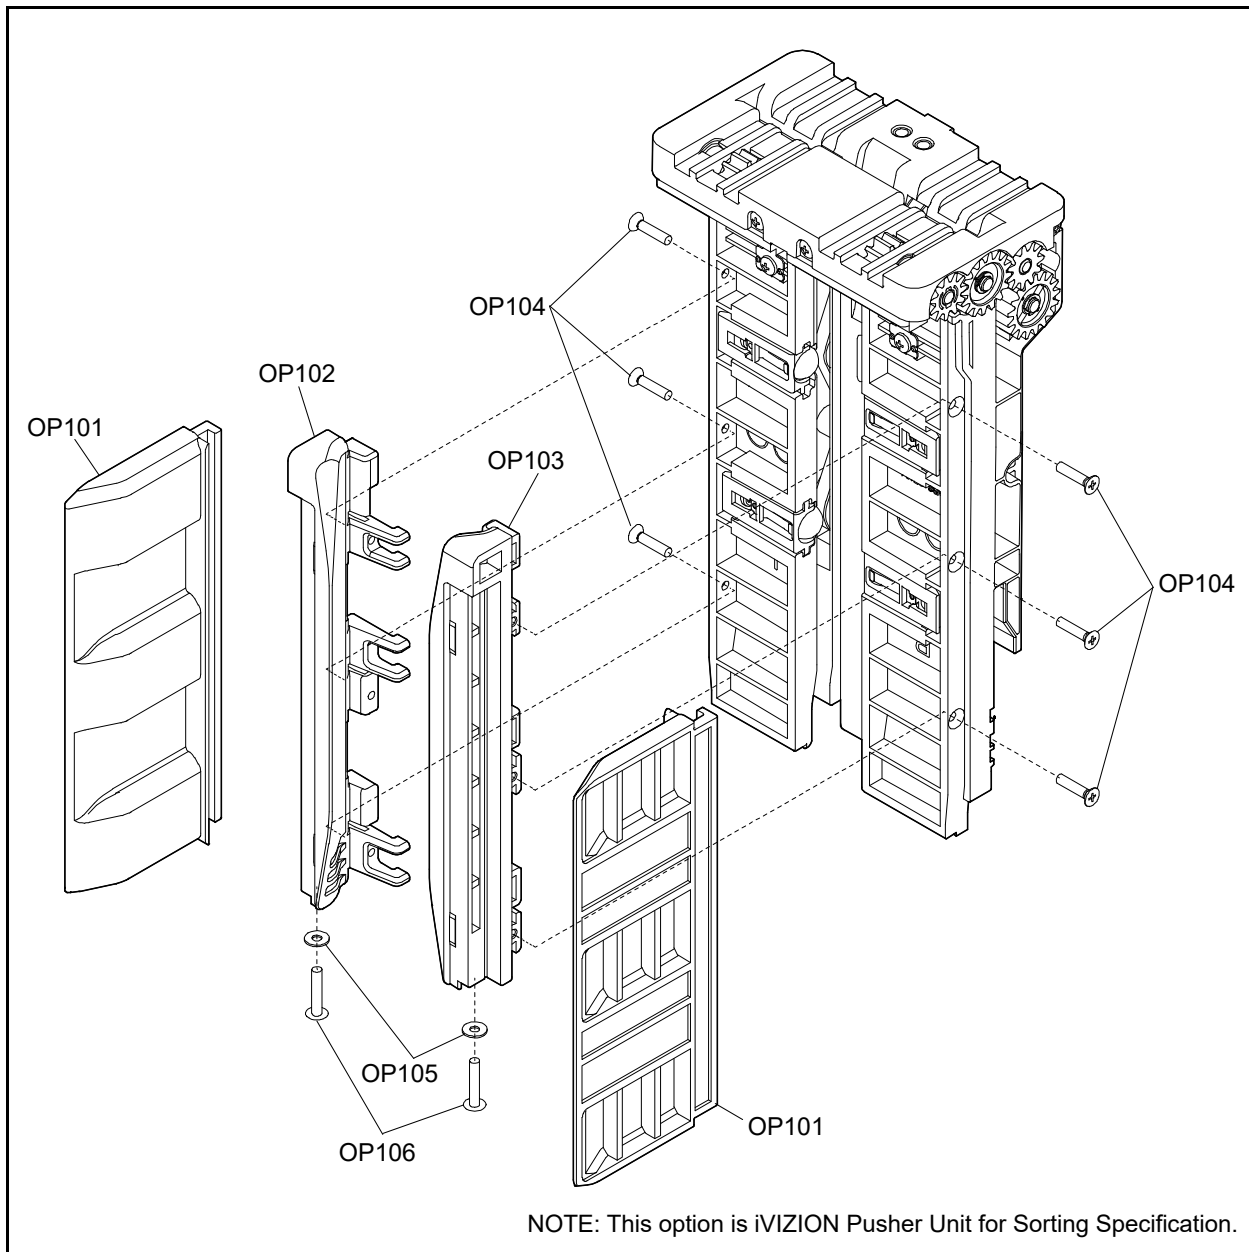


Figure 7-28 iVIZION Optional Components - Sorting Pusher Unit Exploded Views

iVIZION Optional Components - Sorting Pusher Unit Parts List

Table 7-29 iVIZION Optional Components - Sorting Pusher Unit Parts List

Ref No.	EDP No.	Description	Qty	Remark
OP101	224489	Stage Pile Guide C	2	
OP102	224487	Stage Pile Guide A	1	
OP103	224488	Stage Pile Guide B	1	
OP104	189527	2.6x10 Phillips, Self-Tapping, Flat Head Screw *	6	
OP105	076021	φ2.6x6.5x0.5 Flat Washer	2	
OP106	197914	2.6x12 Phillips, Self-Tapping, Binging Head Screw *	1	

*. P-TITE is recommended.

THIS PAGE INTENTIONALLY LEFT BLANK

iVIZION™ Series

Next-Generation Banknote Acceptor Unit

Section 8

8 INDEX

B

Banknote Jam
clearing a ...2-10

C

Calibration
Methods of ...6-6
Tool requirements for ...6-6
Cleaning
methods of, and equipment required for ...2-10
Communications
criteria regarding receipt of ...3-1
Contact Information
Address and Telephone Numbers for ...1-17

D

Dimensions
entire unit clearance
illustrated drawing for ...1-10
Disassembly/Reassembly
instructions for ...4-1

E

Exploded View
illustrations of ...7-1

F

Faults
Table Listing of ...A-1
Flowchart
Operational ...2-17
operational ...2-17

I

Installation
Process for ...2-1
iVIZION Unit
photo of a ...1-1

M

Model Descriptions
Product Number Specifications of ...1-2

N

Navigation
within manual
procedure for ...1-1

P

PC Calibration
Preparation for ...6-7
Performance Testing
instructions for ...6-1
Pin Assignments
Table listing primary connector ...2-4, 2-5, 2-6, 2-7, 2-8, 2-9
Precautionary Symbols
types of ...1-2
Primary Features
iVIZION
iVIZION Product Series of ...1-4

S

Safety
pictographs indicating
1 to 3 symbols inside boxed area ...1-1
Software Descriptions
Product Number Specifications of ...1-2
Special Notes
italic text highlights
finger points to ...1-1
Specifications
Electrical
information regarding ...1-7, 1-9
Environmental
information regarding ...1-7, 1-8
Structural
information regarding ...1-7
Structural
information regarding ...1-9
Technical
information regarding ...1-6, 1-8
Steps
sequential numbering of ...1-1
System Wiring Diagram
Schematic diagram of ...5-1

T**Tool Requirements**

workbench ...4-1

Troubleshooting

Instructions for ...A-1

Type Descriptions

Product Number Specifications of ...1-2

W**Wiring Diagram**

system & individual primary part ...5-1

iVIZION™ Series

Next-Generation Banknote Acceptor Unit

Appendix A

A TROUBLESHOOTING

This section provides Troubleshooting instructions for the iVIZION™ Series Next-Generation Banknote Acceptor Unit (iVIZION). This section contains the following information:

- Introduction
- Troubleshooting Overview
- Malfunction LED Error Codes
- LED Indication Conditions
- Error, Jam and Reject Code Tables
- Maintenance Equipment.

Introduction

Most Banknote Acceptor failures are due to minor causes. Before replacing any parts, make sure that all assembly and circuit board connectors are properly fitted and the harness is properly connected.

Lower than expected Banknote acceptance by the validation portion of the iVIZION is often caused when dust or debris adheres to the Identification Sensor, or Transport Belt.

Clean the Acceptor section first, then observe the operating state of the Acceptor in detail when re-initializing power. This observation is important in locating any failure causes and the possible fault area.

If the Acceptor Head has to be repaired by disassembling it, always re-calibrate the Sensors following repair.

Perform all repairs by referring to Calibration and Testing in Section 6 of this manual, and Disassembly/Reassembly in Section 4 of this manual.

Troubleshooting Overview

The iVIZION allows the operator to perform fault diagnosis by checking various fault Table listings against the symptom, and survey the cause(s) of any failure occurrences during the process.

After determining the cause of the failure, repair the iVIZION Unit by replacing any appropriate parts, execute the Performance Test to confirm iVIZION performance, then perform a Sensor re-adjustment.

Malfunction LED Error Codes

The iVIZION contains two (2) Front Panel Indicators (e.g., a Green Power LED and a Status LED that exhibits four (4) colors).

The Power LED always lights a Green Color when power is applied to the iVIZION Unit.

The Status LED lights solid or flashes one combination of four (4) Colors when errors, Banknote jams or a reject occurs. The iVIZION Status, Error Codes, Banknote Jam Codes or Banknote Reject Codes are indicated by the number and/or Color of the Status LED solid or flashing light Color conditions.

LED Indication Conditions

Table A-1 lists the Green Power ON LED and the various Four (4) Color LED Status/Error Code indications for the iVIZION Unit.

Table A-1 LED Code Condition

Symptoms	Power ON LED	Status LED	Causes and Solutions
Normal Condition	Lit Green	Extinguished (Out)	The iVIZION is set-up correctly (Stand-by).
Initializing		Blue Flashes	The iVIZION is initializing.
Downloading		Red Lit	The iVIZION is performing a download.
		Green Lit	
Near Full Detection		Yellow Lit	The iVIZION has detected a Nearly-full Cash Box Condition.
Test Mode		Blue Lit	The iVIZION status is in a "Performance Test Mode" (Stand-by).
Error		Red Flashes	The iVIZION has an error condition (See Table A-2 LED Error Codes).
Banknote Jam		Yellow Flashes	The iVIZION has a jammed Banknote (See Table A-3 Jam LED Flash Error Codes).
Reject		Green Flashes	The iVIZION has a Reject error condition (See Table A-4 Banknote LED Reject Codes).
ICB		Blue Flashes	ICB Error Condition (See Table A-2 LED Error Codes).

Table A-1 LED Code Condition (Continued)

Symptoms	Power ON LED	Status LED	Causes and Solutions
The iVIZION is not working	Green Extinguished (Out)	Extinguished (Out)	<p>The power is not being supplied. [Solution]</p> <ul style="list-style-type: none"> • Ensure the harnesses are connected to the Interfaces. • Ensure that the power supply working voltage and range is appropriate. • Ensure the Interface harnesses are not disconnected between the Transport Unit and the Frame Unit. • Ensure that the higher Interface Board Fuse (F1) is not blown. • Ensure that all harnesses and/or connectors are on the Control CPU Board.

Error, Jam and Reject Code Tables

The Status LED indicates various color combinations or solid/flash lighting conditions when errors listed in Table A-2, Table A-3 and Table A-4 occur. Identify the causes and solution for these indications from each Table's list and ensure that the relative assemblies are properly connected and/or harnessed, and that all of the Unit's Sensors are clean.

LED Error Codes

Table A-2 lists the various LED Flash Error Code causes & solutions.

Table A-2 LED Error Codes

LED Color	Status LED		Causes and Solutions
	Flash Sequence	Errors	
Red	1	Stacker Full	<p>Detected a Stacker Full Condition. [Solution] Retrieving the Banknotes from the Cash Box. [Relative Parts] Full Sensor: Validation CPU Board PL1, PT2, CN2 or Control CPU Board CN4.</p>
	2	Communication Error between CPU Boards	<p>Abnormal communication error between the Control CPU Board and the Validation CPU Board detected. [Solution] Ensure that all of the connectors on the Control CPU Board and the Validation CPU Board are properly connected.</p>
	3	Sensor Adjustment Error	<p>Abnormal Sensor adjustment detected on the Control CPU Board and the Validation CPU Board. [Solution] Perform a Sensor Adjustment of the Acceptor Unit.</p>
	4	Speed Error	<p>Abnormal Transport Speed Adjustment detected. [Solution] Ensure that no foreign objects are adhering to the Sensors. [Relative Parts] FEED Motor: Interrupter Board CN1 or Control CPU Board CN1.</p>
	5	E2P Error (no Sensor adjustment)	<p>Replaced the Acceptor Unit without performing a Sensor Adjustment. [Solution] Perform a Acceptor Unit Sensor Adjustment.</p>
	6	Transport Error	<p>Motor locked while transporting or stacking a Banknote. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Transport. [Relative Parts] FEED Motor: Interrupter Board CN1 or Control CPU Board CN1.</p>
	7	Reject Error	<p>Motor Locked while rejecting a Banknote. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Transport. [Relative Parts] FEED Motor: Interrupter Board CN1 or Control CPU Board CN1.</p>
	8	Stacker Error (Pusher Plate Movement)	<p>Motor locked while stacking (Pusher Plate movement) Banknote. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Transport. [Relative Parts] STACK Motor: Interrupter Board CN1 or Control CPU Board CN1.</p>
	9	Pusher Plate Position Error	<p>Did not detect the Position Sensor while moving the Pusher Plate. [Solution] Ensure that the Transport Unit and/or the Cash Box are properly Seated. Ensure that a foreign object and/or Banknote is not adhering to the Transport. [Relative Parts] Home Position Sensor: HP Sensor Board LED, PT1, C1/High I/F Board CN5, CN1, CN3 or Control CPU Board CN3 STACK Motor: Interrupter Board CN1 or Control CPU Board CN1.</p>

Table A-2 LED Error Codes (Continued)

LED Color	Status LED		Causes and Solutions
	Flash Sequence	Errors	
Red	10	No Cash Box	The Cash Box is not seated. [Solution] Ensure that the Cash Box is properly seated. [Relative Parts] Box Sensor: Validation CPU Board PL4, PT3, PT4, CN2 or Control CPU Board CN4.
	11	No Acceptor Head	The Acceptor Unit's Access Cover is not locked in place. [Solution] Ensure that the Acceptor Unit's Access Cover is properly locked down.
	12	Anti-Strings Error	Fraud detected. [Solution] Ensure that no fraud condition exists such as anti-stringing.
	13	Reserved	Reserved
	14	Damaged Board	An IC is malfunctioning. [Solution] The Control CPU Board or the Validation CPU Board may be damaged. Replace the Circuit Boards if necessary. [Relative Parts] Control CPU or Validation CPU.
	15	ROM/RAM Error	ROM or RAM is malfunctioning. [Solution] The Control CPU Board or the Validation CPU Board has performed abnormally. Replace the Circuit Boards if necessary. [Relative Parts] Control CPU or Validation CPU.
Blue	1	Reserved	Reserved
	2	ICB Function Error	The ICB Function Setting is incorrect. [Solution] Confirm that ICB is Enabled and the Cash Box has been initialized when using the ICB Function. Confirm that ICB is Disabled and the Cash Box has been inhibited when the ICB function is not being used. [Relative Parts] RFID Module: Validation CPU Board CN3, CN2 or Control CPU Board CN4.
	3	ICB R/W Error	ICB unable to communicate. [Solution] Confirm that the RFID Transmitter and Module in the Cash Box perform properly. [Relative Parts] RFID Module: Validation CPU Board CN3, CN2 or Control CPU Board CN4.
	4	ICB Data Error	ICB Data is incorrect. [Solution] Replace the Cash Box with a cleared Cash Box. [Relative Parts] RFID Module: Validation CPU Board CN3, CN2 or Control CPU Board CN4.
	5	ICB Number Error	The Game Machine number is different. [Solution] Replace the Cash Box with a cleared Cash Box or reinstall the Cash Box assigned to this machine number. [Relative Parts] RFID Module: Validation CPU Board CN3, CN2 or Control CPU Board CN4.
	6	ICB Initialize Error	The Cash Box has not been initialized. [Solution] Replace the Cash Box with a cleared Cash Box [Relative Parts] RFID Module: Validation CPU Board CN3, CN2 or Control CPU Board CN4.
	7	Reserved	Reserved
	8	Reserved	Reserved
	9	Reserved	Reserved
	10	Reserved	Reserved
	11	Reserved	Reserved
	12	Reserved	Reserved
	13	Reserved	Reserved
	14	Reserved	Reserved
	15	Reserved	Reserved

Jam Error Codes

Table A-3 lists the various LED Jam Flash Code causes & solutions.

Table A-3 Jam LED Flash Error Codes

LED Color	Status LED		Causes and Solutions
	Flash Sequence	Errors	
Yellow	1	Reserved	Reserved
	2	Entrance Sensor Jam	A Banknote jam occurred near the Entrance Sensor [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Transport. [Relative Parts] Entrance Sensor: Sensor Board LED1, PT1, CN1, or Validation CPU Board CN7.
	3	CIS Sensor Jam	Banknote jam occurred near the CIS Sensor. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Transport. [Relative Parts] CIS Sensor (Upper): Sensor Transfer Board CN4, CN1, CN2, Sensor Board CN2, CN3, CN1 or Validation CPU Board CN7. Lower CIS Sensor: Sensor Board CN5, CN1 or Validation CPU Board CN7.
	4	Exit Sensor Jam	Banknote jam occurred near the Exit Sensor. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Transport. [Relative Parts] Exit Sensor: Sensor Board LED2, PT1, CN1 or Validation CPU Board CN7.
	5	Feed-in Sensor Jam	Banknote jam occurred near the Feed-in Sensor. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Transport. [Relative Parts] Feed-in Sensor: High I/F Board LED1, PT1, CN3/ or Control CPU Board CN3.
	6	Feed-out Sensor Jam	Banknote jam occurred near the Feed-out Sensor. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Transport. [Relative Parts] Feed-out Sensor: Validation CPU Board PL3, PT1, CN2 or Control CPU Board CN4.
	7	Cash Box Inside Jam	Banknote jam occurred at the Cash Box. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Transport.
	8	Reserved	Reserved
	9	Reserved	Reserved
	10	Reserved	Reserved
	11	Reserved	Reserved
	12	Reserved	Reserved
	13	Reserved	Reserved
	14	Reserved	Reserved
	15	Reserved	Reserved

Banknote Reject Error Code

Table A-4 is the Banknote's LED Reject Error Flash Code causes & solutions.

Table A-4 Banknote LED Reject Codes

LED Color	Status LED		Causes and Solutions
	Flash Sequence	Errors	
Lit Green	1	Banknote Insertion Error	Banknote is rejected by a skew detection. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Acceptor Unit Sensors. Perform adjustment of the Acceptor Unit Sensors if necessary.
	2	UV Sensor Error	Banknote is rejected by the UV Sensor process. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Acceptor Unit Sensors. Perform adjustment of the Acceptor Unit Sensors if necessary.
	3	Banknote remaining Error (Head Section)	Banknote is rejected by detecting a Banknote remaining in the Acceptor Unit. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Acceptor Unit Sensors. Perform adjustment of the Acceptor Unit Sensors if necessary.
	4	Adjustment Error/ Diameter Error	Banknote is rejected by the Validation Sensing process. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Acceptor Unit Sensors. Perform adjustment of the Acceptor Unit Sensors if necessary.
	5	Transport Time-Out Error	Transport timing is incorrect. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the path near the Transport Path Sensors.
	6	Denomination Error	Banknote is rejected by an incorrect denomination validation process. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Acceptor Unit Sensors. Perform adjustment of the Acceptor Unit Sensors if necessary.
	7	Photo Pattern Error 1	Banknote is rejected by the Validation Pattern process. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Acceptor Unit Sensors. Perform adjustment of the Acceptor Unit Sensors if necessary.
	8	Photo Level Error	Banknote is rejected by the Transmissive Level Validation process. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Acceptor Unit Sensors. Perform adjustment of the Acceptor Unit Sensors if necessary.
	9	INHIBIT Error	Banknote is rejected by the INHIBIT Setting (banknote acceptance inhibit). Command for Escrow has not been sent. [Solution] Ensure that the active state of a Host Machine or an iVIZION DIP Switch INHIBIT setting is properly set.
	10	Reject Request	Banknote is rejected by Host Machine request. [Solution] Ensure the INHIBIT setting of the Host Machine is correct.
	11	Ticket Error	Ticket Upside-down. [Solution] Ensure that the Ticket Barcode is facing up when inserted.
	12	Transport Overrun Error (Stacker Part)	Banknote is rejected by detecting a Banknote remaining in the Transport Unit. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Transport Unit Sensors.
	13	Banknote Length Error	Banknote is rejected because of a length longer than the acceptable length. [Solution] Ensure that the Banknote is a proper length
	14	Photo Pattern Error 2	Banknote is rejected by the Validation Pattern process. [Solution] Ensure that a foreign object and/or Banknote is not adhering to the Acceptor Unit Sensors. Perform an adjustment of the Acceptor Unit Sensors if necessary.
	15	Authentic Banknote Identify Error	Banknote is rejected by the authentic Banknote Validation process. [Solution] Ensure a foreign object and/or Banknote is not adhering to the Acceptor Unit Sensors. Perform adjustment of the Acceptor Unit Sensors if necessary.

Barcode Coupon Reject Error Code

Table A-5 is the Barcode Coupon's LED Reject Error Flash Code causes & solutions.

Table A-5 Barcode Coupon LED Reject Codes

LED Color	Status LED		Causes and Solutions
	Flash Sequence	Errors	
Lit Green	1	Unconfigured Barcode Coupon	Barcode Coupon information is not set, or a Barcode Coupon cannot be detected. [Solution] Check that a proper Barcode Coupon is used and the Coupon is not damaged or dirty.
	2	Format Error	The format does not meet the Barcode Coupon's specification. [Solution] Check that a proper Barcode Coupon is used and the Coupon is not damaged or dirty, or a Barcode Coupon is properly printed.
	3	Reserved	
	4	Start/Stop Bit Detection Error	A start or stop bit of a Barcode Coupon cannot be detected. [Solution] Check that a proper Barcode Coupon is used and the Coupon is not damaged or dirty, or a Barcode Coupon is properly printed. Clean or adjust the following Sensor. [Relative Parts] CIS, Connect Gear, Belt, Motor Unit. If the error is not resolved, change the above related part or parts.
	5	Character Detection Error	A Barcode Coupon's characters cannot be detect. [Solution] Check that a proper Barcode Coupon is used and the Coupon is not damaged or dirty, or a Barcode Coupon is properly printed. Clean or adjust the following Sensor. [Relative Parts] CIS, Connect Gear, Belt, Motor Unit. If the error is not resolved, change the above related part or parts.
	6	Reserved	
	7	Reserved	
	8	Double Insertion Error	Two or more Barcode Coupons are inserted. [Solution] Insert a single Barcode Coupon.
	9	Reserved	
	10	Reserved	
	11	Upside-Down Insertion	A Barcode Coupon is inserted upside-down. [Solution] Insert a Barcode Coupon in the proper direction
	12	Reserved	
	13	Reserved	
	14	ICB Enable/Disable Barcode Coupon read and/or Setting Error	ICB Enable/Disable Setting or Machine Number Ticket Setting doesn't match its setting, or a Barcode Coupon's printing was abnormal. [Solution] Check that a proper Barcode Coupon is used and the Coupon is not damaged or dirty.
	15	Reserved	

Calibration Error Code

Table A-6 is the Calibration Error Code causes & solutions.

Table A-6 Calibration Error Codes

Sensor	Code	Causes and Solutions
Acceptor Head, Entrance Sensor	0x21xx	Acceptor Head, Entrance Sensor [Solution] Inspect and clean the Entrance Sensor [Relative Parts] Entrance Sensor
Acceptor Head, Exit Sensor	0x22xx	Acceptor Head, Exit Sensor [Solution] Inspect and clean the Exit Sensor [Relative Parts] Exit Sensor
Upper UV Sensor	0x23xx	UV Sensor, Upper [Solution] Inspect and clean the Upper UV Sensor [Relative Parts] Upper UV Sensor
Lower UV Sensor	0x24xx	UV Sensor, Lower [Solution] Inspect and clean the Lower UV Sensor, check connections [Relative Parts] UV Sensor Lower
Stacker Home Sensor	0x31xx	Stacker Home Sensor [Solution] Inspect and clean the Stacker Home Sensor, check connections [Relative Parts] Stacker Home Sensor
Feed-Out Sensor, Transport	0x32xx	Transport Feed-out Sensor [Solution] Inspect and clean the Transport Feed-Out Sensor [Relative Parts] Validation CPU Board, Light Pipe (Right) or (Left)
Feed-In Sensor, Transport	0x33xx	Transport Feed-In Sensor [Solution] Inspect and clean the Transport Feed-In Sensor, check connections [Relative Parts] Transport Feed-In Sensor
Nearly Full Sensor, Cash Box	0x34xx	Nearly Full Sensor [Solution] Inspect and clean the Cash Box Nearly Full Sensor, Transport Cash Box lens [Relative Parts] Validation CPU Board, Light Guide B
Cash Box Sensor	0x35xx	Box Sensor Present Sensor [Solution] Inspect and clean the Cash Box Sensor lens [Relative Parts] Validation CPU Board, Light Guide C
E2PROM	0x40xx	E2PROM Write Error [Solution] Inspect CPU Boards, connections [Relative Parts] Validation CPU Board
RFID	0x50xx	RFID Confirmation Error [Solution] Inspect and check connections for RFID module. Verify RFID Tag in the Cash Box [Relative Parts] RFID Module, RFID Cash Box Tag
CIS	0x10xx	Contact Image Sensor, Upper or Lower [Solution] Inspect and clean the CIS Sensors, check connections [Relative Parts] CIS Sensor, Upper Guide Lower Guide (85mm) or (72mm)

Maintenance Equipment

This portion provides product information for the iVIZION Maintenance Equipment.

iVIZION Maintenance Equipment

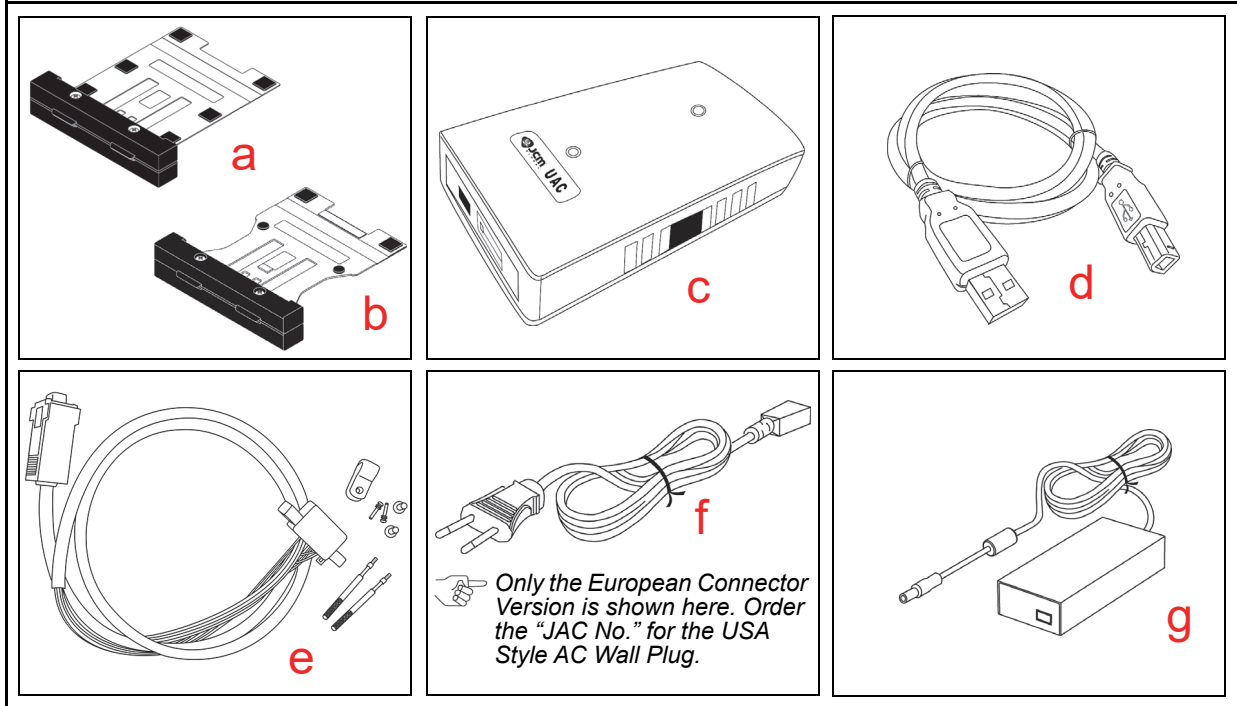


Figure A-1 Additional Maintenance Equipment Requirements

Table A-7 Additional Maintenance Equipment Parts List

Ltr.	EDP No.*	JAC No.	Description	Qty.	Remark
a	201544	← Use EDP#	Reference Paper (White: KS-072 Std) [†]	1	
b	211266	← Use EDP#	Reference Paper (White: KS-089 Std)	1	For use with Banknote Guide 69 or 72
c	G00205	-	UAC Module	1	
d	G00230	-	UAC USB Cable	1	
e	G00262	-	UAC/iVIZION Adapter Harness	1	
f	G00213	-	Power Cord (USA or Euro)	1	For UAC
g	G00286	-	AC Power Adapter		For UAC
-	-	451-000127R	CUI Power Supply	1	Provide 12VDC at 5A
-	-	302-100002R	Cable, Power	1	
-	-	40i-000001R	iVIZION Harness	1	

*. A Product EDP Number that begins with a "G" is a Product developed by JCM-E Germany.

†. Carefully replace the used Reference Paper back into its protective Shipping Carton following each calibration use ("Reference Paper Use Precautions" on page 1-4 for further detailed user instructions).

Reference Paper Handling

All JCM Reference Paper should be handled as follows:

1. Do not allow the Reference Papers to endure high temperatures and/or high humidity environments.
2. Store unused Reference Papers in their original Shipping Carton to avoid exposing them to direct Sunlight and/or bright indoor light. Ensure that the Reference Papers being stored are not damaged as they are replaced into their shipping carton.
3. Do not use Reference Paper containing damaged areas that are worn, dirty, wrinkled, distorted and/or discolored.
4. Use new Reference Paper for every 400 Units being calibrated. Incorrect calibration errors may occur when using Reference Paper that has been used for calibrating more than 400 Units.

iVIZION™ Series

Next-Generation Banknote Acceptor Unit

Appendix B

B GLOSSARY

A

1 Acceptor

term used to identify a number of devices used to validate and accept Banknotes, then communicate the acceptance results to a host machine ... 1-1, 2-1, 4-1, 5-1, 6-1, 7-1, A-1

B

2 Bezel

a removable Plastic Assembly attached to the front of the Banknote Insertion Slot of a iVIZION™ Unit ... 1-2

C

3 Calibration

a process performed on electronic equipment which ensures that all circuits are properly aligned and operating at optimum levels. For iVIZION™, calibration is accomplished using a software based program which checks and sets the operational reference levels for Sensors. This helps to ensure that the Unit operates with the highest Banknote acceptance rate possible. Calibration is recommended whenever the CPU Board, or one of the Sensor Boards are replaced ... 6-6

4 ccTalk

a Serial based Communication Protocol commonly used in control, electronic payment, and vending systems. Developed by Money Controls Ltd., the format enjoys widespread use throughout Europe. cc-Talk is supported communications format in the iVIZION™ Unit ... 2-7

5 Checksum

a numerical value assigned to a data file or block of data (usually expressed in Hexadecimal notation). Checksum values are used to verify that the contents of a data file are not corrupted in any way during transmission or encryption. The Checksum values of both the original and duplicate files are compared to each other. If the values do not match then it is recommend that the file be copied (uploaded) again until the Checksum do match. ... 6-4

6 CIS

an acronym for Contact Image Sensor. This type of image Sensor is able to scan every portion of a Banknotes surface as it passes over it ... 4-9

7 CPU

an acronym for Central Processing Unit ... 4-1

D**8 DIP Switch Block**

Dual Inline Packaged Switch Block – a printed circuit board mountable two-position slide switch package containing up to 16 individual switches ... 2-3

F**9 FFC**

an acronym for Flat Flexible Cable. This type of Cable contains printed circuit traces in it, and is generally used to interconnect and distribute signal information between various Printed Circuit Boards ... 4-6

10 FG PLT

an acronym for Frame Grounding PLaTe ... 2-1

11 FPC

an acronym for Flexible Printed Circuit. This type of Circuit Card/Cable contains printed circuit traces on each side of it, and is generally used to interconnect and distribute signal information between two closely placed Printed Circuit Boards ... 4-7

I**12 ID Sticker**

another name for the Product Identification Label located on the right side of the iVIZION™ Cabinet Frame ... 6-7

J**13 JCM Tool Suite Standard Edition**

a PC Application Program that includes Sub-routine Programs for Downloading a File, Calibrating Sensors, examining Performance Metrics and testing Validator Functions ... 6-1

14 JPL

an acronym for JCM Private Line to identify the Connector for activating an attached Sentry-2 Bezel Option ... 1-2, 7-47

L**15 LED**

an acronym for Light Emitting Diode. An LED is Semiconductor Device which turned on, emits a signal output in the visible light range. Available in a variety of colors, LEDs are cost effective and are commonly used as Indicator Lights in a variety of equipment devices. LEDs are also available in the invisible light range (i.e., ultraviolet, near-infrared etc.) making them useful as operational indicators for a variety of electronic equipment and applications, such as Banknote Validation Circuit in the iVIZION™ Unit ... 1-6

16 Limited Power Source

an electronic circuit designed to prevent damage to a Power Supply in the event a short circuit occurs ... 1-3

P**17 Photo-Coupler**

a method of increasing safety to both the equipment and personnel by isolating and routing transmitted data signals via using a Light Emitting Diode (LED) and Photosensitive Transistor combination circuit in various electronic equipment ... 2-5

18 Pictograph

small internationally recognized safety and attention symbols placed to the left of Notes, Cautions and Warnings throughout a JCM Maintenance Manual ... 1-1

19 Precautions

Special instructions and warnings that appear in JCM Maintenance Manuals. Precautions are intended to promote personal safety and prevent damage to equipment when working with the applicable JCM Product ... 1-2

R**20 Reference Paper**

specially coated/colored paper strips which are inserted into a Banknote Validator when performing iVIZION™ Unit Calibration. Reference Paper is used to help set minimum and maximum threshold detection levels when adjusting the photo-optical Sensors in the unit for optimum performance ... 6-6

21 RFID

an acronym for Radio Frequency IDentification ... 1-2

22 RS232C

a common serial data communication standard protocol ... 2-6

S**23 Sensor**

a Photo Sensitive Device and LED combination designed to detect timing and movement events ... 2-10

T**24 Timing Belt**

Rubberized Belts used to transport Banknote inside the Acceptor ... 4-1

V**25 Validation**

in Banknote Validators, identifies the process of drawing a Banknote into the Unit and then uses various Sensors to read and determine the authenticity of the Banknote based on the comparison of collected reading to a set of reference data stored in memory ... 1-3

THIS PAGE INTENTIONALLY LEFT BLANK

iVIZION™ Series Next-Generation Banknote Acceptor Unit



a
RoHS
Compliant
Product



Contains
RoHS
Compliant
Components

Issue #4074-SME-01-07